

TOSHIBA

DIGITAL TRANSISTOR INVERTER
LOW ACOUSTICAL NOISE SERIES

Q-FLOWSAVER II

OPERATION MANUAL

October, 1995
Part #36933-000



NOTE

The instructions contained in this manual are not intended to cover all of the details or variations in equipment, nor to provide for every possible contingency to be met in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the local Toshiba sales office.

The contents of this instruction manual shall not become a part of or modify any prior or existing agreement, commitment, or relationship. The sales contract contains the entire obligation of Toshiba International Corporation's Inverter Division. The warranty contained in the contract between the parties is the sole warranty of Toshiba International Corporation's Inverter Division and any statements contained herein do not create new warranties or modify the existing warranty.

Any electrical or mechanical modification to this equipment, without prior written consent of Toshiba International Corporation, will void all warranties and may void UL listing and/or CSA certification.

AC ADJUSTABLE SPEED DRIVE

Please complete the Extended Warranty Card supplied with this inverter and return it by prepaid mail to Toshiba. This activates the extended warranty. If additional information or technical assistance is required call Toshiba's marketing department toll free at (800) 231-1412 or write to: Toshiba International Corporation, 13131 W. Little York Road, Houston, TX 77041-9990.

Please complete the following information for your records and to remain within this equipment manual:

Model Number: _____

Serial Number: _____

Date of Installation: _____

Inspected By: _____

Reference Number: _____

INTRODUCTION

Thank you for purchasing the **Q-FLOWSAVER II**. This adjustable frequency solid state AC drive features low acoustical noise, pulse width modulation, digital control, and user programmability. The very latest microprocessor and insulated gate bipolar transistor technology is used. This, combined with Toshiba's high performance software, gives unparalleled motor control and reliability.

It is the intent of this operation manual to provide a guide for **safely** installing, operating, and maintaining the drive. This operation manual contains a section of general safety instructions and is marked throughout with warning symbols. **Read this operation manual** thoroughly before installation and operation of this electrical equipment.

All safety warnings must be followed to ensure personal safety.

Follow all precautions to attain proper equipment performance and longevity.

The manual is divided into major sections of interest. All of the initial inspection, storage, installation and operating precautions can be found in Sections 1 and 2 with Section 3 and 4 containing all of the standard specifications and information on grounding, wiring, and cable sizes.

Section 5 contains information about the printed circuit board layouts, connectors, wiring jumpers, and connector functions.

Section 6 shows layout information about the keypad panel and readouts.

Sections 7, 8, 9, 10, and 11 are devoted to the functional parameter groups, functional parameter access and operation, status monitoring, and input and output terminal functions.

Section 12 contains a major component list with recommended spare parts along with a problem sheet showing the necessary information for after sales service.

Section 13 contains shipping weights, dimensional data, component layouts, and schematics.

We hope that you find this operation manual informative and easy to use. If additional information or technical assistance is needed, please call toll free (800) 231-1412 or write to: Toshiba International Corporation, 13131 W. Little York Road, Houston, TX 77041-9990.

Again thank you for the purchase of this product.

TOSHIBA INTERNATIONAL CORPORATION

GENERAL SAFETY INSTRUCTIONS

Warnings in this manual appear in either of two ways:

- 1) *Danger warnings* - The danger warning symbol is an exclamation mark enclosed in a triangle which precedes the 3/16" high letters spelling the word "DANGER". The Danger warning symbol is used to indicate situations, locations, and conditions that can cause serious injury or death:



- 2) *Caution warnings* - The caution warning symbol is an exclamation mark enclosed in a triangle which precedes the 3/16" high letters spelling the word "CAUTION". The Caution warning symbol is used to indicate situations and conditions that can cause operator injury and/or equipment damage:



Other warning symbols may appear along with the *Danger* and *Caution* symbol and are used to specify special hazards. These warnings describe particular areas where special care and/or procedures are required in order to prevent serious injury and possible death:

- 1) *Electrical warnings* - The electrical warning symbol is a lightning bolt mark enclosed in a triangle. The Electrical warning symbol is used to indicate high voltage locations and conditions that may cause serious injury or death if the proper precautions are not observed:



- 2) *Explosion warnings* - The explosion warning symbol is an explosion mark enclosed in a triangle. The Explosion warning symbol is used to indicate locations and conditions where molten, exploding parts may cause serious injury or death if the proper precautions are not observed:



CONTENTS

<u>SECTION</u>	<u>PAGE</u>
Disclaimer	i
Introduction	ii
General Safety Instructions	iii
Contents	iv-vi
1.0 Inspection/Storage/Disposal	1-1
1.1 Inspection of the New Unit	1-1
1.2 Storage	1-1
1.3 Disposal	1-1
2.0 Safety in Installation and Operation	2-1
2.1 Installation Precautions	2-1
2.2 Operating Precautions	2-2
2.3 Confirmation of Wiring	2-4
2.4 Start-up and Test	2-4
3.0 Standard Specifications	3-1
4.0 Wiring	4-1
4.1 Simple Connection Diagrams	4-1
4.2 Selection of Main Circuit Wiring Equipment and Standard Cable Sizes	4-3
4.3 Grounding	4-4
5.0 PWB Layout, Jumpers, and Terminal Connections	5-1
5.1 Control/Driver Board for Q2-2035 through Q2-2330	5-1
5.2 Control/Driver Board for Q2-4055 through Q2-4330	5-2
5.3 Control Board for Q2-4400 through Q2-420K	5-3
5.4 Driver Board for Q2-4400 through Q2-420K	5-4
5.5 Jumper Details	5-5
5.6 Control/Driver Board Terminal Block Details	5-5
5.7 Jumper/Terminal Connections and Functions	5-6
5.8 Terminal Connections and Functions	5-7

CONTENTS (cont'd)

<u>SECTION</u>	<u>PAGE</u>
6.0 Operating Panel	6-1
6.1 Operating Panel Layout	6-1
6.2 Operating Panel Keys and Functions	6-1
6.3 LED Display and Display Monitoring	6-3
6.4 Display Alphanumerics	6-4
7.0 Parameter Groups	7-1
7.1 Definitions of Setup and Group Parameters	7-1
7.2 System Parameters Adjustment Range and Factory Settings	7-2
8.0 System Status Monitoring	8-1
8.1 Normal Status Monitoring	8-1
8.2 Automatic Status Monitoring	8-2
8.3 Tripped Status Monitoring	8-3
8.4 Input Terminal Status Code	8-4
8.5 Output Terminal Status Code	8-5
9.0 Keypad Operating Functions	9-1
9.1 Setup Parameters	9-1
9.2 User Group Parameters	9-3
9.3 Communication Group Parameters	9-5
9.4 Jump Frequency Group Parameters	9-7
9.5 Display Group Parameters	9-8
9.6 Speed Group Parameters	9-9
9.7 Pattern Frequency Group Parameters	9-10
9.8 Emergency Stop	9-12
10.0 Input Terminal Operating Functions	10-1
10.1 Input Terminal Selection Function	10-1
10.2 Starting/Stopping-Remote Control	10-2
10.3 Emergency Stop From a Remote Location	10-2
10.4 Remote Control Frequency Setting	10-2
10.5 Jog	10-3
10.6 Resetting After a Trip	10-3
10.7 Pattern Run	10-4
10.8 PID Set Point Control	10-5

CONTENTS (cont'd)

<u>SECTION</u>	<u>PAGE</u>
11.0 Output Terminal Operating Functions	11-1
11.1 Selectable Outputs	11-1
11.2 Inverter to Relay/PC Connections	11-2
11.3 Fault Detection Output Terminals	11-2
11.4 Calibration of Remote Meters	11-3
12.0 Spare Parts List/After Sales Service.....	12-1
12.1 Requesting After Sales Service	12-1
12.2 Recommended Spare Parts	12-2
12.3 Parts Service Life.....	12-5
13.0 Dimensions/Weights/Component Layouts/Schematics	13-1
13.1 Basic Dimensions	13-1
13.2 Operating Panel Assembly	13-3
13.3 Shipping Weights	13-4
13.4 Component Layouts.....	13-5
13.5 Schematics	13-14

1.0 Inspection/Storage

1.1 Inspection of the New Unit

Upon receipt of the Q-FLOWSAVER II, a careful inspection for shipping damage should be made. After uncrating:

- 1) Check the unit for loose, broken, bent or otherwise damaged parts due to shipping.
- 2) Check to see that the rated capacity and the model number specified on the nameplate conform to the order specifications.

1.2 Storage


- 1) Store in a well ventilated location and preferably in the in the original carton if the inverter will not be used immediately after purchase.
- 2) Avoid storage in locations with extreme temperatures, high humidity, dust, or metal particles.

1.3 Disposal

Please contact your state environmental agency for details on disposal of electrical components and packaging in your particular area.

2.0 Safety in Installation and Operation

2.1 Installation Precautions CAUTION

- 1) Install in a secure and upright position in a well ventilated location where the ambient temperature is between -10 deg C and 40 deg C (up to 50 deg C when not enclosed in a cabinet). Do not allow direct sunlight to shine on the unit or obstruct ventilating openings.
- 2) Allow a clearance space of 4 inches (10 cm) for the top and bottom and 2 inches (5 cm) on both sides. This space will insure adequate ventilation.
- 3) Avoid installation in areas where vibration, heat, humidity, dust, steel particles, or sources of electrical noise are present.
- 4) Adequate working space should be provided for adjustment, inspection and maintenance.
- 5) Adequate lighting should be available for troubleshooting and maintenance.
- 6) A noncombustible insulating floor or mat should be provided in the area immediately surrounding the electrical system where maintenance is required.
- 7) **Use separate metal conduits for routing the input power, output power, and control circuits.**
- 8)  Always ground the unit to prevent electrical shock and to help reduce electrical noise. A separate ground cable should be run inside of the conduit with the input, output, and control power cables. **The metal of the conduit is not an acceptable ground.**
- 9) Connect three phase power of the correct voltage to input terminals L1, L2, L3 (R, S, T) and connect three phase power from output terminals T1, T2, T3 (U, V, W) to a motor of the correct voltage and type for the application. Size the conductors in accordance with Article 310 of the National Electrical Code.
- 10) If conductors of a smaller than recommended size are used in parallel to share current then the conductors should be kept together in as sets i.e. U1, V1, W1 in one conduit and U2, V2, W2 in another. National and local electrical codes should be checked for possible cable derating factors if more than three power conductors are run in the same conduit.
- 11) Install a molded case circuit breaker (MCCB) between the power source and the inverter. Size the MCCB to clear the available fault current of the power source.
- 12) Installation of inverter systems should conform to the *National Electrical Code*, regulations of the *Occupational Safety and Health Administration*, all national codes, and all regional or industry codes and standards.
- 13) If a secondary Magnetic Contactor (MC) is used between the inverter output and the load, it should be interlocked so the ST-CC terminals are disconnected before the output contactor is opened. If the output contactor is used for bypass operation, it must also be interlocked so that commercial power is never applied to the inverter output terminals (U,V,W).

2.2 Operating Precautions CAUTION

- 1) Do not apply power and attempt to use the inverter until this entire operation manual has been carefully reviewed.
- 2) The input voltage must be within +/-10% of the specified input voltage. Voltages outside of this permissible tolerance range may cause internal protection devices to turn on or can cause damage to the unit. Also, the input frequency should be within +/-2 Hz of the specified input frequency.
- 3) Do not use this inverter with a motor whose rated input is greater than the rated inverter output.
- 4) This inverter is designed to operate NEMA B motors. Consult the factory before using the inverter for special applications such as an explosion proof motor or one with a repetitive type piston load.

- 5)  **DANGER**  **Do not touch any internal part with power applied to the inverter. First remove the source power and check that the charge and power LED's are out. *A hazard exists temporarily for electrical shock even if the source power is removed.***

- 6) Do not apply commercial power to the output terminals T1 (U), T2 (V), or T3 (W) even if the inverter source power is off. Disconnect the inverter from the motor before applying a test or bypass voltage to the motor.

- 7)   **Do not operate this unit with the cabinet door open.**

- 8) Use caution when setting output frequency. Overspeeding of the motor can cause serious damage to the motor and/or the driven load equipment.
- 9) Use caution when setting the acceleration and/or deceleration time. Unnecessarily short acc/dec time can cause undue stress and tripping of the drive.
- 10) Interface problems can occur when this inverter is used in conjunction with some types of process controllers. ***Signal isolation may be required to prevent controller and/or inverter damage.***

Contact Toshiba or the process controller manufacturer for further information about compatibility and signal isolation.

- 11) When operating the inverter in the PWM high carrier frequency mode (those frequencies above 12 kHz), the ***electronic thermal protection level*** function parameter [:tHr] should be changed from the factory setting of 100% to 90% (see Setup Parameters ITEM 9 page 7-2). This is to compensate for the 10% derating factor required at 16 kHz operation. Follow the general procedures for changing function parameters. Further derating may be required for cable runs of greater than 100 feet. **Contact Toshiba for more information.**
- 12) Personnel who have access to the adjustments and operation of this equipment should be familiar with these drive operating instructions and with the machinery being driven.

2.2 Operating Precautions (cont'd) CAUTION

- 13) Do not open and then re-close a secondary magnetic contactor (MC) between the inverter and the load until the inverter has been turned OFF (output frequency has dropped to zero) and the motor has stopped rotating. ***Abrupt re-application of the load while inverter is ON or motor is rotating can cause inverter damage.***
- 14) The operator of the drive equipment should be properly trained in the operation of the equipment.
- 15) ***Follow all warnings and precautions; do not exceed equipment ratings.***

2.3 Confirmation of Wiring CAUTION

Make the following final checks before applying power to the unit:


- 1) Confirm that source power is connected to terminals L1, L2, L3 (R, S, T). ***Connection of incoming source power to any other terminals will damage the inverter.***
- 2) The 3-phase source power should be within the correct voltage and frequency tolerances.
- 3) The motor leads must be connected to terminals T1, T2, T3 (U, V, W).
- 4) Make sure there are no short circuits or inadvertent grounds and tighten any loose connector terminal screws.

2.4 Start-Up and Test CAUTION

Prior to releasing an electrical drive system for regular operation after installation, the system should be given a start-up test by competent personnel. This assures correct operation of the equipment for reasons of reliable and safe performance. It is important to make arrangements for such a check and that time is allowed for it.

When power is applied for the first time the inverter will come up in the factory settings (See section 7.2). If these settings are incorrect for the application trial run then the correct settings should be programmed from the control panel before activating the run button. ***The inverter can be operated with no motor connected.*** Operation with no motor connected or use with a small trial motor is recommended for initial adjustment or for learning to adjust and operate the inverter.

2.5 Maintenance CAUTION

- 1) Periodically check the operating inverter for cleanliness.
- 2) Keep the heatsink free of dust and debris.
- 3)  Periodically check electrical connections for tightness ***(make sure power is off and locked out).***

3.0 Standard Specifications

MODEL	RATINGS							
	RATED KVA	OUTPUT CURRENT AMPS	OUTPUT VOLTAGE 3-PHASE	OVERLOAD CURRENT	MAIN CIRCUIT INPUT VOLTAGE 3-PHASE	CONTROL CIRCUIT SINGLE PHASE		
*Q2-2035	3.5	9.6	200-230V 3-PHASE (MAX OUTPUT VOLTAGE UNDER NO LOAD)	120% FOR 60 SEC. 110% CONTINUOUS	200V@50Hz or 200-230V@60Hz VOLT ±10% Hz ±2Hz	NO EXTERNAL CONTROL SOURCE REQUIRED		
*Q2-2055	5.5	15.2						
*Q2-2080	8	22						
*Q2-2110	11	28						
*Q2-2160	16	42						
*Q2-2220	22	56						
*Q2-2270	27	68						
*Q2-2330	33	84						
*Q2-4055	5.5	7.6	380-460V 3-PHASE (MAX OUTPUT VOLTAGE UNDER NO LOAD)		120% FOR 60 SEC. 110% CONTINUOUS		380V@50Hz or 400-460V@60Hz VOLT +/-10% Hz +/-2Hz	NO EXTERNAL CONTROL SOURCE REQUIRED
*Q2-4080	8	11						
*Q2-4110	11	14.5						
*Q2-4160	16	21						
*Q2-4220	22	28.5						
*Q2-4270	27	36.5						
*Q2-4330	33	40						
*Q2-4400	40	55						
*Q2-4500	50	65						
*Q2-4600	60	84						
*Q2-4800	80	104						
*Q2-410K	100	124						
**Q2-412K	125	162						
**Q2-415K	150	194						
**Q2-420K	200	240						

* This unit is UL (Underwriters Laboratories Inc.) listed and CSA (Canadian Standards Association) certified.

** This unit is UL (Underwriters Laboratories Inc.) listed and CUL (Canadian Underwriters Laboratories Inc.) listed.

3.0 Standard Specifications (cont'd)

ITEM		STANDARD SPECIFICATIONS
Control	Control Method	Sinusoidal PWM control
	Output voltage regulation	Same as power line.
	Output frequency	0.0 to 160.0 Hz (0.0 to 60 Hz setting when shipped); maximum frequency range is 30 to 160 Hz *1
	Frequency setting resolution	0.1Hz: Operating panel input; 0.03 Hz: Analog input; 0.01Hz: Input through computer interface (against a 60 Hz)
	Frequency accuracy	±0.5% (at 25°C; ±10°C) against the maximum frequency
	Voltage/frequency characteristics	Second-order nonlinear mode for variable torque. "Max voltage" frequency adjustment (25 to 160 Hz), torque boost adjustment (0 to 30 %), start-up frequency adjustment (0 to 10 Hz)
	Frequency setting signals	3k ohms potentiometer (a 1k to 10k ohms-rated potentiometer can be connected). 0 to 10 Vdc (input impedance: 30k ohms), 0 to 5 Vdc (15k ohms), 4 to 20 mAdc (250 ohms)
	Output frequency characteristics of IV terminal input signal	Can be set to an arbitrary characteristic by setting 2 points.
	Frequency jump	3-point setting; setting jump frequency and band width
	Upper/lower limit frequencies	Upper limit frequency: 0.0 Hz to maximum frequency Lower limit frequency: 0.0 Hz to upper limit frequency
PWM carrier frequency switching	Adjusted in the range of 5 kHz to 16 kHz (12 kHz setting when shipped)	
Operating functions	Acceleration/deceleration time	0.1 to 1200 seconds, switching of acceleration time 1 or 2, selection of S-shaped 1 or 2, or selection of acceleration/ deceleration patterns
	Electrical braking	DC injection braking Start-up frequency adjustment (0 to 10 Hz), braking voltage adjustment (0 to 20 %), braking time adjustment (0 to 5 seconds)
	Forward or reverse run	Forward run when F-CC closed; reverse run when R-CC closed; reverse run when both F-CC and R-CC closed; coasting stop when ST-CC open; emergency coast stop by a command from operating panel
	Jogging run	Jogging run engaged when N.O. contact is closed. (adjustment range 0.0 to 20.0 Hz)
	Multispeed run	By opening and closing different combinations of CC, SS1, SS2, and SS3, the set speed or seven preset speeds can be selected.
	Automatic fault latch reset	When a protective function is activated, the system checks main circuit devices, and attempts the restart up to 5 times (activated when shipped)
	Soft stall	Sustains a run in overload mode (set at ON when shipped)
	Automatic restart	Smoothly recovers a normal run of a free-running motor utilizing motor speed detection control.
	Programmable RUN patterns	Allows setting of 7 different patterns of automatic operation
Protection	Protective functions	Stall prevention, current limit, overcurrent, overvoltage, short-circuit at load, load-end ground fault, undervoltage, momentary power interrupt, electronic thermal overload, main circuit over-current at start-up, load-end overcurrent at start-up, cooling fin overheat, and emergency stop. Provisions for external fault signal.
	Electronic thermal characteristics	Standard motor/constant torque V/f motor switching, and electronic thermal stall prevention activating level adjustment
	Reset	Resets inverter when N.O. contact is closed.


*1 Consult the factory for applications above 80 Hz.

3.0 Standard Specifications (cont'd)

ITEM		STANDARD SPECIFICATIONS	
Display	(4) 7-segment red LED digits with colon and decimal points	Output frequency/ OFF	Frequency range 0.0 to 160 Hz and OFF state
	(4) discrete green LED's	Warning indications	Stall preventive warning, overvoltage limit warning, overload warning, power-end undervoltage warning, DC main circuit undervoltage warning, setting errors, EEPROM abnormality, and data transfer abnormality warnings
		Fault indications	Overcurrent, overvoltage, load-end ground fault, overload, armature overcurrent at start-up, load-end overcurrent at start-up, heat sink overheat.
		Data and status	Inverter status (forward/reverse run, frequency set value, output current, etc.) and each set value
		Speed scaling	An arbitrary unit (revolution speed, linear velocity or the like) as well as output frequency can be displayed by use of an arbitrary multiplication factor
		Data storage	A number is assigned to each inverter (for 0 to 31 inverters).
		(1) discrete red LED (located inside enclosure)	DC charge indicator
Output signals	Fault detection signal	One form C contact (250 AC / 30 Vdc)	
	Low speed/reach signals	Open collector output (24 Vdc, 50 mA maximum)	
	Upper limit/lower limit frequency signals	Open collector output (24 Vdc, 50 mA maximum)	
	Frequency meter output and ammeter output	Ammeter rated at 1mAdc at full scale, or voltmeter rated at 7.5 Vdc, 1mA	
Enclosure type		NEMA Type 1 (standard)	
Cooling method		Convection-cooled Q2-2035 and Q2-4055 Fan-cooled Q2-2055 thru Q2-2330 and Q2-4080 thru Q2-420K	
Color		Sherwin Williams Precision Tan #F63H12	
Service conditions	Service environment	Indoor, altitude 1000m (3,300 ft) maximum. Must not be exposed to direct sunlight, or subjected to corrosive or explosive gas or mists.	
	Ambient temperature	From -10 to 40°C (contact Toshiba about operation above 40°C)	
	Relative humidity	95 % maximum (no condensation allowed)	
	Vibration	Acceleration at 0.5 G maximum (20 to 50 Hz), amplitude at 0.1 mm maximum (50 to 100 Hz)	

4.0 Wiring
4.1 Simple Connection Diagrams

**Q-FLOWSAVER II
 STANDARD CONNECTION
 MODEL 2035 TO 2330**

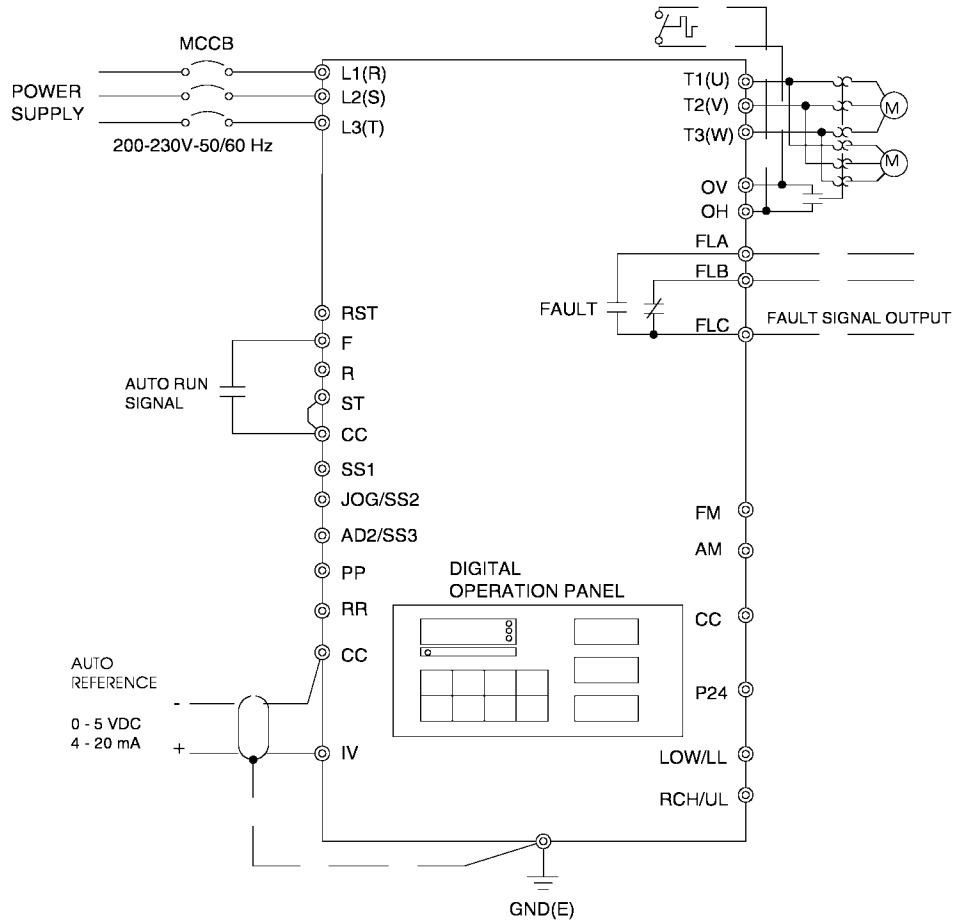


Notes:

- 1) For control/driver terminal block layout see Page 5-5.
- 2) For recommended wire sizes see Page 4-3.
- 3) For terminal connections and functions see Page 5-6 through 5-8.
- 4) Contact Toshiba when interfacing with a process controller.

4.1 Simple Connection Diagrams (cont'd)

**Q-FLOWSAVER II
STANDARD CONNECTION
MODEL 4055 TO 420K**

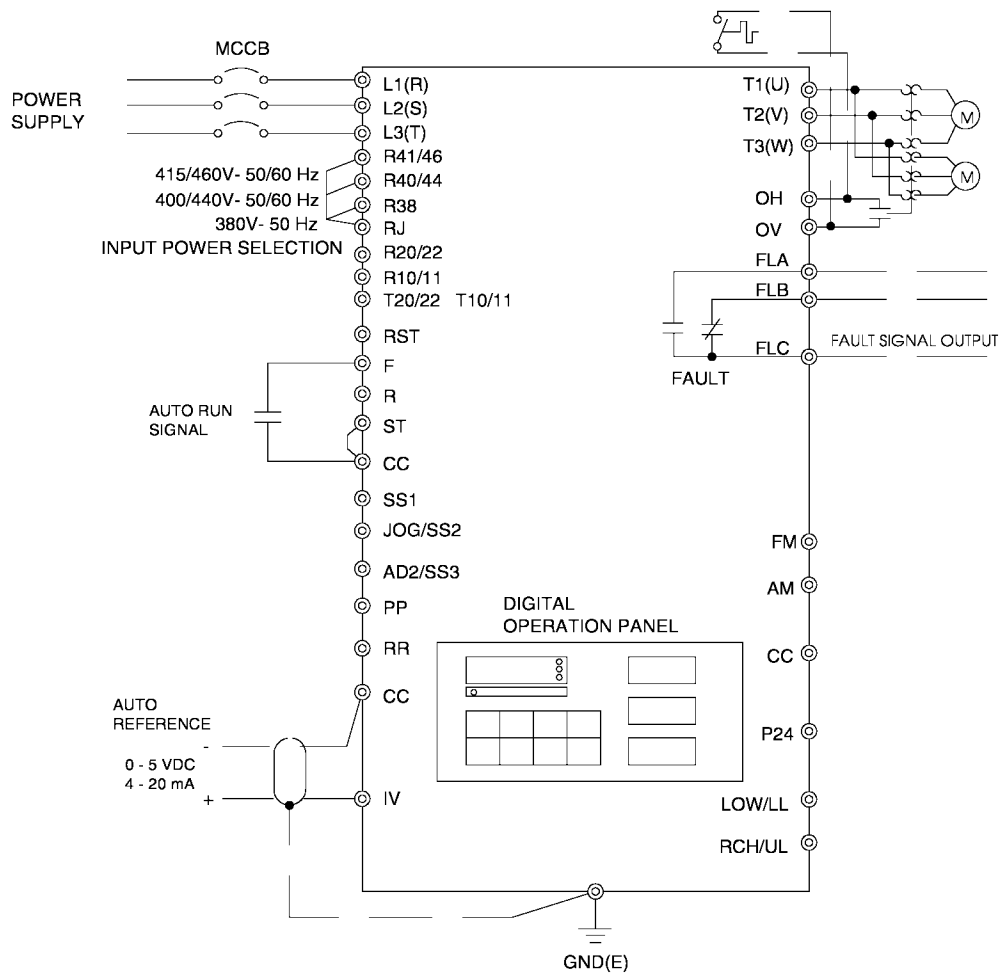

Notes:

- 1) For control/driver terminal block layout see Page 5-5.
- 2) For recommended wire sizes see Page 4-3.
- 3) For terminal connections and functions see Page 5-6 through 5-8.
- 4) Contact Toshiba when interfacing with a process controller.

4.2 Selection of Main Circuit Wiring Equipment and Standard Cable Sizes

Inverter	*Molded case circuit breaker (MCCB)	Ampacity (FLA x 1.25)	**Typical cable size (AWG)			
			Type form	Amp rating (A)	(A)	Main power and motor load
Q2-2035	20	13.8	#14	#14	3-core shield cable (speed reference) 2-core shield cable #20	#18
Q2-2055	30	21.9	#12			
Q2-2080	50	31.6	#10			
Q2-2110	70	40	#8			
Q2-2160	90	60	#6			
Q2-2220	100	78	#4			
Q2-2270	125	98	#3			
Q2-2330	150	115	#2			
Q2-4055	15	10.9	#14			
Q2-4080	30	15.8	#14			
Q2-4110	30	20.1	#12			
Q2-4160	40	30.2	#10			
Q2-4220	50	38.8	#8			
Q2-4270	70	48.8	#8			
Q2-4330	90	57.5	#6			
Q2-4400	100	74.8	#4			
Q2-4500	100	93.4	#3			
Q2-4600	125	110.7	#2			
Q2-4800	175	138	#1/0			
Q2-410K	200	178.3	#3/0			
Q2-412K	225	223	#4/0			
Q2-415K	300	268	*** 2(#2/0)			
Q2-420K	350	330	*** 2(#4/0)			

See next page for notes and precautions.

4.2 Selection of Main Circuit Wiring Equipment and Standard Cable Sizes (cont'd)

- * The customer supplied Molded Case Circuit Breaker (MCCB) or Magnetic Circuit Protector (MCP) should be coordinated with the available short circuit current. The units are rated for output short circuit faults of 5000A (1 - 50 HP), 10,000A (51 - 200 HP), and 18,000A (201 - 400 HP) according to the UL 508C "Power Conversion Equipment", Table 58.2 or CSA Standard C22.2 No.14-M1987 "Industrial Control Equipment" Table 24. The selection of breakers for this table is in accordance with 1990 NEC Article 430. The selection of these breakers takes into consideration motor starting at the low end of the output voltage specifications but does not consider the use of high efficiency motors.
- * For multiple motor applications, the magnetic only MCP should be replaced by a thermal magnetic MCCB. The MCCB should be sized according to 1.25 X (largest motor Full Load Amps) + (sum of all other motor Full Load Amps) to meet National Electric Code (NEC) or Canadian Electrical Code (CEC) requirements. An individual overload relay must be provided for each motor in multiple motor applications.
- ** Wire sizing is based upon NEC table 310-16 or CEC Table 2 using 75 deg C cable, an ambient of 30deg C, cable runs for less than 200 FT., and copper wiring for not more than three conductors in raceway or cable or earth (directly buried). The customer should consult the NEC or CEC wire Tables for his own particular application and wire sizing.
- ** For cable runs greater than 200 FT. between the motor and inverter, consult the factory before installing.
- *** Use two parallel conductors instead of a single conductor (this will allow for the proper wire bending radius within the cabinet). Use separate conduits for routing parallel conductors. This prevents the need for conductor derating (see note 3 this page).



CAUTION

Use separate conduits for routing incoming power, power to motor, and control conductors. Use no more than three power conductors and a ground conductor per conduit.

Notes:

- 1.) Auxiliary relays used to switch inverter signals should be capable of switching low current signals (i.e. 5mA).
- 2.) The inverter has internal overload protection, but the Local, National, or Canadian Electrical Codes may require external motor overload protection.
- 3.) When wiring with parallel conductors, the conductors should be kept together in phase sets with U1, V1, W1 in one conduit and parallel conductors U2, V2, W2 in another conduit. The ground conductor should be in one of these conduits.
- 4.) Twisted pair wiring should be used for external meters connected to AM and FM terminals.

4.3 Grounding

The inverter should be grounded in accordance with Article 250 of the National Electrical Code or Section 10 of the Canadian Electrical Code, Part I and the grounding conductor should be sized in accordance with NEC Table 250-95 or CEC, Part I Table 16.




CAUTION

Conduit is not a suitable ground for the inverter.

5.0 PWB Layout, Jumpers, and Terminal Connections

5.1 Control/Driver Board for Q2-2035 through Q2-2330

The following pictorial shows a layout of the major components located on the control/driver board VF3B-0100.

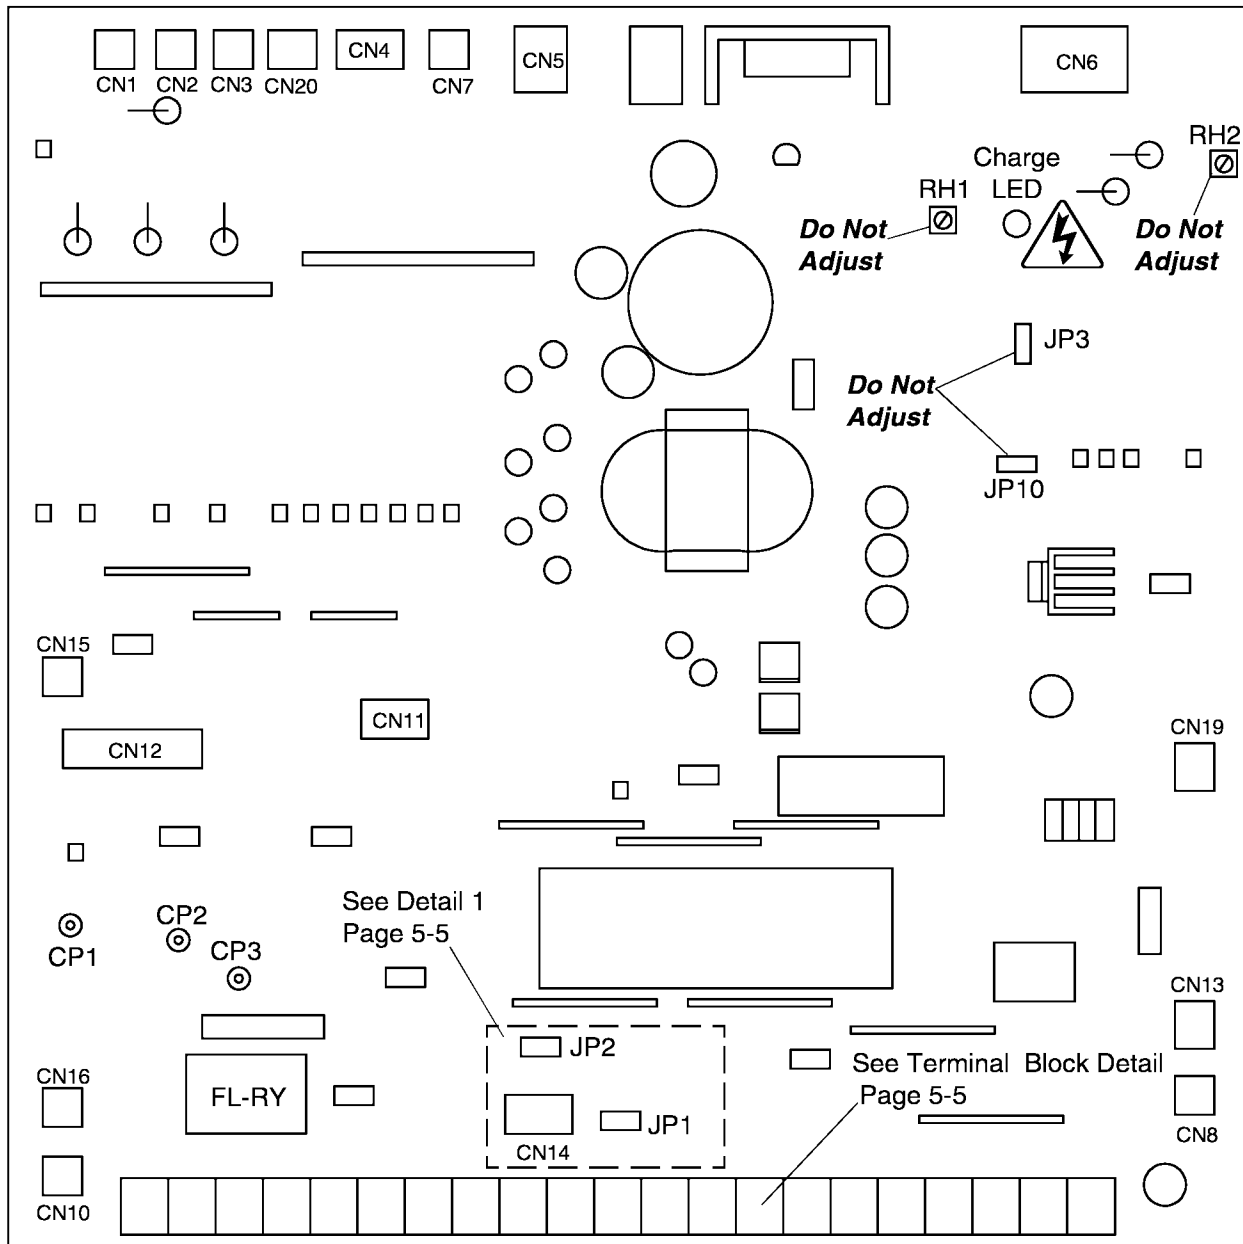


Note:

- 1) Potentiometer **RH1** is used for control power supply stabilization. This adjustment is factory set and any **ADJUSTMENT BY THE USER SHOULD NOT BE ATTEMPTED**.
- 2) Potentiometer **RH2** is used for voltage detection level bias. This adjustment is factory set and any **ADJUSTMENT BY THE USER SHOULD NOT BE ATTEMPTED**.
- 3) CP1, CP2, and CP3 are service testpoints.
- 4) **Do not adjust JP3 and JP10.**
- 5) Charge LED indicates charged capacitors. **DO NOT TOUCH internal parts if lighted.**

5.2 Control/Driver Board for Q2-4055 through Q2-4330

The following pictorial shows a layout of the major components located on the control/driver board VF3B-0101.

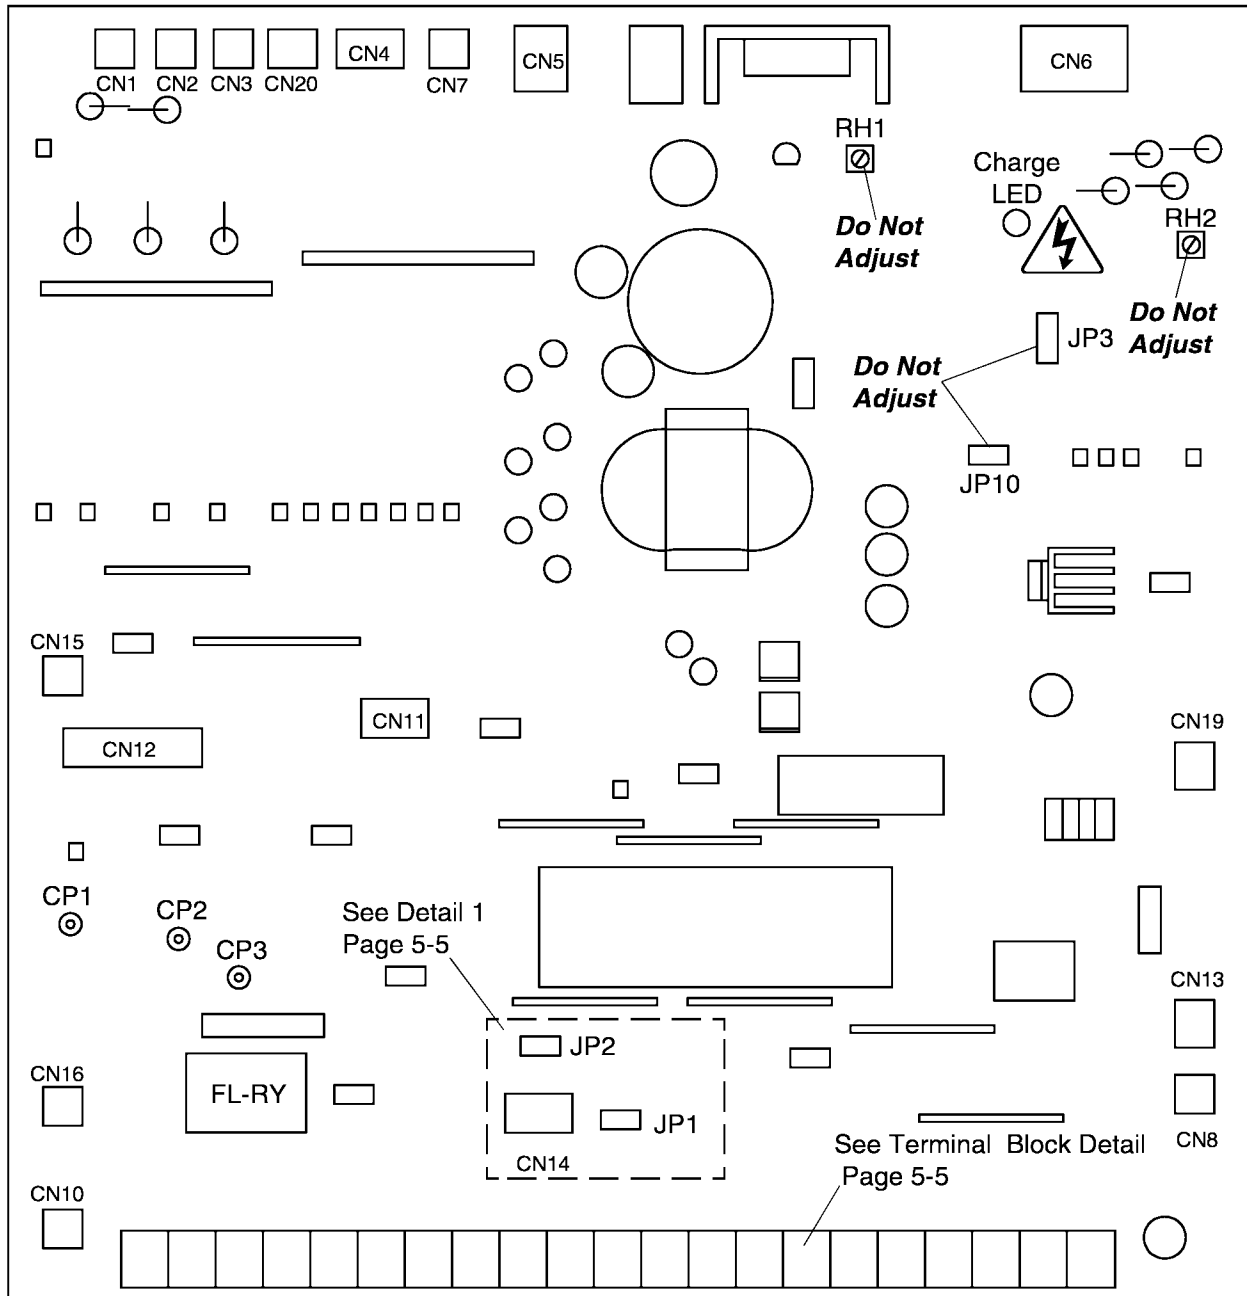


Note:

- 1) Potentiometer **RH1** is used for control power supply stabilization. This adjustment is factory set and any **ADJUSTMENT BY THE USER SHOULD NOT BE ATTEMPTED**.
- 2) Potentiometer **RH2** is used for voltage detection level bias. This adjustment is factory set and any **ADJUSTMENT BY THE USER SHOULD NOT BE ATTEMPTED**.
- 3) CP1, CP2, and CP3 are service testpoints.
- 4) **Do not adjust JP3 and JP10.**
- 5) Charge LED indicates charged capacitors. **DO NOT TOUCH internal parts if lighted.**

5.3 Control Board for Q2-4400 through Q2-420K

The following pictorial shows a layout of the major components located on the control board VF3C-1200.

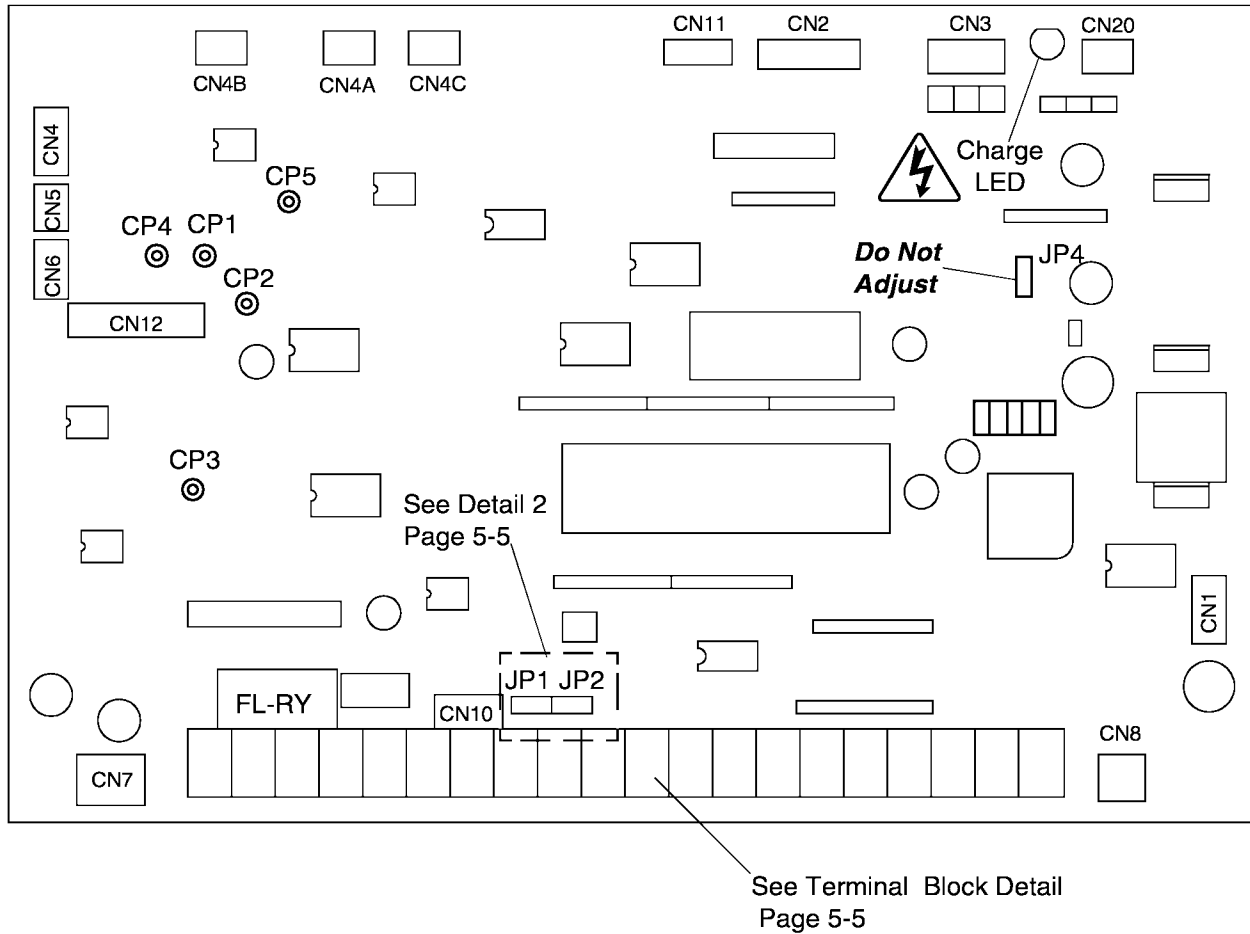


Note:

- 1) CP1, CP2, CP3, CP4, and CP5 are service testpoints.
- 2) **Do not adjust JP4.**
- 3) Charge LED indicates charged capacitors. **DO NOT TOUCH internal parts if lighted.**

5.4 Driver Board for Q2-4400 through Q2-420K

The following pictorial shows a layout of the major components located on the driver board 35589.

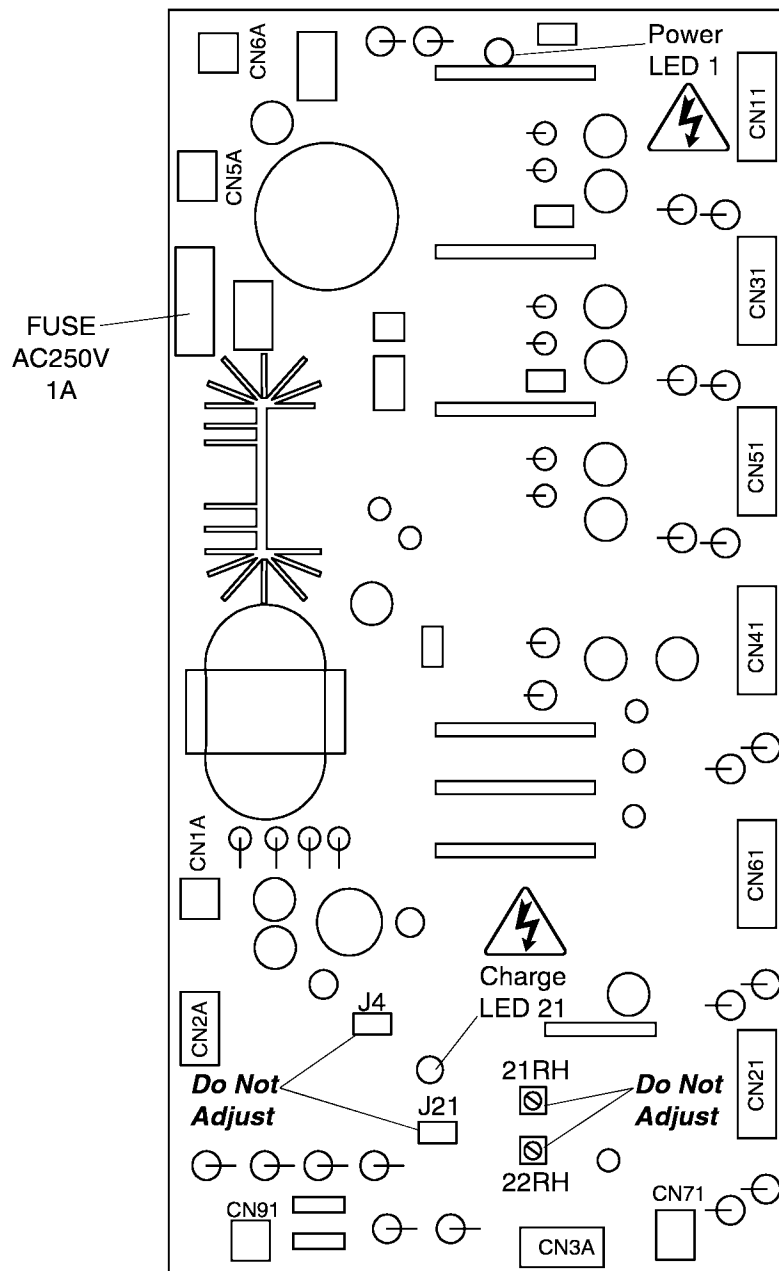


Note:


- 1) Potentiometer **21RH (OP)** is the main circuit overvoltage detection trip set. This adjustment is factory set and any **ADJUSTMENT BY THE USER SHOULD NOT BE ATTEMPTED.**
- 2) Potentiometer **22RH (MUV)** is the main circuit undervoltage detection trip set. This adjustment is factory set and any **ADJUSTMENT BY THE USER SHOULD NOT BE ATTEMPTED.**
- 3) **Do not adjust J4 and J21.**
- 5) Charge LED indicates charged capacitors. **DO NOT TOUCH internal parts if lighted.**

5.5 Jumper Details

The jumper connections for each of the printed wiring boards on Pages 5-1 through 5-3 are shown in the enlarged details below. **Only jumpers JP1 and JP2 should be adjusted by the user.** See Page 5-6 for jumper adjustments.

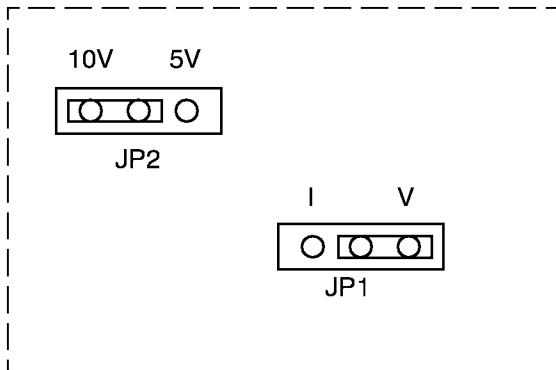

Detail 1 (Reference pages 5-1 and 5-2)

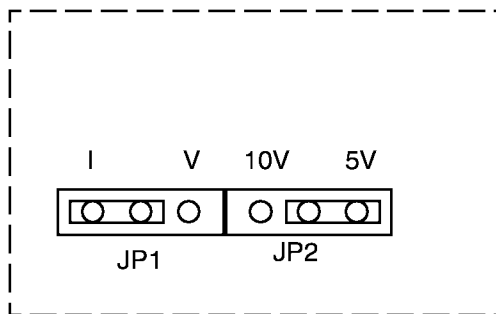

Detail 2 (Reference page 5-3)


Note:

Jumper settings as shown in these illustrations are for reference purposes only and do not necessarily reflect factory settings nor correct settings for a particular application.

5.6 Control/Driver Board Terminal Block Details

The control/driver board terminal block is shown in detail below. Each of the twenty-one terminals is functionally labeled. See Pages 5-7 and 5-8 for a list of terminal functions.

Control/Driver Board Terminal Block Detail (Reference pages 5-1, 5-2, and 5-3)

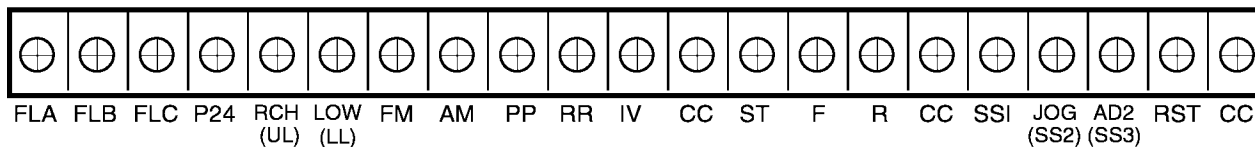

5.7 Jumper/Terminal Connections and Functions


The following table shows how jumpers JP1 and JP2 are set for use with the analog input terminal connections RR and IV. Jumper numbers and settings which are shown in this table are applicable to all printed wiring boards (see page 5-5 for terminal block and jumper details).

Terminal/Jumper Connections for Input Reference Signals


	JP1	JP2	Terminal Connections	Function
1		10V 5V 	No external connections; JP1 and JP2 should be set as shown for keypad operation (normal factory setting).	Use when not inputting any external reference signals into terminal RR or IV. P.PrG parameter #2 "priority of RR terminal input" is N/A.
2		N/A		Use when inputting a 4(0)-20mA external reference signal to terminal IV. P.PrG parameter #2 "priority of RR terminal input" should be set to 0 "on". See page 7-5.
3		N/A		Use when inputting 0-5Vdc external reference signal to terminal IV. P.PrG parameter #2 "priority of RR terminal input" should be set to 0 "on". See page 7-5.
4		N/A		Use when inputting 0-10Vdc external reference signal to terminal RR. P.PrG parameter #2 "priority of RR terminal input" should be set to 1 "on". See page 7-5.
5	N/A	10V 5V 		Use when inputting 0-10Vdc external reference signal to terminal RR. P.PrG parameter #2 "priority of RR terminal input" should be set to 1 "on". See page 7-5.
6		10V 5V 		Use when inputting a 4(0)-20mA external reference signal to terminal IV and a 0-10Vdc reference signal to terminal RR. P.PrG parameter #2 "priority of RR terminal input" should be set to 1 "on". Terminal RR will override "have priority over" terminal IV when switch (SW) is closed. See page 7-5.

* 3K ohm pot divides voltage between terminal PP and CC return. Any pot value between 1K to 10K ohms can be used but makes adjustment more sensitive.

5.8 Terminal Connections and Functions

Terminal name	Terminal functions	Terminal location
L1, L2, L3 (R, S, T)	Input power terminals. Connect to either a 3-phase 50Hz, 200Vac power supply or to a 3-phase 60Hz, 200 to 230Vac power supply for models Q2-2035 to Q2-2330.	Bus bar or power terminal block 
	Input power terminals. Connect to either a 3-phase 50HZ, 380Vac power supply or to a 3-phase 60HZ, 400 to 460Vac power supply for models Q2-4055 to Q2-420K.	
T1, T2, T3 (U, V, W)	Output load terminals. Connect these terminals to a 3-phase induction motor of the proper voltage.	
OH	Input terminal for external fault signal.	Terminal block
OV	This is the return terminal for OH.	
FLA, FLB, FLC	Output terminals of form C contact changes state when a protective function has been activated (250Vac - 2A).	Control PWB terminal block
P24	Output terminal for unregulated 24Vdc power supply (100mA maximum output current).	
RCH(UL)	Output terminal (open collector). Provides an output signal ground (50 mAdc max) when the upper limit frequency is reached, when an acc/dec is complete, or when the output frequency is within a specified range. The choice is determined by settings of the Output Terminal Selection function (:0.tb).	
LOW(LL)	Output terminal (open collector). Provides an output signal ground (50 mAdc max) when a preset low speed or a preset lower limit is reached. The choice is determined by settings of the Output Terminal Selection function (:0.tb).	
FM	Output terminal for an external analog frequency meter. Use either an ammeter rated at 1mAdc at full scale or a voltmeter rated at 7.5Vdc at full scale.	
AM	Output terminal for an external analog ammeter. Use either an ammeter rated at 1mAdc at full scale or a voltmeter rated at 7.5Vdc at full scale.	
PP	Regulated 10Vdc power supply to be used with terminal RR for remote terminal input.	
RR	Analog input terminal for a 0 - 5Vdc (JP2 @ 5V) or 0 - 10Vdc (JP2 @ 10V) external reference signal. Also used for wiring a 1k - 10k ohm (3k ohm recommended) potentiometer to allow for remote speed control operation.	
IV	Analog input terminal for a 0 - 5Vdc (JP1 @ V) or 4 (0) - 20mAdc (JP1 @ I) external reference signal.	
CC (one of three)	This is the common return for PP,RR, and IV terminals. Do not connect to GND(E).	

5.8 Terminal Connections and Functions (cont'd)


Terminal name	Terminal functions	Terminal location
ST	Input terminal for run interlock. When ST is shorted to CC, the inverter is ready to run. With ST-CC open the unit will not run and if opened while running a coasting stop begins.	Control PWB terminal block
F	Input terminal for forward run. When F is shorted to CC, a forward run starts. With F-CC open, the unit decelerates to a complete stop.	
R	Input terminal for reverse run. When R is shorted to CC, a reverse run starts. With R-CC open, the unit decelerates to a complete stop. If terminals F-CC and R-CC are shorted simultaneously, a reverse run occurs.	
CC (one of three)	This is the common return for ST terminal. Do not connect to GND(E).	
SS1	Input terminal for multi-speed run frequencies. Depends on setting of function [1.tb], JOG/SS2 and AD2/SS3 terminals. (See Page 10-1)	
JOG(SS2)	Input terminal for jogging run or multi-speed run frequencies. Depends on setting of function [1.tb], SS1, AD2(SS3) terminals. (See Page 10-1)	
AD2(SS3)	Input terminal for multispeed run frequencies. Depends on setting of function [1.tb], SS1, JOG/SS2 terminals. (See Page 10-1)	
RST	With RST-CC shorted, the inverter's protective function resets.	
CC (one of three)	This is the common return for ST, F, R, SS1, JOG(SS2), AD2(SS3), and RST terminals. Do not connect to GND(E).	
GND(E) (three provided)	The inverter earth ground terminal. Do not connect to common return terminal (CC).	Frame screw or lug
R41/46 *	Jumper to RJ when using 415V-50Hz/460V-60Hz incoming power. Do not jumper to R40/44 or R38.	Terminal block 
R40/44 *	Jumper to RJ when using 400V-50Hz/440V-60Hz incoming power. Do not jumper to R41/46 or R38.	
R38 *	Jumper to RJ when using 380V-50Hz incoming power. Do not jumper to R41/46 or R40/44.	
RJ *	Common for input power selection. Jumper to either R41/46, R40/44, or R38. Do not jumper to more than one terminal at a time.	
R20/22 *	Output power terminal. Supplies 1-phase 200V-50Hz or 1-phase 220V-60Hz @ 40VA maximum.	
R10/11 *	Output power terminal. Supplies 1-phase 100V-50Hz or 1-phase 110V-60Hz @ 40VA maximum.	
T10/11 T20/22 *	Output power return terminal for either 1-phase 200V-50Hz/220V-60Hz @ 40VA or 1-phase 100V-50Hz/110V-60Hz @ 40VA.	

* Supplied only on the Q2-4055 through Q2-420K units.

6.0 Operating Panel

6.1 Operating Panel Layout


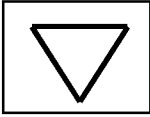


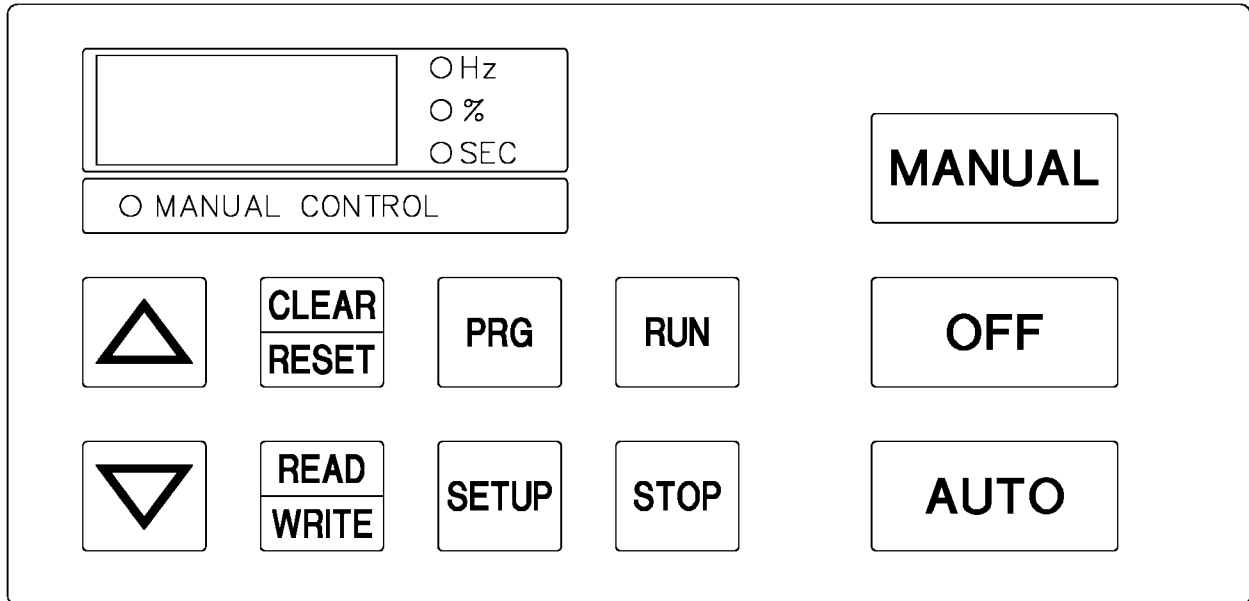The operating panel enables the user to enable or disable the keypad, input commands from the keypad, and monitor the inverter operation on the LED displays. The panel consists of the keypad and LED displays. The illustration below shows the operating panel layout. See the following section for a description of each key and function. See page 6-3 for a functional description of the LED display.



6.2 Operating Panel Keys and Functions

The following chart explains each of the key functions on the keypad

Keys and Functions

Key	Function
	Up scroll key used for increasing frequency or data values, scrolls parameter to parameter, or upwards scaling of remote meters (FM, AM).
	Down scroll key used for decreasing frequency or data values, scrolls parameter to parameter, or downwards scaling of remote meters (FM, AM).
	Used to start a normal forward/reverse run (only in manual mode), manual LED will flash in run mode even at frequency = 0 Hz.
	Key enables the manual control mode and allows commands to be entered from either the keypad or a computer terminal. The Manual control LED is on when operating in the manual control mode. When switching to auto mode, first press "off" key; otherwise inverter must be at 0 Hz. If "auto" key is pressed while still running in manual mode, an ":Err. 7" will flash.


6.2 Operating Panel Keys and Functions (cont'd)

Keys and Functions

<div style="border: 1px solid black; padding: 5px; text-align: center;">OFF</div>	Key disables RUN or STOP commands until either the AUTO or MANUAL key is pressed. Display reads "OFF". Motor coasts to a stop if key is pressed while motor is running
<div style="border: 1px solid black; padding: 5px; text-align: center;">AUTO</div>	Disables manual control and turns the manual control LED off; drive will accept commands from terminal strip connector or computer input only.
<div style="border: 1px solid black; padding: 5px; text-align: center;">READ</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">WRITE</div>	This key is used to scroll through the system parameters (see page 7-2), read data from within the group or setup parameters, write data changes into the non-volatile memory. System status information is available while drive is running.
<div style="border: 1px solid black; padding: 5px; text-align: center;">PRG</div>	Key used to scroll through the parameter groups and returns to frequency setting if in any other mode.
<div style="border: 1px solid black; padding: 5px; text-align: center;">CLEAR</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">RESET</div>	When data changes have been made in error, this key will allow user to clear data back to data = 0 (if allowed). Also resets trips, or returns to frequency mode.
<div style="border: 1px solid black; padding: 5px; text-align: center;">STOP</div>	This key stops the drive in manual mode. The manual mode stop can be programmed to coast or decelerate to a stop. Will cause the drive to trip and coast in any other mode. Can be used as an emergency stop in any mode.
<div style="border: 1px solid black; padding: 5px; text-align: center;">SETUP</div>	Allows access to setup parameters only and will automatically return to frequency mode after all parameters have been stepped through.

6.3 LED Display and Display Monitoring

The LED display provides the user with the operating frequency, function settings, and status information necessary to easily monitor and set the operating parameters. The individual LED's are identified and explained in the following chart.

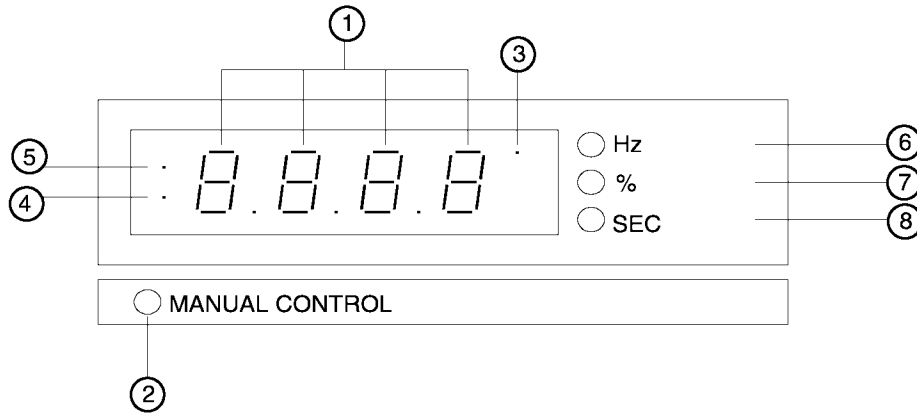

 
 
 
 
 

 
 



 

 
 
 
 
 
 
 
 
 



 
 
 
 
 

 
Display Monitoring

Item	Name	Function/status
①	Monitor display	7-segment, 4-column LED Displays frequency, title, data, etc.
②	Panel control LED	ON when the unit is in the manual control mode OFF when the unit is in the auto (remote) control mode FLASHING when the unit is in the manual control mode and the motor is running
③	Option mode LED	ON when the computer interface option is enabled. (Contact Toshiba for information.)
④ ⑤	Monitor display	<ul style="list-style-type: none"> <input type="checkbox"/> Both LED's are normally OFF when the monitor is displaying operating frequency or scaled operating frequency from the display scaler. <input checked="" type="checkbox"/> LED 5 is ON and LED 4 is OFF when unit is in a patterned run sequence. <input checked="" type="checkbox"/> Both LED's are ON when the unit is in the parameter setting mode using the operating panel keypad and the motor is not running. <input checked="" type="checkbox"/> Both LED's are FLASHING when the unit is in the parameter setting mode using the operating panel keypad and the motor is running. <input type="checkbox"/> LED 4 is ON and LED 5 is OFF when the unit is in the parameter setting mode and the operating panel keypad is disabled. (Computer Command Mode)
⑥	Hz display LED	ON when the display is indicating frequency.
⑦	% display LED	ON when the display is indicating a percentage.
⑧	Time display LED	ON when displaying time in seconds.

6.4 Display Alphanumerics

The 7 segment LED display is able to display all of the numerals but is unable to properly form all of the characters of the alphabet. Therefore some characters of the alphabet will appear as special symbols and others are not used at all. The tables below show the numbers and characters that are used and how each appears on the 7 segment display.

Numerics	LED display
0	
1	
2	
3	
4	
5	
6	
7	
8	
9	

Characters	LED display
A	
b	
C	
d	
E	
F	
G	
H	
I	
J	
L	
M	
n	
O	 or 
P	
r	
S	
t	
U	
v	
y	
-	

7.0 Parameter Groups

7.1 Definitions of Setup and Group Parameters

SETUP PARAMETERS

This parameter group is accessed by pressing the dedicated "SETUP" key on the keypad. This parameter group should not be considered operationally any different from other parameter groups. This group is assigned a dedicated key because of the probable need to access it most often and because it contains the adjustable parameters considered "fundamental" to drive operation and application. This includes parameters such as acceleration and deceleration times, upper and lower frequency limits, bias and gain, electronic thermal protection, and stall prevention activation.

USER GROUP PARAMETERS :U.PRG

This parameter group is accessible from the group parameter menu. The menu can be scrolled by repeated pressing of the "PRG" key. This group contains features such as assignment of a personal lockout code, options for the Volts per Hertz (V/F) ratios, reset to factory settings, limiting maximum frequency, setup of automatic torque boost and level, #2 acceleration and deceleration time and selection of patterns for #1 or #2.

COMMUNICATION GROUP PARAMETERS :C.PRG

This parameter group is accessible from the group parameter menu. The menu can be scrolled by repeated pressing of the "PRG" key. This group contains features for setting up the serial communication protocol, carrier frequency selection, input and output terminal selection, and setting up the unit for power failure control and automatic restarting.

JUMP FREQUENCY GROUP PARAMETERS :J.PRG

This parameter group is accessible from the group parameter menu. The menu can be scrolled by repeated pressing of the "PRG" key. This group contains features for setting three different operating patterns jump frequency and jump width. This group also contains selections for PID control and adjustments.

DISPLAY GROUP PARAMETERS :D.PRG

This parameter group is accessible from the group parameter menu. The menu can be scrolled by repeated pressing of the "PRG" key. This group contains features for setting up low speed frequency detection and speed reach selection. It also contains settings for DC braking.

SPEED GROUP PARAMETERS :S.PRG

This parameter group is accessible from the group parameter menu. The menu can be scrolled by repeated pressing of the "PRG" key. This group contains features for setting multispeed run frequencies 1 - 6 and firespeed override frequency.

PATTERN FREQUENCY GROUP PARAMETERS :P.PRG

This parameter group is accessible from the group parameter menu. The menu can be scrolled by repeated pressing of the "PRG" key. This group contains features for setting pattern 1 - 7 forward or reverse and run time, number of cycles, jog frequency, jog stop pattern selection, and setting of hysteresis.

In each of the above group parameters, some of the more important functions have been mentioned. The following System Parameters Adjustment Range and Factory Setting tables show all of the group parameters and each of the functions are shown in detail. The ITEM NO. is an identifier used for reference only. It shows the correct numerical order for each function. This is helpful when locating the function definition in Keypad Operating Functions (See Section 9.0 page 9-1).

7.2 System Parameters Adjustment Range and Factory Settings

PARAMETER DISPLAY	ITEM NO.	PARAMETER DESCRIPTION	ADJUSTMENT RANGE	FACTORY SETTING	REFERENCE PAGE
SETUP PARAMETERS *					
:ACC1	1	Acceleration time #1	0.1 - 1200 sec	90.0 sec	9-1
:DEC1	2	Deceleration time #1	0.1 - 1200 sec	120.0 sec	9-1
:UL	3	Upper frequency limit	0.0 Hz - FH	60.0 Hz	9-1
:LL	4	Lower frequency limit	0.0 Hz - UL	0.0 Hz	9-1
:P1	5	Terminal IV point #1 setting signal	0 - 100 %	20 %	9-1
:F-P1	6	Point #1 output frequency	0.0 Hz - FH	0.0 Hz	9-1
:P2	7	Terminal IV point #2 setting signal	0 - 100 %	100 %	9-1
:F-P2	8	Point #2 output frequency	0.0 Hz - FH	60.0 Hz	9-1
:THR	9	Electronic thermal protection level	10 - 100 %	100 %	9-1
:SEL	10	Stall prevention activation level	10 - 120 %	120 %	9-1
:SELY	11	Electronic thermal protection select	0: STD-motor, no soft stall 1: STD-motor, soft stall 2: VF-motor, no soft stall 3: VF-motor, soft stall	0	9-2
:U.PRG	USER GROUP PARAMETERS **				
:FH	1	Maximum frequency	30 - 160 Hz	60 Hz	9-3
:A.tb	2	Automatic torque boost	0: Off 1: On	0	9-3
:tb	3	Torque boost	0 - 30 %	3 %	9-3
:bFL	4	Base frequency of maximum voltage level	25 - 160 Hz	60 Hz	9-3
:LYP	5	Standard setting mode selection	0: Factory settings 1: 50 Hz motor 2: 60 Hz motor 3: Reset to factory settings	0	9-3
:ACC2	6	Acceleration time #2	0.1 - 1200 sec	10.0 sec	9-3
:DEC2	7	Deceleration time #2	0.1 - 1200 sec	10.0 sec	9-3
:PE.1	8	Pattern of ACC/DEC #1	0: Linear 1: S-curve 2: C-curve	0	9-3
:PE.2	9	Pattern of ACC/DEC #2	0: Linear 1: S-Curve 2: C-Curve	1	9-4
:SEL2	10	Selection to use ACC/DEC #1 or #2	0: Acc/Dec #1 1: Acc/Dec #2	0	9-4
:PE	11	V/F pattern	0: Constant torque 1: Variable torque	1	9-4
:ES.CS	12	Timed stop/coast to stop selection	0: Deceleration stop 1: Coast to stop	0	9-4
:Code	13	Personal lock out code	0 - 255	0	9-4

7.2 System Parameters Adjustment Range and Factory Settings (cont'd)

PARAMETER DISPLAY	ITEM NO.	PARAMETER DESCRIPTION	ADJUSTMENT RANGE	FACTORY SETTING	REFERENCE PAGE
:E.Prg	COMMUNICATION GROUP PARAMETERS **				
:Rst	1	Automatic restart after instantaneous power failure selection	0: Off 1: On	1	9-5
:rtrg	2	Automatic reset selection	0: Off 1: On	1	9-5
:PFL	3	Power failure function selection <i>(This function valid on 230 volt units only)</i>	0: Off 1: On	0	9-6
:trCL	4	Fault trip data retention selection	0: Cleared 1: Saved	0	9-6
:l.tb	5	Input terminal selection	0: SS2, SS3 1: JOG, SS3 2: SS2, AD2 3: JOG, AD2	0	9-6
:O.tb	6	Output terminal selection	0: LL, UL 1: LOW, UL 2: LL, RCH 3: LOW, RCH	3	9-6
:OPT	7	Option card multi-functional selections	0: Off 1: 12 bit binary absolute input 2: 12 bit binary relativity input 3: 3 number BCD input 4: 3 number BCD input 5: Pulse frequency reference inout 6: Multi-speed input 7: Selection 1 with write signal 8: Selection 2 with write signal 9: Selection 3 with write signal 10: Selection 4 with write signal 11: Selection 5 with write signal 12: Selection 6 with write signal	0	9-6
:l.no.	8	Inverter number	0 - 31	0	9-6
:b.rAt	9	Baud rate (RS232/RS485)	0: 150/1200 1: 300/2400 2: 600/4800 3: 1200/9600 4: 2400/19200	0	9-6
:C.bit	10	Communication data bits	0: 7 bits 1: 8 bits	0	9-6
:St.Pr	11	Communication parity check and stop bit	0: Even 1: Even 2: N/A 3: N/A 4: Odd 5: Odd	0	9-6
:CF	12	PWM carrier frequency	5 - 16 kHz	12 kHz	9-6

7.2 System Parameters Adjustment Range and Factory Settings (cont'd)

PARAMETER DISPLAY	ITEM NO.	PARAMETER DESCRIPTION	ADJUSTMENT RANGE	FACTORY SETTING	REFERENCE PAGE
:J.Prg	JUMP FREQUENCY GROUP PARAMETERS **				
:FJ1	1	Jump frequency #1	0.0 Hz - FH	0.0 Hz	9-7
:bFJ1	2	Jump width #1	0.0 Hz - FH	0.0 Hz	9-7
:FJ2	3	Jump frequency #2	0.0 Hz - FH	0.0 Hz	9-7
:bFJ2	4	Jump width #2	0.0 Hz - FH	0.0 Hz	9-7
:FJ3	5	Jump frequency #3	0.0 Hz - FH	0.0 Hz	9-7
:bFJ3	6	Jump width #3	0.0 Hz - FH	0.0 Hz	9-7
:Fb.P1	7	PID setpoint control select	0: Off 1: On	0	9-7
:GP	8	Proportional gain	0 - 9999	1000	9-7
:GI	9	Integral gain	0 - 9999	500	9-7
:GR	10	Differential gain	0 - 255	0	9-7
:GFS	11	Lag time constant	0 - 255	255	9-7
:b.Prg	DISPLAY GROUP PARAMETERS **				
:dSP.2	1	Universal unit multiplication factor	0.00 - 200.0 (0.00 = OFF)	0.00	9-8
:LF	2	Low speed detection	0.0 Hz - FH	0.5 Hz	9-8
:rCH	3	Speed reach selection	0: Complete ACC/DEC 1: Frequency reach reference	1	9-8
:rrCH	4	Speed reach detection range	0.0 Hz - FH	2.5 Hz	9-8
:FrCH	5	Speed reach reference	0.0 Hz - FH	60.0 Hz	9-8
:dbF	6	DC injection voltage start frequency	0.0 Hz - 10.0 Hz	0.0 Hz	9-8
:dbL	7	DC injection voltage	0 - 20 %	0 %	9-8
:dbt	8	DC injection time	0.0 - 5.0 sec	0.0 sec	9-8
:POUt	9	Output voltage regulation	0 - 100 %	100 %	9-8
:OP5.5	10	Overvoltage stall protection select	0: On 1: Off	0	9-8
:S.Prg	SPEED GROUP PARAMETERS **				
:E.CHG	1	AC line/inverter transfer signal	0: Off 1: On	0	9-9
:Sr1	2	Multispeed run frequency #1	LL - UL	0.0 Hz	9-9
:Sr2	3	Multispeed run frequency #2	LL - UL	0.0 Hz	9-9
:Sr3	4	Multispeed run frequency #3	LL - UL	0.0 Hz	9-9
:Sr4	5	Multispeed run frequency #4	LL - UL	0.0 Hz	9-9
:Sr5	6	Multispeed run frequency #5	LL - UL	0.0 Hz	9-9
:Sr6	7	Multispeed run frequency #6	LL - UL	0.0 Hz	9-9
:FSOF	8	Firespeed override frequency (Sr7)	LL - UL	0.0 Hz	9-9

7.2 System Parameters Adjustment Range and Factory Settings (cont'd)

PARAMETER DISPLAY	ITEM NO.	PARAMETER DESCRIPTION	ADJUSTMENT RANGE	FACTORY SETTING	REFERENCE PAGE
:P.FRG	PATTERN FREQUENCY GROUP PARAMETERS **				
:F.r.	1	Forward/Reverse rotation select	0: Reverse 1: Forward	1	9-10
:rr.cC	2	Priority of RR terminal input	0: IV terminal input "on" 1: RR terminal input "on"	0	9-10
:PSEL	3	Mode for pattern run ***	0: Off 1: Terminal 2: Computer	0	9-10
:P.t.t	4	Time unit for pattern run time select ***	0: Seconds 1: Minutes	0	9-10
:P.t.n	5	Quantity of pattern run cycles ***	0 - 255	0	9-10
:P.t.1t	6	Pattern #1 run time ***	0 - 8000	0	9-10
:P.t.1	7	Pattern #1 drive characteristics ***	0: Fwd run #1 Acc/Dec 1: Fwd run #2 Acc/Dec 2: Rev run #1 Acc/Dec 3: Rev run #2 Acc/Dec	0	9-10
:P.t.2t	8	Pattern #2 run time ***	0 - 8000	0	9-10
:P.t.2	9	Pattern #2 drive characteristics ***	0: Fwd run #1 Acc/Dec 1: Fwd run #2 Acc/Dec 2: Rev run #1 Acc/Dec 3: Rev run #2 Acc/Dec	0	9-10
:P.t.3t	10	Pattern #3 run time ***	0 - 8000	0	9-10
:P.t.3	11	Pattern #3 drive characteristics ***	0: Fwd run #1 Acc/Dec 1: Fwd run #2 Acc/Dec 2: Rev run #1 Acc/Dec 3: Rev run #2 Acc/Dec	0	9-10
:P.t.4t	12	Pattern #4 run time ***	0 - 8000	0	9-10
:P.t.4	13	Pattern #4 drive characteristics ***	0: Fwd run #1 Acc/Dec 1: Fwd run #2 Acc/Dec 2: Rev run #1 Acc/Dec 3: Rev run #2 Acc/Dec	0	9-10
:P.t.5t	14	Pattern #5 run time ***	0 - 8000	0	9-10
:P.t.5	15	Pattern #5 drive characteristics ***	0: Fwd run #1 Acc/Dec 1: Fwd run #2 Acc/Dec 2: Rev run #1 Acc/Dec 3: Rev run #2 Acc/Dec	0	9-10
:P.t.6t	16	Pattern #6 run time ***	0 - 8000	0	9-11
:P.t.6	17	Pattern #6 drive characteristics ***	0: Fwd run #1 Acc/Dec 1: Fwd run #2 Acc/Dec 2: Rev run #1 Acc/Dec 3: Rev run #2 Acc/Dec	0	9-11
:P.t.7t	18	Pattern #7 run time ***	0 - 8000	0	9-11
:P.t.7	19	Pattern #7 drive characteristics ***	0: Fwd run #1 Acc/Dec 1: Fwd run #2 Acc/Dec 2: Rev run #1 Acc/Dec 3: Rev run #2 Acc/Dec	0	9-11

7.2 System Parameters Adjustment Range and Factory Settings (cont'd)

PARAMETER DISPLAY	ITEM NO.	PARAMETER DESCRIPTION	ADJUSTMENT RANGE	FACTORY SETTING	REFERENCE PAGE
:P.FRG	PATTERN FREQUENCY GROUP PARAMETERS (cont'd) **				
:JOG	20	Jog frequency	0.0 - 20.0 Hz	5.0 Hz	9-11
:J.STP	21	Jog stop select	0: Deceleration stop 1: Coast to stop 2: DC injection stop	0	9-11
:F-ST	22	Start-up frequency	0.0 - 10.0 Hz	0.0 Hz	9-11
:F.run	23	Run frequency	0.0 Hz - FH	0.0 Hz	9-11
:F.HYS	24	Run frequency hysteresis	0.0 Hz - FH	0.0 Hz	9-12

* Parameters are alternately exhibited from setup menu by alternately pressing **SETUP** key. Value of parameter can be read by pressing **READ/WRITE** key. Value can be changed by continued pressing of "up" or "down" key. When desired value is reached press the **READ/WRITE** key to store new value.

** Group parameters are exhibited from group parameter menu by pressing **PRG** key. When the desired group parameter is reached, individual parameters within the group can be exhibited by alternately pressing the "up" or "down" key. Value of exhibited parameter can be read by pressing **READ/WRITE** key. Value of exhibited parameter can be changed by continued pressing of "up" or "down" key. When desired value is reached press the **READ/WRITE** key to store new value.

*** When P.SEL (mode for pattern run) is set to 0; pattern run times (Pt.1t through Pt.7t) and pattern run selections (Pt.1 through Pt.7) will be skipped when scrolling through the Pattern Frequency Group Parameters.

8.0 System Status Monitoring

The inverter operates with varying levels of supply voltage and current. A variable output frequency of voltage and current is generated to drive the motor load. These input and output levels of operating voltage and current are continually monitored by the inverter. It also monitors for over temperature, input and output terminal settings, and condition of the microprocessor with associated memory elements. These operating settings and variables have a certain value or "status" associated with them and are used for inverter operation. They can also be monitored by the operator to show the setup and conditions existing at any time. Three types of status monitoring are used and explained below.

8.1 Normal Status Monitoring

Normal status monitoring occurs during normal operation. The ST-CC terminal must be closed to run. The following table shows applicable keys, display, and status conditions for normal status monitoring. The display values are for factory settings where no trips or errors occurred. The display will change only if a new value is programmed into the associated group adjustment range or if trips or errors have occurred. Scrolling occurs by repeatedly pressing the **READ/WRITE** key after output frequency is displayed. Trips or errors that have occurred (up to a total of three), will be displayed in order immediately after the keypad software version display.

Key	Display	Status Condition
OFF	:OFF	Inverter is in the off position when ":OFF" is flashing.
AUTO	0.0	Inverter is ready to run from terminal or computer interface.
MAN	0.0	Inverter is ready to run from keypad and manual control LED is on.
RUN	[Output Frequency]	Displays inverter's output frequency.
STOP	E	Emergency stop executed from keypad while in an automatic run or while in remote control mode when "E" is flashing.
RD/WRT	F or r	Indicates a forward (F) or reverse (r) run. If not running, the display refers to the direction the unit would run.
RD/WRT	:60.0	Displays the frequency which the inverter is set to output when running (60 Hz is factory setting).
RD/WRT	:C 0	Displays the percentage of the inverter's rated output current when running (displays "0" when not running).
RD/WRT	:P 3	Displays the percentage of the inverter's rated output voltage when running (displays "3" when not running).
RD/WRT	:1-40	Displays input terminal status code. See page 8-4
RD/WRT	:0-01	Displays output terminal status code. See page 8-5
RD/WRT	:u .5.3	Displays inverter's software version.
RD/WRT	:u.P5.0	Displays keypad's software version.
RD/WRT	:4< >:n.Err	Displays 4th error (no error occurred).
RD/WRT	[Output Frequency]	Returns to the original display of output frequency.

8.2 Automatic Status Monitoring

Automatic status monitoring displays abnormal status conditions that can occur during normal inverter operation. These conditions will cause warnings and error messages to be displayed but will not cause the inverter to trip. The table below shows these abnormal conditions and the associated display that will appear. These displays usually appear during the time that the abnormal condition is occurring and will go away when it is corrected. The abnormal condition should be corrected as soon as possible.

Key	Display	Status Condition
-----	St<>OPEn	ST-CC terminal connector is open (must be connected to run).
-----	POFF	The main AC supply power is low.
-----	NOFF	The inverter's DC bus voltage is low.
-----	[[Output Frequency]	Stall prevention is activated when flashing "C" appears in front of output frequency.
-----	P [Output Frequency]	Overvoltage limitation is activated when flashing "P" appears in front of output frequency.
-----	L [Output Frequency]	Overload detection is activated when flashing "L" appears in front of output frequency.
-----	:<>Err.7	This error occurs while trying to switch from manual to automatic mode or automatic mode to manual while inverter is outputting a frequency.
-----	:<>Err.1	This is a frequency setting signal error. Points 1 and 2 of a frequency setting signal are too close together. Correct the setting of points 1 and 2 by providing an adequate distance between them.
-----	:<>Err.0	This error can be seen when attempting to set any of the parameters with incorrect data values.
-----	:<>Err.U	This error can be seen when attempting to set any of the parameters with incorrect data values.

8.3 Tripped Status Monitoring


Tripped status monitoring displays abnormal status conditions that can occur during normal inverter operation. The table below shows these abnormal conditions which will cause the inverter to trip "off" (stop normal operations). They are usually caused by excessive power dissipation in either the inverter or motor, or by other circuit abnormalities. A tripped status monitoring display usually appears during the time that the abnormal condition is occurring and then remains on the display after the inverter trips off. The inverter will remain off and the tripped status will remain displayed until the inverter is attended to (reset) by the operator. Most conditions, which cause the inverter to trip, occur very rapidly and the operator usually will not be aware that the trip conditions are in process until the inverter has stopped. Each of the trip statuses are automatically recorded in the non-volatile EEPROM memory of the inverter. An ordered semi-permanent record of each trip (up to four) is created and can be viewed during the normal status monitoring "scroll". These recorded trips are viewed immediately after the keypad's software version, in the order that they occurred, as the **READ/WRITE** key is pressed. These trips remain in the memory until replaced by new trips.

Key	Display	Status Condition
-----	OC1	* Overcurrent occurred during an acceleration.
-----	OC2	* Overcurrent occurred during a deceleration.
-----	OC3	* Overcurrent occurred during a run.
-----	OCR	Overcurrent detected at start-up (suspect inverter damage).
-----	OCL	Overcurrent detected at start-up (suspect load short circuit).
-----	OP2	* Overvoltage generated during deceleration.
-----	OP	* Overvoltage from power supply.
-----	OL	* Overload of motor occurred.
-----	OH	Overheat of inverter body or external fault occurred.
-----	EF	Ground fault overcurrent occurred in the load circuit.
-----	Err.2	Main RAM in main CPU is abnormal.
-----	Err.3	Main ROM in main CPU is abnormal.
-----	Err.4	RAM in operating panel CPU is abnormal.
-----	Err.5	ROM in operating panel CPU is abnormal.
-----	Err.6	Key in the operating panel keypad defective.
-----	EEP	EEPROM data abnormality.
-----	EEP2	EEPROM trip data abnormality.
-----	EEP3	EEPROM setting data abnormality.
-----	Err.t	Communication data link abnormality.

* These faults can be programmed to automatically restart

8.4 Input Terminal Status Code

 The table below shows the status codes when contact closures are placed across the input terminals. JOG(SS2) and AD2(SS3) are multi-functional terminals. The correct terminal input representation is determined by setting the Input Selection function [:l.tb]. Refer to Item 5 on page 7-3 and Terminal Block details on page 5-5. A reading such as the example below indicates that terminal ST-CC has a closed contact across it. If input terminal select [:l.tb]=3 then terminal JOG(SS2)=JOG, terminal AD2(SS3)=AD2, and they are both open contact.



Display	RR-CC	ST-CC	F-CC	R-CC	Display	SS1-CC	JOG-CC (SS2)	AD2-CC (SS3)	RST-CC
0	OFF	OFF	OFF	OFF	0	OFF	OFF	OFF	OFF
1	OFF	OFF	OFF	ON	1	OFF	OFF	OFF	ON
2	OFF	OFF	ON	OFF	2	OFF	OFF	ON	OFF
3	OFF	OFF	ON	ON	3	OFF	OFF	ON	ON
4	OFF	ON	OFF	OFF	4	OFF	ON	OFF	OFF
5	OFF	ON	OFF	ON	5	OFF	ON	OFF	ON
6	OFF	ON	ON	OFF	6	OFF	ON	ON	OFF
7	OFF	ON	ON	ON	7	OFF	ON	ON	ON
8	ON	OFF	OFF	OFF	8	ON	OFF	OFF	OFF
9	ON	OFF	OFF	ON	9	ON	OFF	OFF	ON
A	ON	OFF	ON	OFF	A	ON	OFF	ON	OFF
b	ON	OFF	ON	ON	b	ON	OFF	ON	ON
c	ON	ON	OFF	OFF	c	ON	ON	OFF	OFF
d	ON	ON	OFF	ON	d	ON	ON	OFF	ON
E	ON	ON	ON	OFF	E	ON	ON	ON	OFF
F	ON	ON	ON	ON	F	ON	ON	ON	ON

ON: Implies a closed contact or short between terminals.
 OFF: Implies an open contact or no connection between terminals.

Terminal

Connections Inverter's Status when terminal connections are closed (ON).


- RR-CC (See reference signal terminal connections on page 5-6).
- ST-CC RUN ENABLED (**Must be connected to run**)
- F-CC FORWARD RUN ENABLED
- R-CC REVERSE RUN ENABLED

If both F-CC and R-CC are on then a REVERSE RUN IS ENABLED.

- SS1-CC MULTI-SPEED RUN ENABLED
- SS2-CC MULTI-SPEED RUN OR JOG RUN ENABLED (Dependent upon SS2's usage)
- SS3-CC MULTI-SPEED RUN OR ACC/DEC 2 ENABLED (Dependent upon SS3's usage)
- RST-CC RESET MODE ENABLED (Reset occurs after momentary contact closure)

8.5 Output Terminal Status Code

The table below shows the status codes of the open collector transistor outputs. RCH(UL) and LOW(LL) are multi-functional terminals. The correct terminal output representation is determined by setting the Output Selection function [:0.tb]. Refer to Item 6 on page 7-3 and Terminal Block details on page 5-5. If output terminal select [:0.tb]=2 then terminal RCH(UL)=RCH and terminal LOW(LL)=LL. A reading such as the example below indicates that terminals RCH and LL are "on" (collector shorted to ground).

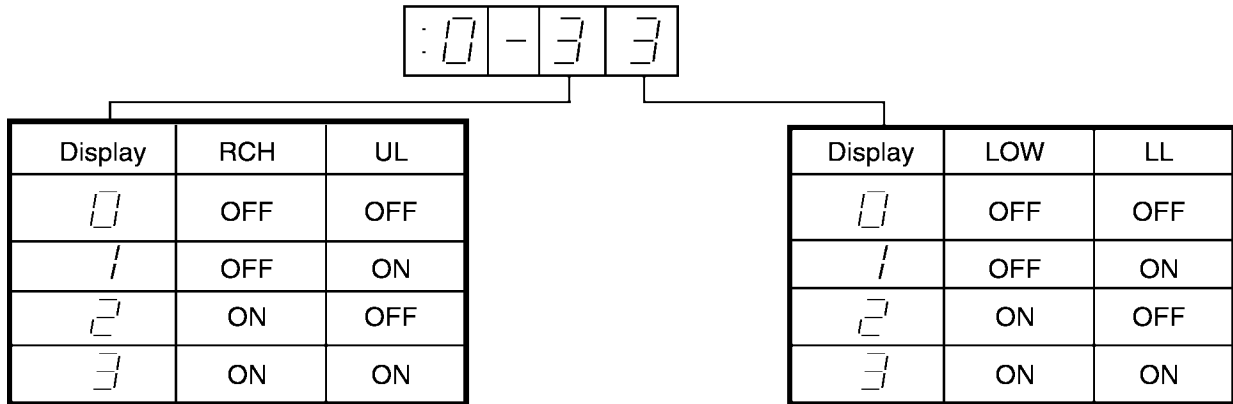

- RCH: Output frequency is within the set reach frequency range or acc/dec is complete.
- LOW: Output frequency is equal to or greater than low speed frequency.
- UL: Output frequency has reached the upper limit frequency (UL).
- LL: Output frequency is equal to or greater than the lower limit frequency (LL).

9.0 Keypad Operating Functions

This section discusses keypad operating functions. All of the functions that can be accessed through the keypad, are discussed. The functions are listed and discussed in the order in which they are accessed. The item number identifier following the function is used for ease of location in the System Parameters Adjustment Range and Factory Settings (see section 7.2).

9.1 SETUP PARAMETERS

ACCELERATION TIME #1 (ITEM 1) - Sets the time required to accelerate from 0Hz to the maximum frequency (FH) set by function [:FH]. **Setting this time to low can cause undue stress and over current tripping of the drive.**

DECELERATION TIME #1 (ITEM 2) - Sets the time required to decelerate from maximum frequency (FH) to 0Hz. **Setting this time to low can cause undue stress and over voltage tripping of the drive.**

UPPER FREQUENCY LIMIT (ITEM 3) - Sets the upper frequency limit of applications. The inverters frequency can be increased up to this upper limit and cannot be increased any further. **The value of the maximum safe frequency (FH) must be equal to or greater than the upper frequency limit.**

LOWER FREQUENCY LIMIT (ITEM 4) - Sets the lower frequency limit of applications. The inverters frequency can be decreased down to this lower limit and cannot be decreased any further without stopping or resetting the lower limit.

TERMINAL IV REFERENCE POINT # 1 (ITEM 5) - Sets the percentage of the input signal on terminal IV which is used to reference the # 1 output frequency (P1) designated by function [F-P1]

POINT # 1 OUTPUT FREQUENCY (ITEM 6) - Sets the output frequency used for reference point function [FP-1].

TERMINAL IV REFERENCE POINT # 2 (ITEM 7) - Sets the percentage of the input signal on terminal IV which is used to reference the # 2 output frequency designated by function [F-P2]



POINT # 2 OUTPUT FREQUENCY (ITEM 8) - Sets the output frequency used for reference point [FP-2].

ELECTRONIC THERMAL PROTECTION LEVEL (ITEM 9) - Sets the thermal overload detection level to match the ratings and characteristics of the motor being used (10 to 100% of rated output current). **The inverter can run at 110% continuously and may cause unnecessary motor overheating unless this compensation is used.**

STALL PREVENTION ACTIVATION LEVEL (ITEM 10) - Sets the activation level of the stall protection function (90 to 120% of rated output current). When the stall level is reached the inverter begins a soft stall procedure by lowering the frequency and voltage to prevent overcurrent tripping. Once the soft stall procedure starts the output current will be clocked. If output current is not reduced within a specified time a fault will occur. The soft stall function is particularly useful in situations where load current decreases as the revolution speed decreases (fan and pump equipment). This function is activated through the Electronic Thermal Protection Select (:SEL4). **Instantaneous trip current limits are factory set and are dependent upon inverter size as well as the motor ripple current.**

9.1 SETUP PARAMETERS (cont'd)

ELECTRONIC THERMAL PROTECTION SELECT (ITEM 11) - Select standard motor or Vf motor with or without soft stall as shown in the following overload detection curves.

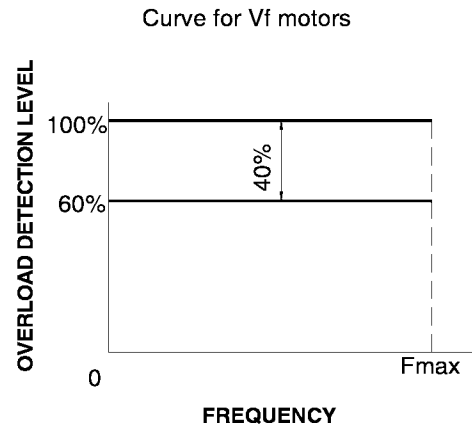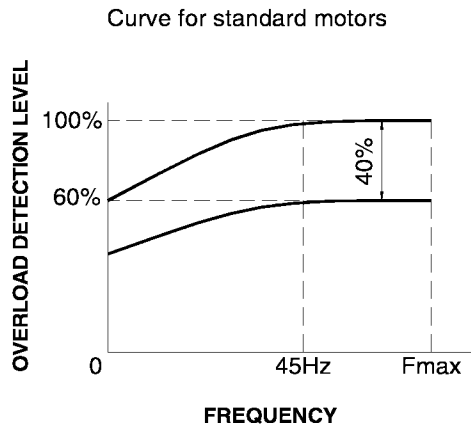

9.2 USER GROUP PARAMETERS

MAXIMUM FREQUENCY (ITEM 1) - This parameter sets the output frequency to a maximum value. It is very important that this factory setting not be changed without first checking the maximum operating speed of the motor and load equipment.

Overspeeding of the motor can cause serious damage to the motor and/or the driven load equipment.

AUTOMATIC TORQUE BOOST (ITEM 2) - Automatically increases the percentage of voltage boost when starting torque requirements are abnormally high.

TORQUE BOOST (ITEM 3) - Increases the voltage (voltage boost) to the motor for increased starting torque.


BASE FREQUENCY OF MAXIMUM VOLTAGE LEVEL (ITEM 4) - Sets the base operating frequency at which the output voltage is 100%.

STANDARD SETTING MODE SELECTION (ITEM 5) - This parameter automatically enters the optimum settings for operating either a 50Hz or 60Hz motor or factory default settings. ***A reset to factory settings can be made from this parameter.***

ACCELERATION TIME #2 (ITEM 6) - Sets an alternate time required to accelerate from 0Hz to the maximum frequency (FH). Use function [:SEL2] to select either acceleration time #1 or #2. ***Setting this time to low can cause undue stress and over current tripping of the drive.***

DECELERATION TIME #2 (ITEM 7) - Sets the time required to decelerate from maximum safe frequency (FH) to 0Hz. Use function [:SEL2] to select either deceleration time #1 or #2. ***Setting this time to low can cause undue stress and over voltage tripping of the drive.***

PATTERN OF ACC/DEC #1 (ITEM 8) - Select one of three output frequency patterns. These patterns are shown in the pattern curves below. Use function [:SEL2] to select either acc/dec pattern #1 or #2.

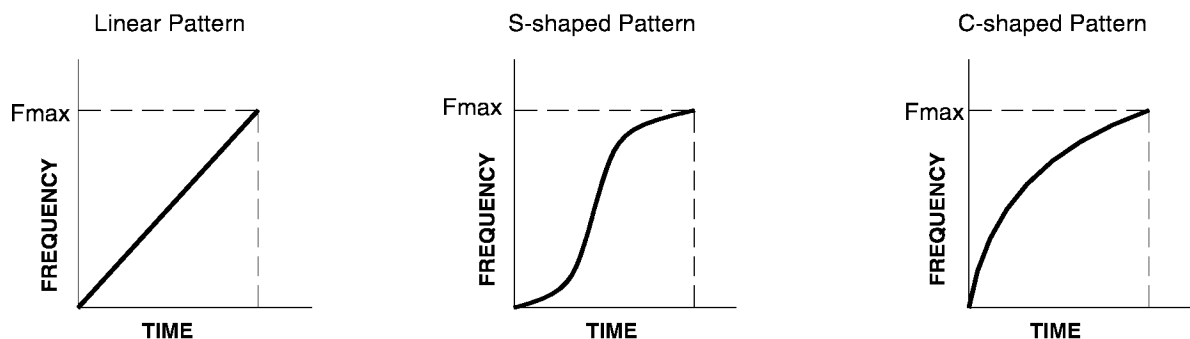

The Linear pattern accelerates linearly.

The S-shaped pattern gradually accelerates a motor in a range where the motor provides a low torque. This is particularly suited for material handling machinery.

The C-shaped pattern quickly accelerates a motor in a range where the motor provides a low torque. This is well suited for a high speed run.


9.2 USER GROUP PARAMETERS (cont'd)

PATTERN OF ACC/DEC #2 (ITEM 9) - Select as an alternate one of the three output frequency patterns. These patterns are the same as those for acc/dec pattern #1 and are shown in the pattern curves from the previous page. Use function [:SEL2] to select either acc/dec pattern #1 or #2.


SELECTION TO USE ACC/DEC #1 OR #2 (ITEM 10) - Use this function to select either acc/dec #1 or acc/dec #2.

V/F PATTERN (ITEM 11) - Use this function to select either constant or variable torque. The V/f characteristic may be set for constant torque loads, resulting in a linear relationship between output voltage and frequency. The setting for variable torque loads sometimes results in energy savings and lower motor noise, if the application is suitable. Fans and centrifugal pumps are the most common types of loads associated with the variable torque load V/f pattern.

V/f Curve for constant torque

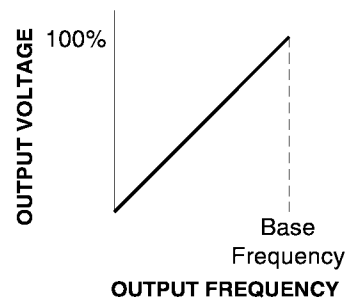

V/f Curve for variable torque

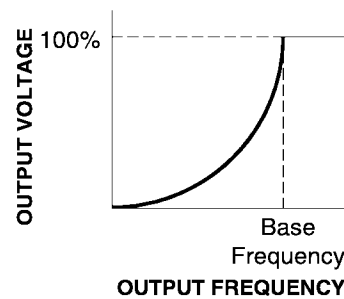

TIMED STOP/COAST TO STOP SELECTION (ITEM 12) - Use this function to select either a timed deceleration to a stop or a power off coast to a stop.

PERSONAL LOCK OUT CODE (ITEM 13) - Use this function to establish a security entry code for programming the inverter functions. This function locks out access to the PRG and SETUP parameters. **Removal of power does not remove the security lock feature. Remember the code.** In order to clear "personal lock out code" press and continue to hold the CLEAR key while pressing the "up" arrow key. Press the "up" arrow key to scroll to the **correct** code number and then press the WRITE key.

9.3 COMMUNICATION GROUP PARAMETERS

AUTOMATIC RESTART AFTER INSTANTANEOUS POWER FAILURE SELECTION (ITEM 1) - Use this function to select auto-restart on or off. When selected, the inverter will automatically restart into a free-rotating motor. This restart will occur only after an instantaneous power interruption has occurred. The function allows the inverter to sample the speed of the free-rotating motor at the end of the interruption and output a matching frequency when power is reapplied. This assures smooth restarts of a free-running motor when an instantaneous power loss has occurred such as when the system is switched from a commercial bypass run to an inverter run.

AUTOMATIC RESET SELECTION (ITEM 2) - When this function is selected, the inverter will automatically try to reset itself and restart the motor when a protective function activates fault trip. The following chart shows the auto-reset procedure for over-current and over-voltage fault trips.

AUTO RESET CONDITIONS

Cause of fault	Reset Process	Reset Failure Conditions
Overcurrent Overload	Tries to restart 5 times in succession 1st restart: 1 sec. after problem occurs. 2nd restart: 2 sec. after 1st restart. 3rd restart: 4 sec. after 2nd restart . 4th restart: 8 sec. after 3rd restart. 5th restart: 16 sec. after 4th restart.	The reset process follows this chart unless a fault, other than those listed, occurs. If this happens the inverter will not try to reset.
Overvoltage	Trips, displays OP, sets fault relay until overvoltage condition is removed. Fault relay will be cleared after reset.	

If the inverter is able to reach the original operating speed where the trip occurred, while trying to restart, then the reset process counter resets to zero. The process now begins again from 1st restart even if the original overcurrent condition still exists. While preparing for a reset, the auto-reset function causes the fault code "0.0" to be displayed alternately on the monitor display. Fault detection signals are not output during the reset process. If the cause of the failure has not been corrected, then the intervals before each attempted reset will be prolonged (See above chart). ***If the load exhibits an extremely large amount of inertia, automatic restart using the above procedure may not work.***

No restart is tried when any of the following messages are displayed:

- "OCA" Overcurrent (transistor short-circuit at start-up)
- "OCL" Overcurrent (load end short-circuit at startup)
- "EF" Ground fault
- "E" Emergency stop
- "EEP" EEPROM failure



CAUTION

Before using the automatic reset function, check to be certain that the auto-reset procedure will not damage or otherwise cause problems for the load equipment when the restart operations are being executed.

9.3 COMMUNICATION GROUP PARAMETERS (cont'd)

POWER FAILURE FUNCTION SELECTION (ITEM 3) - When this function is selected, the inverter will use the regenerative energy of a running motor to extend the power off ride through capability during momentary power dropouts (approximately 100mS). There are some cases when continuous operation is not possible due to the machines's inertia or load status, so this feature should be used in combination with the retry function.

This function is valid only on the 230 volt units.

FAULT TRIP DATA RETENTION SELECTION (ITEM 4) - This function can be set to store trip data in the EEPROM. The trip status data stored in this manner is available for observation while occurring or anytime after the drive has tripped. If the trip data is stored in this manner then the drive can only be started by manually resetting the drive [:typ]=3. See Tripped Status Monitoring Page 8-3.

INPUT TERMINAL SELECTION (ITEM 5) - Use this parameter to configure the inverter to recognize functional combinations of terminal inputs SS2, SS3, JOG, and AD2. See Input Terminal Operation Chart on page 10-1. This chart shows all of the combinations and the way that operating frequency can be selected by shorts or opens across these terminal inputs.

OUTPUT TERMINAL SELECTION (ITEM 6) - Use this parameter to configure the inverter for output functional combinations of terminals LL, UL, LOW, and RCH. See Output Terminal Operation Chart on page 10-1. This chart shows output configurations that can be assigned to these terminals.

OPTION CARD MULTI-FUNCTIONAL SELECTIONS (ITEM 7) - Use this function to select various configurations for the optional "Multi-function Printed Circuit Board".

This is used only when the "Multi-Functional Option Board" is installed.

INVERTER NUMBER (ITEM 8) - Use this function to select a number between 0 and 31 to assign the inverter. This will electronically "tag" the inverter when operating on a serial bus with other inverters. ***This is used only when the "Multi-Functional Option Board" is installed.***

BAUD RATE (ITEM 9) - Use this function to select the serial communication bit transfer rate. ***This is used only when the "Multi-Functional Option Board" is installed.***

COMMUNICATION DATA BITS (ITEM 10) - Use this function to select the serial communication bit word length in the communication protocol. ***This is used only when the "Multi-Functional Option Board" is installed.***

COMMUNICATION PARITY CHECK AND STOP BIT (ITEM 11) - Use this function to select the serial communication protocol. ***This is used only when the "Multi-Functional Option Board" is installed.***

PWM CARRIER FREQUENCY (ITEM 12) - Use this function to select the pulse width modulated carrier frequency. The acoustic noise of the motor changes when the PWM carrier frequency is changed. Changing the carrier frequency is usually effective in quieting the mechanical vibration noise caused when a resonance occurs at the load machine fan cover. Other system characteristics are also affected by the carrier frequency. Higher carrier frequencies cause additional heating of the inverter because of faster transistor switching speeds. ***Overheating of the inverter may become a problem at higher carrier frequencies and extremely heavy loads.*** Consult factory before changing.

9.4 JUMP FREQUENCY GROUP PARAMETERS

JUMP FREQUENCY #1 (ITEM 1) - Use this function to set the beginning point of a frequency bandwidth to be skipped when running a motor. This function is to be used in conjunction with the bandwidth which is set by Jump Width #1. This function is to be used when a certain frequency is to be avoided, such as the resonance frequency of a loaded machine. Frequency jump does not engage when either accelerating or decelerating through the programmed frequencies and bandwidths. It does prevent a frequency setting from running continuously in one of the bandwidths assigned to be locked out by this procedure.

JUMP WIDTH #1 (ITEM 2) - Use this function to set the bandwidth for Jump Frequency #1.

JUMP FREQUENCY #2 (ITEM 3) - Use this function to set the beginning point of a second frequency bandwidth to be skipped when running a motor. This function is to be used in conjunction with the bandwidth which is set by Jump Width #2. This function should be used when a second resonant frequency should be avoided.

JUMP WIDTH #2 (ITEM 4) - Use this function to set the bandwidth for Jump Frequency #2.

JUMP FREQUENCY #3 (ITEM 5) - Use this function to set the beginning point of a third frequency bandwidth to be skipped when running a motor. This function is to be used in conjunction with the bandwidth which is set by Jump Width #3. This function should be used when a third resonant frequency should be avoided.

JUMP WIDTH #3 (ITEM 6) - Use this function to set the bandwidth for Jump Frequency #3.

PID SETPOINT CONTROL SELECT (ITEM 7) - Use this function to select proportional, integral, or differential gain (PID) either "on" or "off". This function is to be used in conjunction with the following functions of Proportional Gain, Differential Gain, and Integral Gain.

PROPORTIONAL GAIN (ITEM 8) - Use this function to set the gain of the PID control input signal.

INTEGRAL GAIN (ITEM 9) - Use this function to adjust the period of integration when comparing the set point to the feedback signal.

DIFFERENTIAL GAIN (ITEM 10) - Use this function to adjust the differential gain and stabilize the system when "hunting" occurs.

LAG TIME CONSTANT (ITEM 11) - Use this function to adjust the time of response when a change in the feedback signal occurs.

9.5 DISPLAY GROUP PARAMETERS

UNIVERSAL UNIT MULTIPLICATION FACTOR (ITEM 1) - The LED display can be changed to display values other than Hz. Revolution and linear speed such as RPM can be displayed. Use this function as a multiplication or division (fractional multiplication) scaler to convert to other units.

LOW SPEED DETECTION (ITEM 2) - Use this function to setup a low speed signal output. This function allows the drive to signal when the output frequency is greater than or equal to the selected "low speed frequency". The LOW(LL) terminal (see control/driver terminal block details on page 5-5) is normally the high impedance state of an open collector transistor. This terminal will go low (ground) when the low speed detection frequency is reached.

SPEED REACH SELECTION (ITEM 3) - Selects the option to output a signal when an acc/dec is complete or when the output frequency is within a selected range. The RCH(UL) terminal (see control/driver terminal block details on page 5-5) is normally the high impedance state of an open collector transistor. This terminal will go low (ground) when the speed reach detection frequency is reached. ***If a frequency range is selected then "Speed Reach Detection Range" and "Speed Reach Reference" functions should also be set.***

SPEED REACH DETECTION RANGE (ITEM 4) - Use this function to specify a range of frequencies, above and below the speed reach reference frequency. When the output frequency is within this range terminal RCH(UL) will be "on". See functions "Speed Reach Selection" and "Speed Reach Reference".

SPEED REACH REFERENCE (ITEM 5) - Use this function to set the speed reach detection frequency in the center of the speed reach detection range. See functions "Speed Reach Selection" and "Speed Reach Detection Range".

DC INJECTION VOLTAGE START FREQUENCY (ITEM 6) - Use this function to set the frequency at which DC injection voltage will begin to be applied to a motor during a decelerating stop. This function is used for precise positioning (inching) of the motor driven equipment. Use this function in conjunction with functions "DC Injection Voltage" and "DC Injection Time".

DC INJECTION VOLTAGE (ITEM 7) - Use this function to specify the percentage of total DC injection to apply during the injection time. Use this function in conjunction with functions "DC Injection Voltage Start Frequency" and "DC Injection Time".

DC INJECTION TIME (ITEM 8) - Use this function to specify the length of time that the DC injection voltage is to be applied. Use this function in conjunction with functions "DC Injection Voltage" and "DC Injection Voltage Start Frequency".

OUTPUT VOLTAGE REGULATION (ITEM 9) - This function allows the V/f characteristics to be set for a motor with a lower rated voltage by setting the V/f characteristics for 100% output voltage and then proportionally reducing the output voltage to the required level. An output voltage greater than the input voltage is not possible but the output voltage can be reduced proportionally to the input voltage.

OVERVOLTAGE STALL PROTECTION SELECT (ITEM 10) - Use this function to select an automatic lengthening of the deceleration time. ***Large inertia loads and/or rapid deceleration can create motor regeneration overvoltage on the DC bus. This condition can cause a trip and use of this function should be considered.***

9.6 SPEED GROUP PARAMETERS

AC LINE/INVERTER TRANSFER SIGNAL (ITEM 1) - Use this function to setup the inverter to allow a motor load to be transferred between the inverter and the AC line power by a signal to the inverter. ***This is used only when the "Multi-Functional Option Board is installed.***

MULTISPEED RUN FREQUENCY #1 (ITEM 2) - Use this function to set up 1st of 7 preset speed frequencies SR1. ***This frequency is run by input terminal connections.*** See Input Terminal Operations Page 10-1.

MULTISPEED RUN FREQUENCY #2 (ITEM 3) - Use this function to set up 2nd of 7 preset speed frequencies SR2. ***This frequency is run by input terminal connections.*** See Input Terminal Operations Page 10-1.

MULTISPEED RUN FREQUENCY #3 (ITEM 4) - Use this function to set up 3rd of 7 preset speed frequencies SR3. ***This frequency is run by input terminal connections.*** See Input Terminal Operations Page 10-1.

MULTISPEED RUN FREQUENCY #4 (ITEM 5) - Use this function to set up 4th of 7 preset speed frequencies SR4. ***This frequency is run by input terminal connections.*** See Input Terminal Operations Page 10-1.

MULTISPEED RUN FREQUENCY #5 (ITEM 6) - Use this function to set up 5th of 7 preset speed frequencies SR5. ***This frequency is run by input terminal connections.*** See Input Terminal Operations Page 10-1.

MULTISPEED RUN FREQUENCY #6 (ITEM 7) - Use this function to set up 6th of 7 preset speed frequencies SR6. ***This frequency is run by input terminal connections.*** See Input Terminal Operations Page 10-1.

FIRE SPEED OVERRIDE FREQUENCY (ITEM 8) - Use this function to set up 7th of 7 preset speed frequencies SR7. ***This frequency is run by input terminal connections.*** See Input Terminal Operations Page 10-1.

9.7 PATTERN FREQUENCY GROUP PARAMETERS

FORWARD/REVERSE ROTATION SELECT (ITEM 1) - Use this function to select between a forward or reverse motor rotation.

PRIORITY OF RR TERMINAL INPUT (ITEM 2) - Use this function to activate the terminal, either IV or RR, into which the analog reference signal will be input.

MODE FOR PATTERN RUN (ITEM 3) - Use this function to select where the start command will come from.

TIME UNIT FOR PATTERN RUN TIME SELECT (ITEM 4) - Use this function to select the time units to be used in the pattern run.

QUANTITY OF PATTERN RUN CYCLES (ITEM 5) - Use this function to setup the number of times that a pattern run is to be repeated.

PATTERN #1 RUN TIME (ITEM 6) - Use this function to set the run time of the preset speed frequency SR1.

PATTERN #1 DRIVE CHARACTERISTIC (ITEM 7) - Use this function to select the type of run for preset speed frequency #1. The selection can be a forward or reverse run, using either ACC/DEC #1 or ACC/DEC #2.

PATTERN #2 RUN TIME (ITEM 8) - Use this function to set the run time of the preset speed frequency SR2.

PATTERN #2 DRIVE CHARACTERISTIC (ITEM 9) - Use this function to select the type of run for preset speed frequency #2. The selection can be a forward or reverse run, using either ACC/DEC #1 or ACC/DEC #2.

PATTERN #3 RUN TIME (ITEM 10) - Use this function to set the run time of the preset speed frequency SR3.

PATTERN #3 DRIVE CHARACTERISTIC (ITEM 11) - Use this function to select the type of run for preset speed frequency #3. The selection can be a forward or reverse run, using either ACC/DEC #1 or ACC/DEC #2.

PATTERN #4 RUN TIME (ITEM 12) - Use this function to set the run time of the preset speed frequency SR4.

PATTERN #4 DRIVE CHARACTERISTIC (ITEM 13) - Use this function to select the type of run for preset speed frequency #4. The selection can be a forward or reverse run, using either ACC/DEC #1 or ACC/DEC #2.

PATTERN #5 RUN TIME (ITEM 14) - Use this function to set the run time of the preset speed frequency SR5.

PATTERN #5 DRIVE CHARACTERISTIC (ITEM 15) - Use this function to select the type of run for preset speed frequency #5. The selection can be a forward or reverse run, using either ACC/DEC #1 or ACC/DEC #2.

9.7 PATTERN FREQUENCY GROUP PARAMETERS (cont'd)

PATTERN #6 RUN TIME (ITEM 16) - Use this function to set the run time of the preset speed frequency SR6.

PATTERN #6 DRIVE CHARACTERISTIC (ITEM 17) - Use this function to select the type of run for preset speed frequency #SR6. The selection can be a forward or reverse run, using either ACC/DEC #1 or ACC/DEC #2.


PATTERN #7 RUN TIME (ITEM 18) - Use this function to set the run time of the preset speed frequency SR7 (Firespeed Override Frequency).

PATTERN #7 DRIVE CHARACTERISTIC (ITEM 19) - Use this function to select the type of run for preset speed frequency #SR7 (Firespeed Override Frequency). The selection can be a forward or reverse run, using either ACC/DEC #1 or ACC/DEC #2.

JOG FREQUENCY (ITEM 20) - Use this function to set the frequency at which the inverter will operate while in the jog mode. Used for moving in small increments when precise positioning of motor driven equipment is required.

JOG STOP SELECT (ITEM 21) - Use this function to select between three methods of stopping during a jog run.


START-UP FREQUENCY (ITEM 22) - Use this function to set the frequency at which the inverter will begin operating. In the manual control mode the frequency display will change as the "up" and "down" keys are pressed. However, an actual output does not occur until the start-up frequency is reached. In the terminal input mode the display will remain at zero until the start-up frequency is reached. This function along with the voltage boost function, allows the user to obtain an optimum boost level. See the illustrations below.

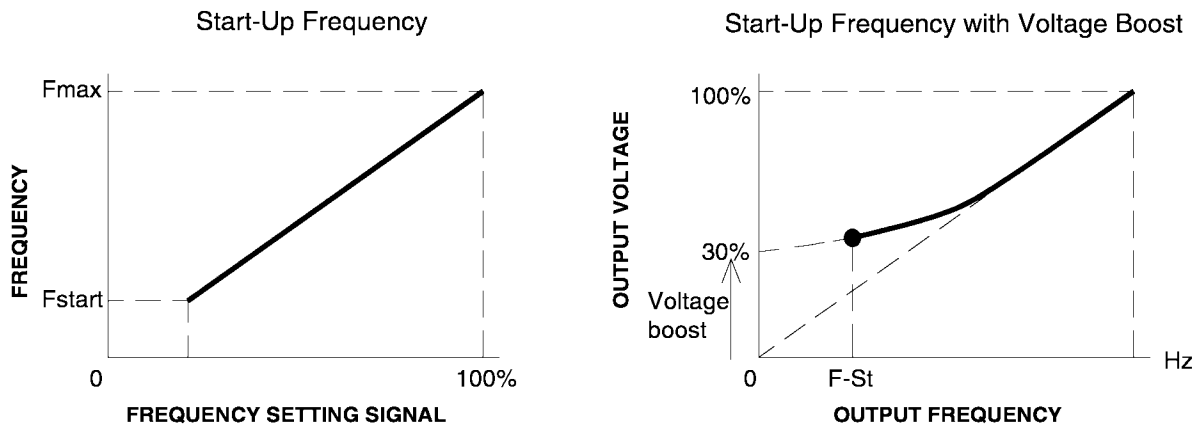

RUN FREQUENCY (ITEM 23) - Use this function to select a frequency to initiate inverter run/stop control.

9.7 PATTERN FREQUENCY GROUP PARAMETERS (cont'd)

RUN FREQUENCY HYSTERESIS (ITEM 24) - Use this function to offset the inverter run frequency. When the frequency reference signal reaches the $F_{run} + F_{hys}$ point, the drive will ramp the motor to that speed. The inverter will continue to follow the reference signal until it falls below the $F_{run} - F_{hys}$ at which time the drive will ramp the motor to a stop. See the illustration below.

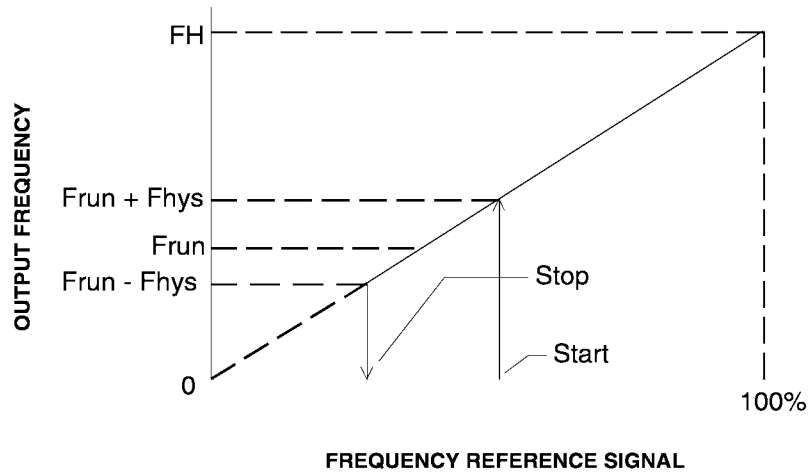

10.0 Input Terminal Operating Functions

Terminal operations are described as those operational features that can be controlled by opening or closing relays (switches) across the terminal block (see Control/Driver Board Terminal Block Details page 5-5). All of the functional combinations which can be accessed by terminal control are discussed in this section. Remote operations from the terminals are possible even if the inverter is in the manual control mode, however many of the terminals are multi-functional (used for more than one function) and must be programmed for a particular application. Also some of the terminals can be program disabled. Many of the operations that can be performed by this inverter require program configuration and use of the terminals. Some of these functions include Jog, Remote preset speeds, Remote meters, Outputting limit signals, and remote start/stop.

10.1 Input Terminal Selection Function

The following chart shows all of the functional combinations for input terminal selection function [I.tb]. See ITEM 5 page 7-3.


Input terminal selection parameter :1.tb	Terminal Connection			Selected operating frequency
	AD2/SS3-CC	JOG/SS2-CC	SS1-CC	
0: SS2, SS3	OFF OFF OFF OFF ON ON ON ON	OFF OFF ON ON OFF OFF ON ON	OFF ON OFF ON OFF ON OFF ON	Operating frequency set via PP, IV, RR terminals 1st speed operating frequency 2nd speed operating frequency 3rd speed operating frequency 4th speed operating frequency 5th speed operating frequency 6th speed operating frequency 7th speed operating frequency
1: JOG, SS3	OFF OFF OFF ON ON	OFF ON OFF OFF OFF	OFF OFF ON OFF ON	Operating frequency set via PP, IV, RR terminals Jogging run operating frequency 1st speed operating frequency 2nd speed operating frequency 3rd speed operating frequency
2: SS2, AD2	ON/OFF ON/OFF ON/OFF ON/OFF	OFF OFF ON ON	OFF ON OFF ON	Operating frequency set via PP, IV, RR terminals 1st speed operating frequency 2nd speed operating frequency 3rd speed operating frequency
3: JOG, AD2	ON/OFF ON/OFF ON/OFF	OFF ON OFF	OFF OFF ON	Operating frequency set via PP, IV, RR terminals Jogging run operating frequency 1st speed operating frequency

Note: When function [I.tb] is set to 2 or 3 the [AD2] function is activated. This function enables the user to remotely switch between the ACC/DEC patterns 1 and 2, provided [SEL2]=0. If [SEL2]=1 then the only pattern available is given by [ACC2], [DEC2], or [Pt.2]. With AD2-CC terminals shorted (ON) all ACC/DEC patterns are run using the settings of the [ACC2], [DEC2], or [Pt.2] parameters.

10.2 Starting/Stopping-Remote Control

The remote STARTING/STOPPING possibilities are identified in the following figure and table.

START/STOP Terminals Connections
(see terminal block detail section 5.6)

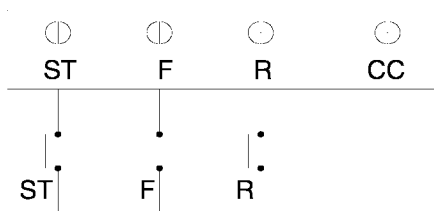

Remote START/STOP Connections Possibilities

Terminal Connection			Action
ST-CC	F-CC	R-CC	
OFF	ON/OFF	ON/OFF	The inverter is OFF. OFF will be displayed. If running when ST-CC is broken the motor will coast to a stop.
ON	OFF	OFF	The inverter is ON but not running.
ON	ON	OFF	The inverter is ON and will run in a FORWARD direction if an input signal is applied.
ON	OFF	ON	The inverter is ON and will run in a REVERSE direction if an input signal is applied.
ON	ON	ON	Same as REVERSE connection above.

* ON = dry contact closure, OFF = dry contact opening

Notes:

- 1) With ST-CC (ON), switching F-CC or R-CC (OFF) will cause the motor to decelerate to a stop.
- 2) If input power is turned off (with MCCB) while inverter is running, the motor will coast to a stop.
Avoid using the input power switch to start and stop the motor use for an emergency stop only.
- 3) Acceleration and Deceleration rates are determined by the preset values of function [:ACC1], [:ACC2] and [:DEC1], [:DEC2].
- 4) When switching from a forward run to a reverse run the motor will decelerate to a stop then accelerate in the reverse direction.

10.3 Emergency Stop From a Remote Location

A SPST normally closed latch-in type of switch should be connected between ST-CC. This switch can then be located in a remote location. When the switch is "toggled" to latch open, the motor will coast to a stop.



CAUTION

Do not toggle this switch ON again until the inverter is turned OFF (the output frequency reads zero) and the motor load has stopped rotating.



10.4 Remote control Frequency Setting

The drive can be run at various frequencies by use of external analog voltage and current control signals applied to terminals IV and RR. The keypad is not used for this operation other than assignment of values and programming instructions. It may be desirable from a security standpoint to disable the touchpad, when programming is completed, so that customer parameters and programming cannot be changed or revised. Use function [:RR.cc] item 2 on page 7-5 to set the terminals. **When the IV input is selected, an auto-mode is in effect so that voltage sensing terminal RR will override current sensing terminal IV if a voltage is applied to terminal RR.** See Terminal/Jumper Connections for Input Reference Signals chart on page 5-6.

10.5 Jog

The jogging frequency is immediately output when the remote JOG is activated. The functions [:JOG] and [:J.StP] must be preset. In addition, the JOG(SS2) terminal must be set for "JOG". This is accomplished by setting the function parameter [:l.tb] to 1 or 3. The terminal connections are shown below:

Terminal Connections Required For Remote Jog

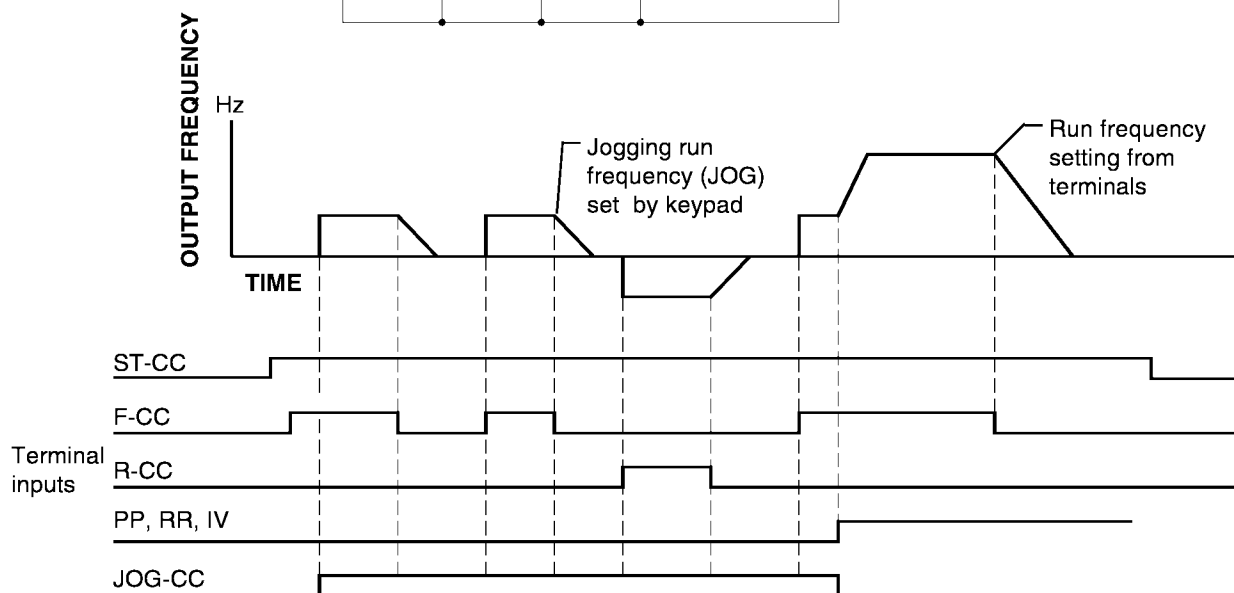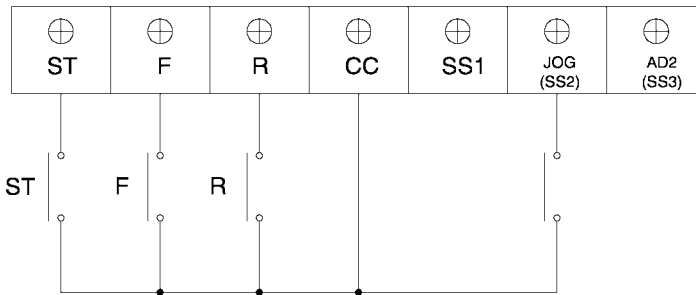

Notes:

- 1) A jogging run cannot be engaged by closing the JOG switch during a run.
- 2) The inverter will decelerate at the selected rate during: deceleration stop, coast to stop, and DC injection stop.
- 3) F-CC must be broken for DC injection to be applied; breaking only JOG(SS2)-CC allows the inverter to accept other input signals and is not a "true" off.
- 4) See table on next page for terminal inputs and actions.

10.6 Resetting After a Trip

Pressing reset on the keypad resets the inverter faults. Momentarily closing a normally open dry contact between terminals RST and COM resets the inverter faults remotely.



CAUTION

When the inverter trips due to an emergency stop or the activation of one or more of its protective functions, the cause of the fault must be corrected before resetting the inverter. A forced restart with out prior fault correction measures could damage the inverter and connected devices.


10.7 Pattern Run

The pattern run enables the user to run up to seven different speeds automatically, in either forward or reverse directions. It is an extension of the seven preset speeds described on page 9-9. Unlike the Preset Speed Function, the user can pre-select the length of time in which the inverter will operate at each frequency (Sr1-Sr7), as well as the acceleration/deceleration pattern used to reach each frequency.


The required preset function parameters are as follows:

- 1) Actual run frequencies (Sr1~Sr7) are located in Speed Group Parameter [:S.PrG] Item 2 through 8.
- 2) The run time for each of these frequencies in the pattern (Pt.1t~Pt.7t) is located in Pattern Frequency Group Parameters [:P.PrG] Item 6, 8, 10, 12, 14, 16, and 18.
- 3) The particular ACC/DEC drive characteristics, including the run direction, to be used is located in Pattern Frequency Group Parameters [:P.PrG] Item 7, 9, 11, 13, 15, 17, and 19.

The following graph shows a sample of a typical pattern run:

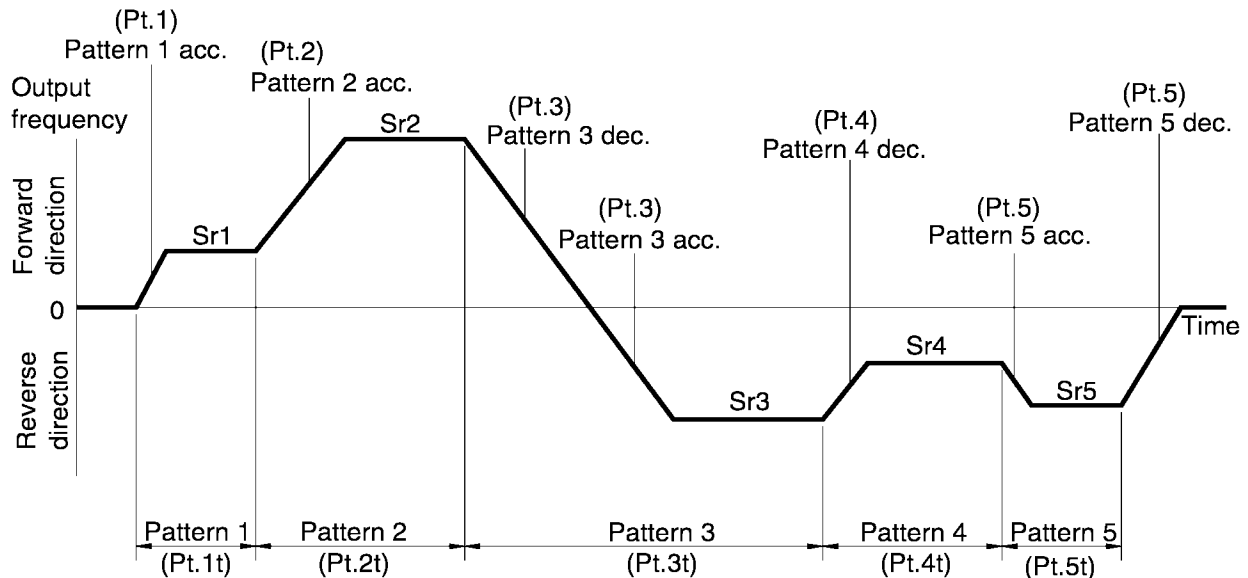


The run time set for each pattern includes the ACC/DEC time required to reach that particular run frequency. Therefore, care must be taken when choosing run times. For example, if the pattern run time is set for 30 seconds and the acceleration time required to reach the preset frequency is 20 seconds, then the actual run frequency would last only 10 seconds.

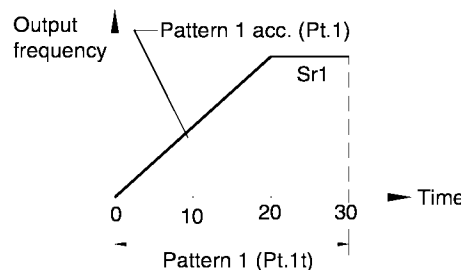

10.8 PID Set Point Control

All Q-Flowsaver II inverters come standard with set point control. The following information shows how to install and adjust the inverter using set point control. The feedback signal should be either 0-5 volts or a 4-20mA current. It is connected to terminals IV and CC. The set point is adjusted by using a potentiometer. The diagram below shows how a potentiometer should be connected to terminals PP, RR, and CC to control the setpoint. Each of these connections are made to the Control/Driver Board terminal block (see detail Page 5-5). The connection diagram below shows the necessary wiring.

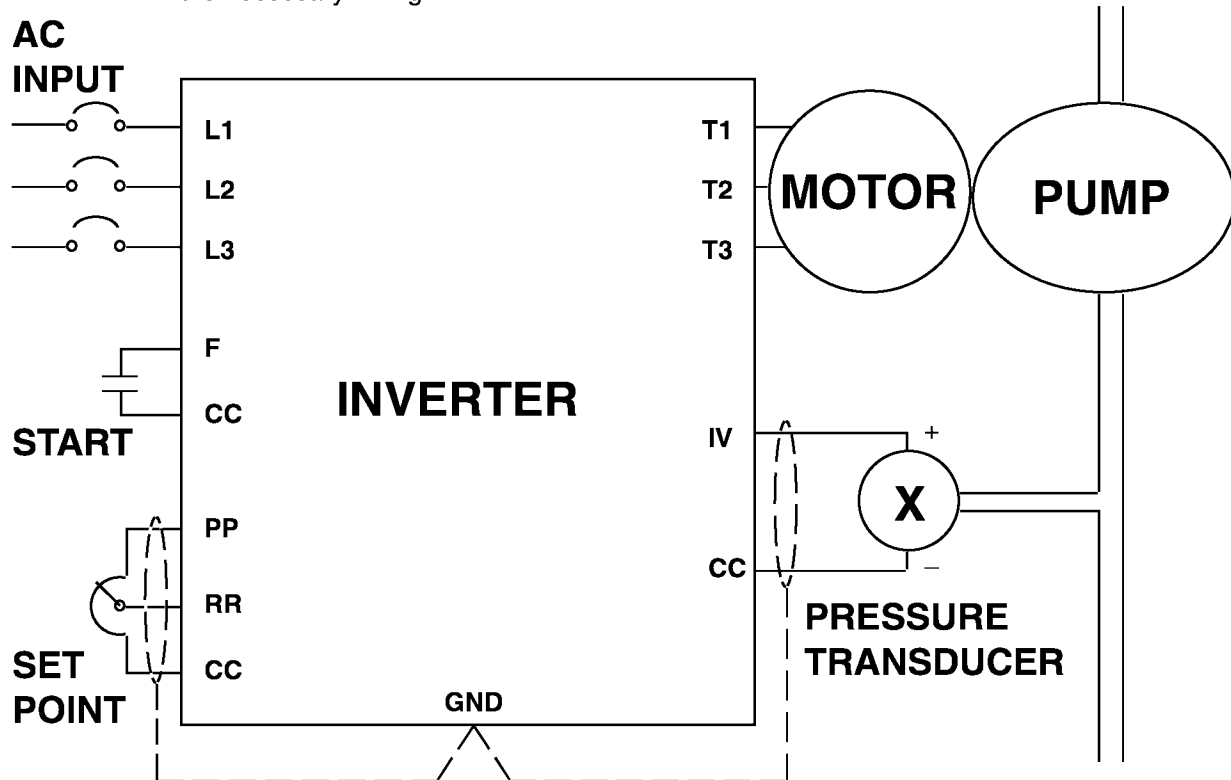

Use the following procedures to adjust the setpoint control parameters:

INITIAL SETUP

- 1) Remove power and place the jumper connections JP1 and JP2 (See detail 1 or 2 Page 5-5 and Jumper/Terminal Connections and Functions Page 5-6) in the correct positions for the type of feedback signal used; power can then be applied again.
- 2) Set acceleration and deceleration times to 5 seconds (see Setup Parameters Item # 1 and 2).
- 3) Adjust the bias and gain for the systems feedback signal. For example, typically the motor slows down when the feedback signal goes above the setpoint. This action can be reversed by exchanging the data between F-P1 and F-P2 (see Setup Parameters Item # 6 and 8).
- 4) Turn on the set point (PID) control (see Jump Frequency Group parameters Item #7).
- 5) Set proportional gain to 250 (see Jump Frequency Group parameters Item #8).
- 6) Set integral gain to 100 (see Jump Frequency Group parameters Item #9).
- 7) Set differential gain to 0 (see Jump Frequency Group parameters Item #10).
- 8) Set lag-time constant to 255 (see Jump Frequency Group parameters Item #11).
- 9) Run system.

10.8 PID Set Point Control (cont'd)

READJUSTMENT

- 1) For faster response time set larger proportional gain, shorter integral gain and/or shorter acceleration and deceleration times.
- 2) To stabilize the system adjust increase anti-hunting gain, increase lag-time constant and/or slow the response time.

HAVING TROUBLE?

Please check the following list. These are things which will cause the PID loop to operate incorrectly.

- 1) **FEEDBACK** - Make sure that the feedback signal has the correct polarity. Make sure that jumpers JP1 and JP2 (See Detail 1 or 2 on Page 5-5) are correctly set.
- 2) **SOFTWARE** - Make sure that the inverter main software is Version 5.3 (see Page 8-1 "Normal Status Monitoring").
- 3) **SETPOINT** - Make sure that the setpoint potentiometer is connected correctly.
- 4) **START** - Make sure that the drive is given a run command by either contact closure or pressing the keypad **RUN** button.

11.0 Output Terminal Operating Functions

The inverter provides terminals for outputting signals to external components. A number of selectable "operating" output signals, as well as "fault" output signals, are available. These output signal terminals are located on the terminal board (See Control/Driver Terminal Block Details on page 5-5).

11.1 Selectable Outputs


The output terminals RCH(UL) and LOW(LL) are multifunctional and are selectable through function [:0.tb] (See item 6 on page 7-3). The type of selections are available as shown below:

- LL Outputs a signal when frequency is greater than or equal to the LL value.
- UL Outputs a signal when frequency is equal to UL value.
- LOW Outputs a signal when frequency is greater than or equal to the LOW SPEED DETECTION VALUE "LF".
- RCH Outputs a signal based upon the selection of the RCH parameters rCH, rrCH, FrCH.


All output signals are open-collector with 50mA_{dc}-24V_{dc} ratings.

The illustrations below show output timing diagrams for the upper and lower frequency limits and for low speed and speed reach signals.


Upper/lower limit frequency signal output

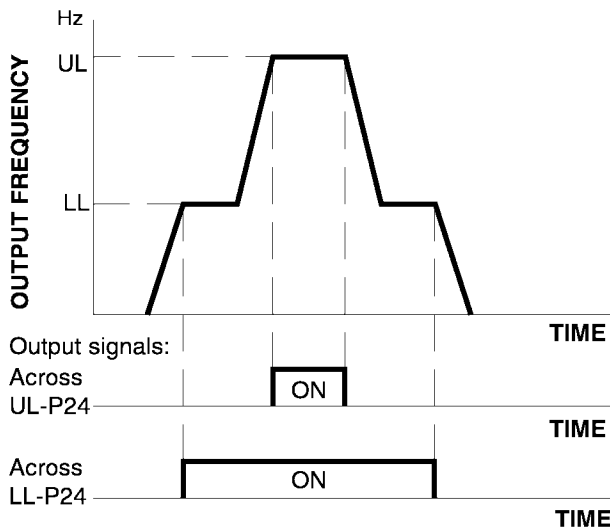

Low speed/speed reach signal output with [:rCH]=0

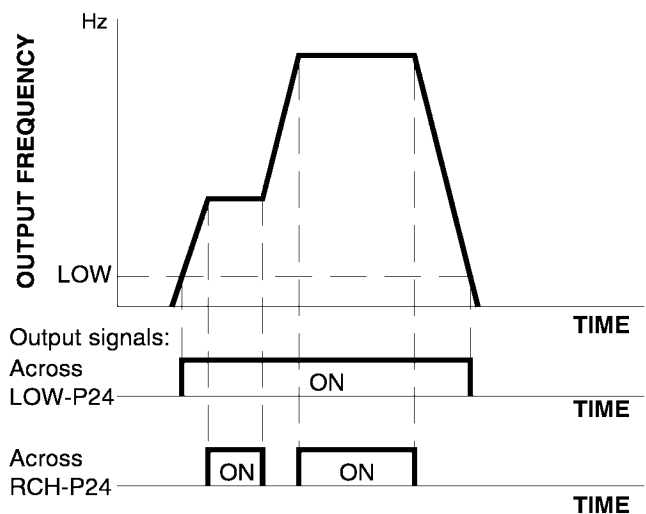


Low speed/speed reach signal output with rCH=1

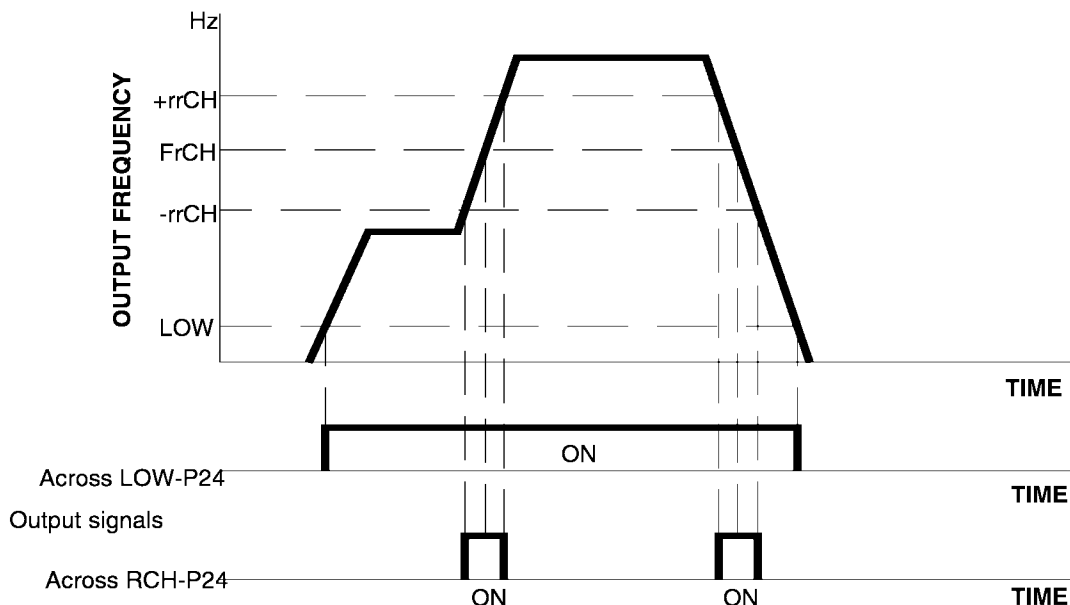

11.2 Inverter to Relay/PC Connections

Terminals RCH (UL) and LOW (LL) of the control circuit terminal block are open collector outputs which float in an open state. When the predesignated frequency has been reached the terminals can sink 24Vdc at 50mA_{dc} to ground. P24 supplies 24Vdc through the relay coils to the RCH (UL) and LOW (LL) terminals for relay activation. Connections are shown below for either relay logic or programmable controller inputs. Notice that there is no difference in the circuits except how the relay outputs are utilized.

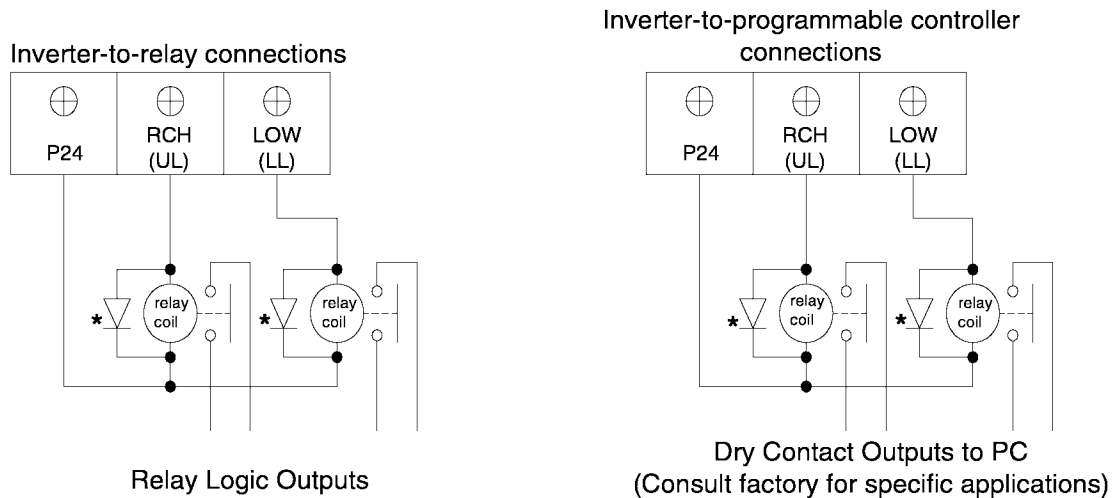


* Free-wheeling diode (Use 1amp 1000PIV or similiar) to be oriented across load so that it does not conduct during normal current flow.

Note:

When an output frequency fluctuates in the vicinity of a frequency to be reached, the reach signal may alternately turn on and off because of the lack of hysteresis in the reach signal.

11.3 Fault-Detection Output Terminals

When any of the inverter's system protection features are activated and the inverter trips (See list of probable causes on Page 8-3), the cause of the problem will be displayed and a fault-detection relay will be activated. This will cause the contacts associated with the Fault-Detection Output Terminals to change state. Three fault detection terminals FLA, FLB, and FLC are provided as a NO, NC form C contact rated for a 250Vac/30Vdc 2A output.

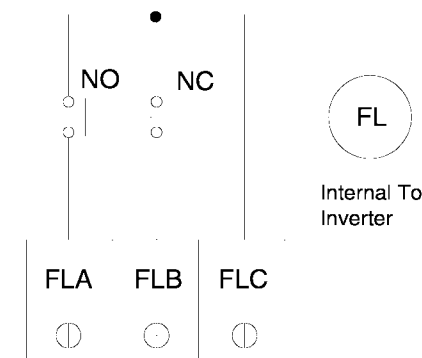


Terminal Connections

11.4 Calibration of Remote Meters

Many times an application requires that a frequency meter (FM) or ammeter (AM) be remotely located. Attachment and calibration of a remote meter is a easy procedure. The meter leads should be connected to the appropriate terminals while observing correct polarity. The calibration of the meter is performed with the inverter keypad while observing the meter. The meter should be zeroed with the set screw before calibrating. If the meter is not visible from the inverter site, then the meter should be viewed periodically as the keypad is adjusted. Also the meter can be connected through a temporary length of cable for easy viewing. This temporary cable should be the same size and length as the permanent cable.

Use the following diagram for connecting a Frequency Meter (FM):

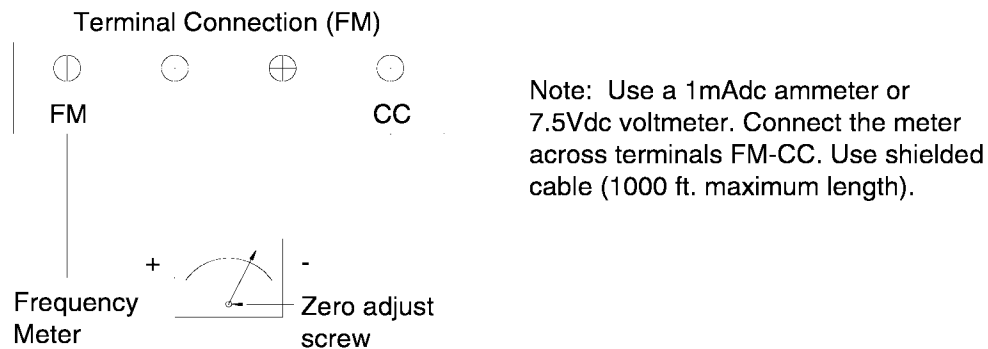


Use the following procedure to calibrate the (FM) meter:

- 1) Start the inverter to output a run frequency such as 60 Hz 60.0
- 2) Press "down" key while pressing **CLEAR/RESET** key to display :F7
- 3) Press the **RUN** key to display :60.0
- 4) Adjust the analog meter reading to match the digital display reading by pressing the "up" or "down" keys.
- 5) Press the **READ/WRITE** key to store this setting to non-volatile EEPROM memory.
- 6) Press the **CLEAR/RESET** key to return to the normal frequency display 60.0

Although the above procedure shows calibration of the remote meter at a running frequency of 60Hz; better resolution of the meter can be obtained if the inverter is running at the maximum frequency. ***The motor load should be disconnected for FM calibration at the highest frequency.***

11.4 Calibration of Remote Meters (cont'd)

Use the following diagram for connecting a Frequency Meter (AM):

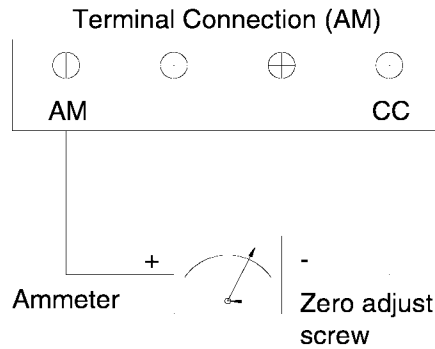

Note: Use a 1mA_{dc} ammeter or 7.5V_{dc} voltmeter. Connect the meter across terminals AM-CC. Use shielded cable (1000 ft. maximum length).

Use the following procedure to calibrate the (AM) meter:

- 1) Start the inverter to output a run frequency such as 60 Hz 60.0
- 2) Press "down" key while pressing **CLEAR/RESET** to display :F7
- 3) Press either the "up" or "down" key to display :A7
- 4) Press the **RUN** key to display : [] [value]
- 5) Adjust the analog meter reading to match the digital display reading by pressing the "up" or "down" keys.
- 6) Press the **READ/WRITE** key to store this setting to non-volatile EEPROM memory.
- 7) Press the **CLEAR/RESET** key to return to the normal frequency display 60.0

12.0 Spare Parts List/After Sales Service

12.1 Requesting After Sales Service

When requesting after-sales service, report the contents of the following PROBLEM INFORMATION SHEET, which will help repair the system quickly.

Problem Information Sheet

Item		
	Customer's name	
Refer to	Person in charge	
	Address	
	Telephone No.	
Inverter spec.	Model No.	
	Serial No.	
	Test No.	
Delivery date		
Time in service		
Date when problem arose		
	Use	
Status of Use	Motor rating	Poles, Hp, V, Hz.
		Made by Toshiba? Made by another company?
		New? Number of units?
	Ambient condition	Alternate? Continuous?
		Indoor? Outdoor? Temperature range?
		Humidity:
		Dust composition and size:
		Presence of salt and extent of corrosion from it:
		Vibrations, in micrometers:
		Presence of corrosive gas:
Availability of air conditioning:		
Phenomenon	Power source	Number of phases:
		Voltage between L1 phase and L2 phase:
		Voltage between L2 phase and L3 phase:
		Voltage between L3 phase and L1 phase:
	State of motor when problem was found	Number of Hz:
		Problem occurred hours after motor had been started. Motor has been stopped for hours.
		Problem occurred during periodic inspection?
		Problem occurred when motor was started?
		Problem occurred during acceleration?
	Frequency of problem	Problem occurred during deceleration?
		Problem occurred while motor was not running?
		First time? Problem occurred times in the past.
	Trouble indicator	Problem occurs sometimes?
Problem occurs every time motor is operated?		
When did problem first occur?		
<input type="checkbox"/> NO DISPLAY <input type="checkbox"/> OC1 <input type="checkbox"/> OC2 <input type="checkbox"/> OC3 <input type="checkbox"/> OCA <input type="checkbox"/> OCL <input type="checkbox"/> OP2 <input type="checkbox"/> OP <input type="checkbox"/> OL <input type="checkbox"/> OH <input type="checkbox"/> EF <input type="checkbox"/> Err.2 <input type="checkbox"/> Err.3 <input type="checkbox"/> Err.4 <input type="checkbox"/> Err.5 <input type="checkbox"/> Err.6 <input type="checkbox"/> EEP <input type="checkbox"/> EEP2 <input type="checkbox"/> EEP3 <input type="checkbox"/> ERR.t		
Detailed description of problem:		
Temporary diagnosis and corrective action:		
Date defective product shipped:		To:
Deadline for repairs:		

12.2 Recommended Spare Parts

RANK	B	B	B	B	B	A	A	A	A	B
INVERTER UNIT	PCB CONTROL	PCB DRIVER	MOV 1-3 SURGE ABSORBER	REC 1-3 BRIDGE RECTIFIER	R21 SOFT START RESISTOR	FU1-1A CONTROL FUSE	FU2 DC SUPPLY FUSE	IGBT 1 - 6	FU R,S,T AC FUSE	DC BUS CAP
Q2-2035	QTY 1 VF3B-0100E	NOT USED	QTY 3 TNR 23G561K	QTY 1 ME400402	QTY 1 20 OHM-20W	NOT USED	*** QTY 1 6JX20	QTY 1 MG25J6ES40	NOT USED	QTY 1 1000 uF 400VDC
Q2-2055	QTY1 VF3B-0100E	NOT USED	QTY 3 TNR 23G561K	QTY 1 ME400403	QTY 1 20 OHM-20W	NOT USED	*** QTY 1 6JX30	QTY 1 MG50J6ES40	NOT USED	QTY 1 1800 uF 400VDC
Q2-2080	QTY 1 VF3B-0100E	NOT USED	QTY 3 TNR 23G561K	QTY 1 50L6P43	QTY 1 10 OHM-30W	NOT USED	**** QTY 1 A050F050	QTY 3 MG50J6YS40	** QTY 3 * A025R040	QTY 1 2700 uF 400VDC
Q2-2110	QTY 1 VF3B-0100F	NOT USED	QTY 3 TNR 23G561K	QTY 1 75L6P43	QTY 1 10 OHM-30W	NOT USED	**** QTY 1 A050F060	QTY 3 MG75J2YS9	** QTY 3 * A025R080	QTY 2 1800 uF 400VDC
Q2-2160	QTY 1 VF3B-0100F	NOT USED	QTY 3 TNR 23G561K	QTY 1 75L6P43	QTY 1 6 OHM-40W	QTY 1 AGC3A	**** QTY 1 A050F080	QTY 3 MG100J2YS40	** QTY 3 * A025R100	QTY 2 2700 uF 400VDC
Q2-2220	QTY 1 VF3B-0100G	NOT USED	QTY 3 TNR 23G561K	QTY 1 100L6P43	QTY 1 6 OHM-40W	QTY 2 AGC3A	** QTY 1 A050F100	QTY 3 MG150J2YS1	** QTY 3 * A025R150	QTY 3 1800 uF 400VDC
Q2-2270	QTY 1 VF3B-0100G2	NOT USED	QTY 3 TNR 23G561K	QTY 1 100L2G43	QTY 2P 10 OHM-30W	QTY 2 AGC3A	** QTY 1 A050F125	QTY 3 MG150J2YS1	** QTY 3 * A025R200	QTY 4 1800 uF 400VDC
Q2-2330	QTY 1 VF3B-0100G2	NOT USED	QTY 3 TNR 23G561K	QTY 3 110L2G43	QTY 2P 10 OHM-30W	QTY 2 AGC3A	** QTY 1 A050F150	QTY 3 MG200J2YS1	** QTY 3 * A025R200	QTY 3 3300 uF 400VDC
Q2-4055	QTY 1 VF3B-0101E	NOT USED	QTY 3 TNR 23G102K	QTY 3 ME701603	QTY 1 100 OHM-20W	QTY 2 ATQ 0.8A 500Vac	** QTY 1 A070F020	QTY 1 MG25Q6ES1	NOT USED	QTY 2 680uF 400VDC
Q2-4080	QTY 1 VF3B-0101E	NOT USED	QTY 3 TNR 23G102K	QTY 3 ME701603	QTY 1 100 OHM-20W	QTY 2 ATQ 0.8A 500Vac	** QTY 1 A070F025	QTY 1 MG25Q6ES1	** QTY 3 * A050F040	QTY 2 1000 uF 400VDC
Q2-4110	QTY 1 VF3B-0101F	NOT USED	QTY 3 TNR 23G102K	QTY 3 ME701603	QTY 1 40 OHM-30W	QTY 2 ATQ 1.6A 500Vac	** QTY 1 A070F040	QTY 3 MG50N2YS40	** QTY 3 * A050F040	QTY 2 1800 uF 400VDC
Q2-4160	QTY 1 VF3B-0101F	NOT USED	QTY 3 TNR 23G102K	QTY 1 50U6P43	QTY 1 40 OHM-30W	QTY 2 ATQ 1.6A 500Vac	** QTY 1 A070F060	QTY 3 MG50N2YS40	** QTY 3 * A050F060	QTY 2 2700 uF 400VDC
Q2-4220	QTY 1 VF3B-0101G	NOT USED	QTY 3 TNR 23G102K	QTY 1 50U6P43	QTY 2S 10 OHM-30W	QTY 2 ATQ 1.6A 500Vac	** QTY 1 A070F060	QTY 3 MG75N2YS40	** QTY 3 * A050F080	QTY 4 1800 uF 400VDC
Q2-4270	QTY 1 VF3B-0101G1	NOT USED	QTY 3 TNR 23G102K	QTY 1 75U6P43	QTY 2S 10 OHM-30W	QTY 2 ATQ 1.6A 500Vac	** QTY 1 A070F080	QTY 3 MG100Q2YS1	** QTY 3 * A050F100	QTY 4 2700 uF 400VDC

12.2 Recommended Spare Parts (cont'd)

RANK	B	B	B	B	B	A	A	A	A	B
INVERTER UNIT	PCB CONTROL	PCB DRIVER	MOV 1-3 SURGE ABSORBER	REC 1-3 BRIDGE RECTIFIER	R21 SOFT START RESISTOR	FU1-1A CONTROL FUSE	FU2 DC SUPPLY FUSE	IGBT 1- 6	FU R,S,T AC FUSE	DC BUS CAP
Q2-4330	QTY 1 VF3B-0101G2	NOT USED	QTY 3 TNR 23G102K	QTY 1 75U6P43	QTY 2S 10 OHM-30W	QTY 2 ATQ 1.6A 500 Vac	** QTY 1 A070F100	QTY 3 MG100Q2YS1	** QTY 3 * A050F100	QTY 4 2700 uF 400VDC
Q2-4400	QTY1 VF3C-1200C	QTY 1 35589X	QTY 3 TNR 23G102K	QTY 1 100U6P43	QTY 2S 6 OHM-40W	QTY 2 ATQ 1.6A 500 Vac	** QTY 1 A070F100	QTY 3 MG150Q2YS1	** QTY 3 * A050F125	QTY 4 2700 uF 400VDC
Q2-4500	QTY 1 VF3C-1200C	QTY 1 35589X	QTY 3 TNR 23G102K	QTY 1 100U2G43	QTY 2S 6 OHM-40W	QTY 2 ATQ 2.5A 500 Vac	** QTY 1 A070F150	QTY 6 MG150Q2YS1	** QTY 3 * A050F150	QTY 4 3300 uF 400VDC
Q2-4600	QTY 1 VF3C-1200C	QTY 1 35589X	QTY 3 TNR 23G102K	QTY 3 110U2G43	QTY 2S+2P 6 OHM-40W	QTY 2 ATQ 2.5A 500 Vac	** QTY 1 A070F150	QTY 6 MG200Q1US1	** QTY 3 * A050F200	QTY 6 3300 uF 400VDC
Q2-4800	QTY 1 VF3C-1200C	QTY 1 35589Q	QTY 3 TNR 23G102K	QTY 3 160U2G43	QTY 2S+2P 6 OHM-40W	QTY 2 ATQ 2.5A 500 Vac	** QTY 1 A070F200	QTY 6 MG200Q1US1	** QTY 3 * A050F250	QTY 8 2700 uF 400VDC
Q2-410K	QTY 1 VF3C-1200C	QTY 1 35589Q	QTY 3 TNR 23G102K	QTY 3 160U2G43	QTY 2S+2P 6 OHM-40W	QTY 2 ATQ 2.5A 500 Vac	** QTY 1 A070F300	QTY 6 MG300Q1US1	** QTY 3 * A050F300	QTY 8 3300 uF 400VDC
Q2-412K	QTY 1 VF3C-1200C	QTY 1 35589	QTY 3 TNR 23G102K	QTY 6 110U2G43	QTY 2S+2P 6 OHM-40W	QTY 2 ATQ 2.5A 500 Vac	** QTY 1 A070F400	QTY 6 MG400Q1US41	** QTY 3 * A050F400	QTY 10 3300 uF 400VDC
Q2-415K	QTY 1 VF3C-1200C	QTY 1 35589Z	QTY 3 TNR 23G102K	QTY 6 160U2G43	QTY 2S 2 OHM-300W	QTY 2 ATQ 6.25A 500 Vac	QTY 2 6.6URD32TT FO400	QTY 6+6 MG300Q1US11 MG300Q1US21	** QTY 3 6.6URD32TT FO400	QTY 12 3900 uF 400VDC
Q2-420K	QTY 1 VF3C-1200C	QTY 1 35589Z	QTY 3 TNR 23G102K	QTY 6 160U2G43	QTY 2P+2P 2 OHM-300W	QTY 2 ATQ 6.25A 500 Vac	QTY 2 6.6URD32TT FO550	QTY 9+9 MG300Q1US11 MG300Q1US21	** QTY 3 6.6URD32TT FO550	QTY 16 3900 uF 400VDC

Notes:

* Optional components

** Semiconductor fuse with 200K amp interrupting capability

*** Semiconductor fuse with 100K amp interrupting capability

**** Semiconductor fuse with 50K amp interrupting capability

Rank A signifies parts of relatively higher necessity.

Rank B signifies parts of relatively lower necessity.

12.2 Recommended Spare Parts (cont'd)

RANK	C	C	A	C	C	C	C	C	C	C
INVERTER UNIT	PCB KEYPAD	PCB 4-4B SNUBBER	PCB 5-5E G - E CIRCUIT	HCT DC BUS	HCT OUTPUT	L1 DC REACTOR	FAN FOR HEAT SINK	FAN FOR CABINET	MS1 CONTACTOR	MSX RELAY
Q2-2035	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S100M4P15E 45mV/100A	NOT USED	QTY 1 1 mH 13 A	NOT USED	NOT USED	QTY 1 JH1a-30A	NOT USED
Q2-2055	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S100M4P15E 45mV/100A	NOT USED	QTY 1 0.6 mH 21 A	QTY 1 113XN0181	NOT USED	QTY 1 JH1a-30A	NOT USED
Q2-2080	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HCS150M4P15N 45mV/150A	NOT USED	QTY 1 0.4 mH 30 A	QTY 2 113XN0181	NOT USED	QTY 1 PC-5	NOT USED
Q2-2110	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S100M4P15E 45mV/100A	NOT USED	QTY 1 0.3 mH 38 A	QTY 2 129XR0281	NOT USED	QTY 1 PC-5	NOT USED
Q2-2160	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S150M4P15N 45mV/150A	NOT USED	QTY 1 0.2 mH 57 A	QTY 2 129XR0281	NOT USED	QTY 1 C25A	QTY 1 JC1a-10A
Q2-2220	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S200M4P15K 45mV/200A	NOT USED	QTY 1 0.2 mH 76 A	QTY 2 129XR0281	NOT USED	QTY 1 C35A	QTY 1 JC1a-10A
Q2-2270	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S200M4P15K 45mV/200A	NOT USED	QTY 1 0.15 mH 92 A	QTY 2 129XR0281	NOT USED	QTY 1 C50A	QTY 1 JC1a-10A
Q2-2330	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S200M4P15K 45mV/200A	NOT USED	QTY 1 0.1 mH 114 A	QTY 2 129XR0281	NOT USED	QTY 1 C50A	QTY 1 JC1a-10A
Q2-4055	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S100M4P15E 45mV/100A	NOT USED	QTY 1 2.5 mH 11 A	NOT USED	NOT USED	QTY 1 JC1aF-15A	NOT USED
Q2-4080	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S70M4P15E 45mV/70A	NOT USED	QTY 1 1.8 mH 15 A	QTY 1 113XN0181	NOT USED	QTY 1 JH1a-30A	NOT USED
Q2-4110	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S100M4P15E 45mV/100A	NOT USED	QTY 1 1.3 mH 20 A	QTY 1 113XN0181	NOT USED	QTY 1 JH1a-30A	NOT USED
Q2-4160	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S70M4P15E 45mV/70A	NOT USED	QTY 1 0.9 mH 29 A	QTY 1, 113XN0181	NOT USED	QTY 1 PC-5	NOT USED
Q2-4220	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S100M4P15E 45mV/100A	NOT USED	QTY 1 0.7 mH 39 A	QTY 2 129XR0181	NOT USED	QTY 1 PC-5	NOT USED
Q2-4270	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S100M4P15E 45mV/100A	NOT USED	QTY 1 0.5 mH 50 A	QTY 2 129XR0181	NOT USED	QTY 1 C20A	QTY 1 JC1a-10A

12.2 Recommended Spare Parts (cont'd)

RANK	C	C	A	C	C	C	C	C	C	C
INVERTER UNIT	PCB KEYPAD	PCB 4-4B SNUBBER	PCB 5-5E G - E CIRCUIT	HCT DC BUS	HCT OUTPUT	L1 DC REACTOR	FAN FOR HEATSINK	FAN FOR CABINET	MS1 CONTACTOR	MSX RELAY
Q2-4330	QTY 1 35751B	NOT USED	NOT USED	QTY 1 HC-S100M4P15E 45mV/100A	NOT USED	QTY 1 0.5mH 55 A	QTY 2 129XR0281	NOT USED	QTY 1 C35A	QTY 1 JC1a-10A
Q2-4400	QTY 1 35751B	NOT USED	NOT USED	NOT USED	QTY 1 NNC-20CAW(AMO) 4V/68A	QTY 1 0.4 mH 75 A	QTY 2 129XR0281	QTY 1 113XN0181	QTY 1 C35A	QTY 1 JC1a-10A
Q2-4500	QTY 1 35751B	NOT USED	NOT USED	NOT USED	QTY 1 NNC-20CTW(AMO) 4V/82A	QTY 1 0.3 mH 88 A	QTY 2 129XR0281	QTY 1 113XN0181	QTY 1 C50A	QTY 1 JC1a-10A
Q2-4600	QTY 1 35751B	QTY 3 33251A	QTY 6 34557A	NOT USED	QTY 1 NNC-20CAW(AMO) 4V/100A	QTY 1 0.2 mH 114 A	QTY 2 148VK0281	NOT USED	QTY 1 C50A	QTY 1 JC1a-10A
Q2-4800	QTY 1 35751B	QTY 3 33251A	QTY 6 34557A	NOT USED	QTY 2 NNC-20CA(AMO) 4V/130A	QTY 1 0.2 mH 141 A	QTY 2 148VK0281	QTY 2 113XN0181	QTY 1 C65A	QTY 1 JC1a-10A
Q2-410K	QTY 1 35751B	QTY 3 33251A	QTY 6 34557D	NOT USED	QTY 2 NNC-20CA(AMO) 4V/160A	QTY 1 0.15 mH 175 A	QTY 2 148VK0281	QTY 2 113XN0181	QTY 1 C80A	QTY 1 JC1a-10A
Q2-412K	QTY 1 35751B	QTY 3 33251C	QTY 6 34557D	NOT USED	QTY 1 NNC-20CA(AMO) 4V/212A	QTY 1 0.23 mH 220 A	QTY 2 148VK0281	QTY 2 113XN0181	QTY 1 C80A	QTY 1 JC1a-10A
Q2-415K	QTY 1 38552B	QTY 3 34465C	QTY 6 40651A	QTY 1 HEC-100A(AMO) 4V/230A	QTY 2 HEC-100A(AMO) 4V/230A	NOT USED	QTY 1 McLean 4B1212-230	QTY 1 148VK0281	QTY 1 C125A-E-A	QTY 1 JC1a-10A
Q2-420K	QTY 1 38552B	QTY 3 34465C	QTY 6 40651A	QTY 1 HEC-100A(AMO) 4V/300A	QTY 2 HEC-100A(AMO) 4V/300A	NOT USED	QTY 1 McLean 4B1212-230	QTY 1 148VK0281	QTY 1 C180A-E-A	QTY 1 JC1a-10A

Notes: Rank A signifies parts of relatively highest necessity.
Rank C signifies parts of relatively lowest necessity.

12.3 Parts Service Life

In order to obtain the best performance and to get the maximum service life from the inverter it is necessary to perform timely maintenance repairs on some parts of the system even though the equipment may still be functioning with no apparent problems

Use the following service life chart as a guide for major part periodic replacement when the equipment is used in a standard installation service environment.

Service Life Replacement Chart

Part Name	Service Life	Remarks
Large capacity electrolytic capacitor	5 Years	To be electrified semiannually in case of long term disuse.
Cooling Fan	3 Years	
Contact relays	500,000 operations	
Connectors	100 operations	Replace pin in case of failure.

13.0 Dimensions/Weights/Component Layouts/Schematics

13.1 Basic Dimensions

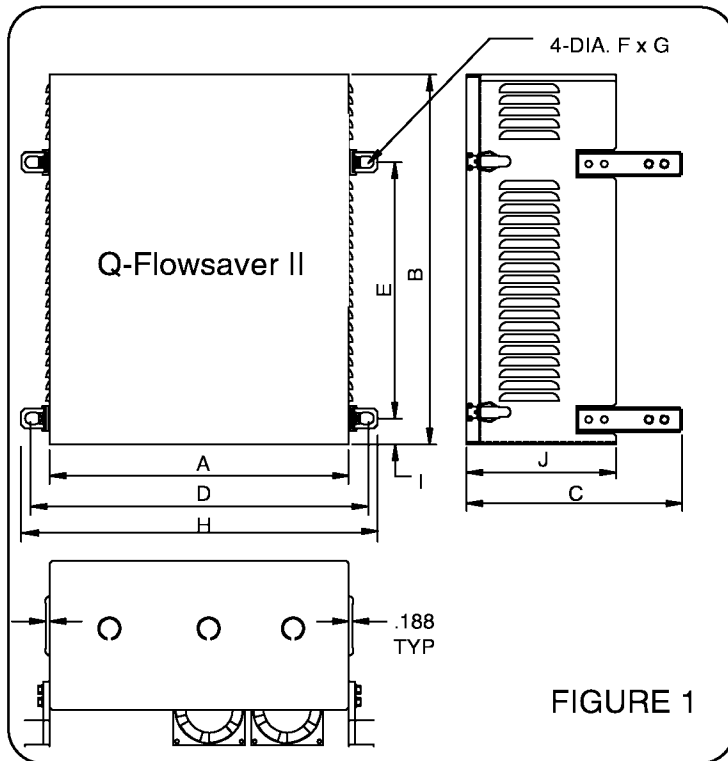


FIGURE 1

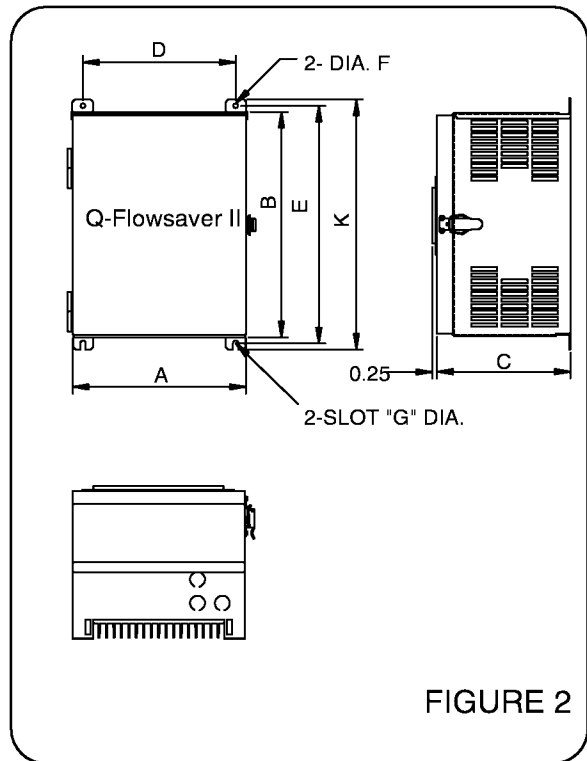


FIGURE 2


DIMENSION CHART

DIMENSIONS ARE IN INCHES(MILLIMETERS)

MODEL	FIG	A	B	C	D	E	F	G	H	I	J	K
VT130Q2-2035	2	8.72(221)	11.38(289)	8.41(214)	7.69(195)	12.00(305)	0.28(7)	0.28(7)	NA	NA	NA	12.63(321)
VT130Q2-2055	2	8.72(221)	11.38(289)	8.41(214)	7.69(195)	12.00(305)	0.28(7)	0.28(7)	NA	NA	NA	12.63(321)
VT130Q2-2080	1	15.19(386)	18.63(473)	10.88(276)	16.63(422)	12.88(327)	0.59(15)	0.81(21)	17.81(452)	1.25(32)	7.59(193)	NA
VT130Q2-2110	1	15.19(386)	18.63(473)	10.88(276)	16.63(422)	12.88(327)	0.59(15)	0.81(21)	17.81(452)	1.25(32)	7.59(193)	NA
VT130Q2-2160	1	15.19(386)	18.63(473)	10.88(276)	16.63(422)	12.88(327)	0.59(15)	0.81(21)	17.81(452)	1.25(32)	7.59(193)	NA
VT130Q2-2220	1	17.63(448)	22.38(568)	10.88(276)	19.06(484)	14.75(375)	0.59(15)	0.81(21)	20.25(514)	1.25(32)	7.59(193)	NA
VT130Q2-2270	1	17.63(448)	22.38(568)	10.88(276)	19.06(484)	14.75(375)	0.59(15)	0.81(21)	20.25(514)	1.25(32)	7.59(193)	NA
VT130Q2-2330	1	17.63(448)	22.38(568)	10.88(276)	19.06(484)	14.75(375)	0.59(15)	0.81(21)	20.25(514)	1.25(32)	7.59(193)	NA
VT130Q2-4055	1	13.69(348)	15.66(398)	8.88(226)	14.78(375)	10.81(275)	0.41(10)	0.59(15)	15.59(396)	1.23(31)	7.13(181)	NA
VT130Q2-4080	1	15.19(386)	18.63(473)	10.88(276)	16.63(422)	12.88(327)	0.59(15)	0.81(21)	17.81(452)	1.25(32)	7.59(193)	NA
VT130Q2-4110	1	15.19(386)	18.63(473)	10.88(276)	16.63(422)	12.88(327)	0.59(15)	0.81(21)	17.81(452)	1.25(32)	7.59(193)	NA
VT130Q2-4160	1	15.19(386)	18.63(473)	10.88(276)	16.63(422)	12.88(327)	0.59(15)	0.81(21)	17.81(452)	1.25(32)	7.59(193)	NA
VT130Q2-4220	1	17.63(448)	22.38(568)	10.88(276)	19.06(484)	14.75(375)	0.59(15)	0.81(21)	20.25(514)	1.25(32)	7.59(193)	NA
VT130Q2-4270	1	17.63(448)	22.38(568)	10.88(276)	19.06(484)	14.75(375)	0.59(15)	0.81(21)	20.25(514)	1.25(32)	7.59(193)	NA
VT130Q2-4330	1	17.63(448)	22.38(568)	10.88(276)	19.06(484)	14.75(375)	0.59(15)	0.81(21)	20.25(514)	1.25(32)	7.59(193)	NA
VT130Q2-4400	1	20.19(513)	25.56(649)	12.38(314)	21.63(549)	19.03(483)	0.59(15)	0.81(21)	22.81(579)	1.25(32)	8.75(222)	NA
VT130Q2-4500	1	20.19(513)	25.56(649)	12.38(314)	21.63(549)	19.03(483)	0.59(15)	0.81(21)	22.81(579)	1.25(32)	8.75(222)	NA
VT130Q2-4600	1	20.19(513)	36.19(919)	13.25(337)	22.06(560)	26.00(660)	0.59(15)	0.81(21)	22.81(579)	2.06(52)	8.53(217)	NA
VT130Q2-4800	1	20.19(513)	36.19(919)	13.25(337)	22.06(560)	26.00(660)	0.59(15)	0.81(21)	22.81(579)	2.06(52)	8.53(217)	NA
VT130Q2-410K	1	20.19(513)	36.19(919)	13.25(337)	22.06(560)	26.00(660)	0.59(15)	0.81(21)	22.81(579)	2.06(52)	8.53(217)	NA
VT130Q2-412K	1	20.19(513)	37.44(951)	13.25(337)	22.06(560)	26.00(660)	0.59(15)	0.81(21)	22.81(579)	2.06(52)	8.53(217)	NA

13.0 Dimensions/Weights/Component Layouts/Schematics


13.1 Basic Dimensions (cont'd)

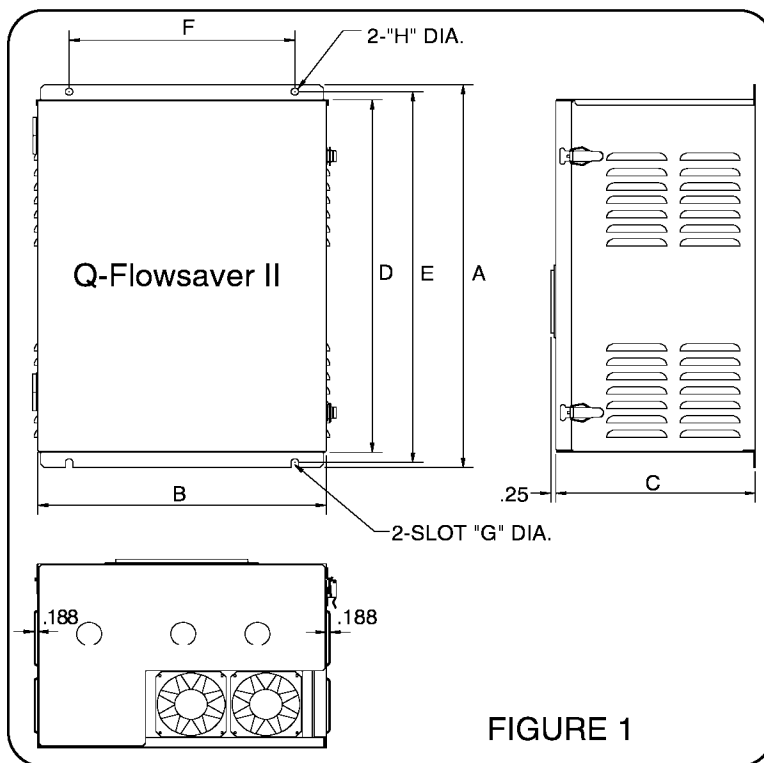


DIMENSIONS

MODEL	FIG	A	B	C	D	E	F	G	H
VT130Q2-415K	1	59.94(1522)	25.88(657)	14.47(368)	57.00(1448)	58.75(1492)	11.81(300)	.69(18)	.69(18)
VT130Q2-420K	1	59.94(1522)	25.88(657)	14.47(368)	57.00(1448)	58.75(1492)	11.81(300)	.69(18)	.69(18)


13.2 Operating Panel Assembly
(NEMA 4/NEMA 12 Operation Panel - Standard)

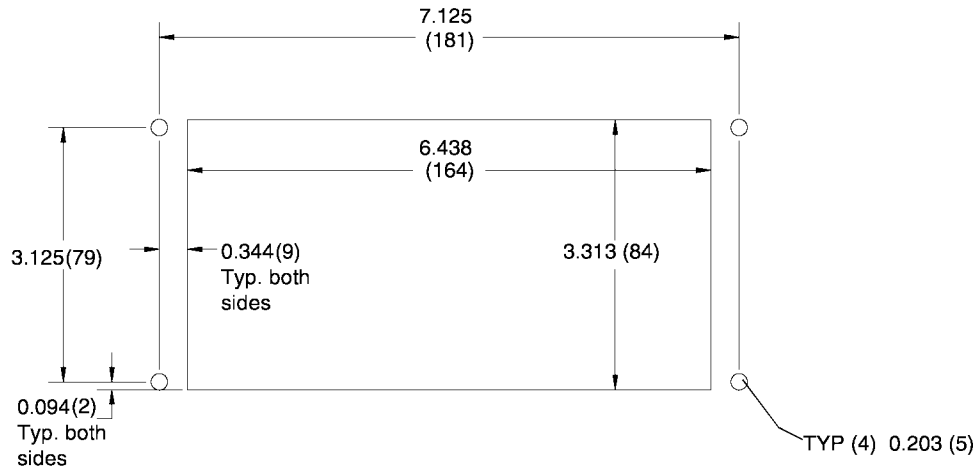

**CUTOUT FOR TOUCH-PAD
OPERATION PANEL IN DOOR
(FRONT VIEW)**

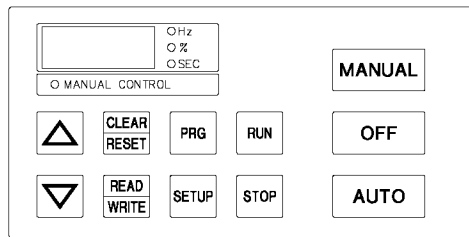

**FRONT VIEW OF
TOUCH-PAD
OPERATION PANEL**

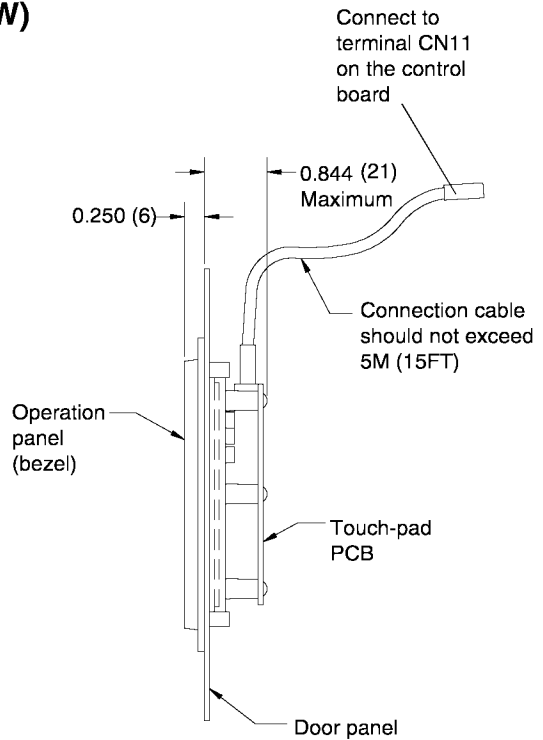


**RIGHT SIDE
VIEW**

DIMENSIONS ARE IN INCHES(MILLIMETERS)


13.3 Shipping Weights

Inverter Type	Shipping Weight	
	Pounds	Kilograms
Q2-2035	18.0	8.2
Q2-2055	19.0	8.6
Q2-2080	54.0	24.5
Q2-2110	56.0	25.4
Q2-2160	58.0	26.3
Q2-2220	80.0	36.3
Q2-2270	85.0	38.6
Q2-2330	88.0	39.9
Q2-4055	45.0	20.4
Q2-4080	53.0	24.0
Q2-4110	56.0	25.4
Q2-4160	58.0	26.3
Q2-4220	98.0	44.5
Q2-4270	100.0	45.4
Q2-4330	103.0	46.7
Q2-4400	130.0	59.0
Q2-4500	130.0	59.0
Q2-4600	196.0	88.9
Q2-4800	205.0	93.0
Q2-410K	207.0	93.9
Q2-412K	223.0	101.2
Q2-415K	310.0	140.9
Q2-420K	440.0	200.0


13.4 Component Layouts Q2-2035 - Q2-2110

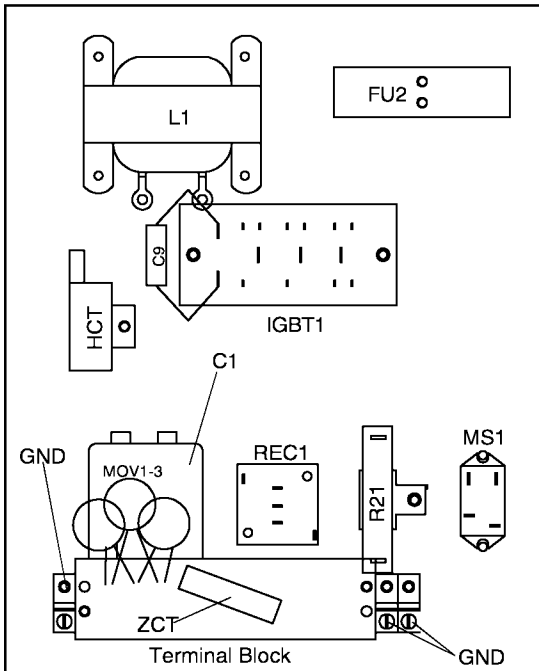


Q2-2035

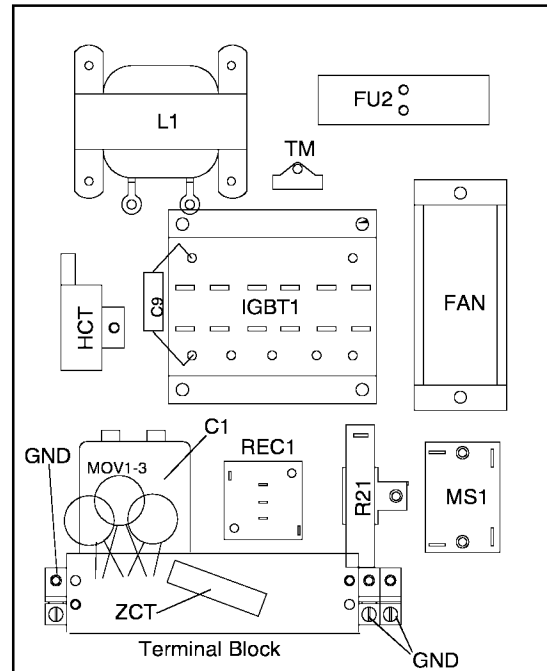

Q2-2055

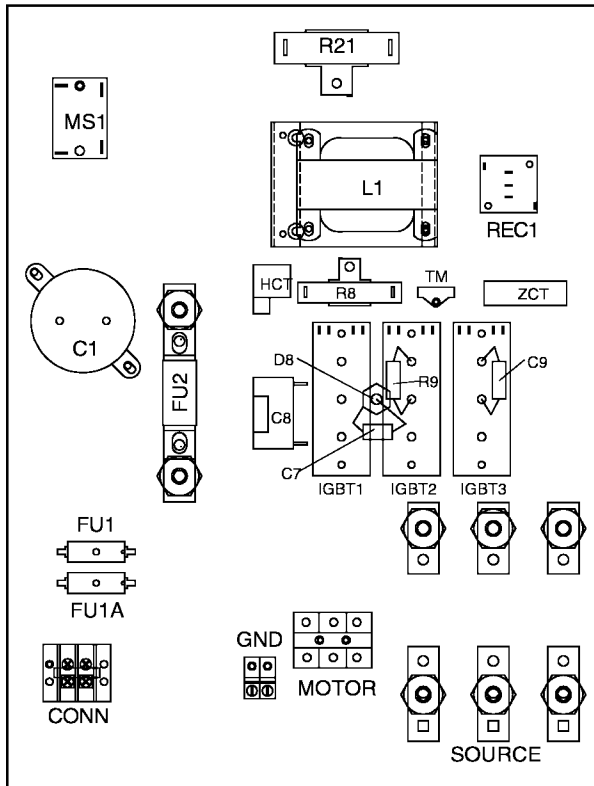


Q2-2080

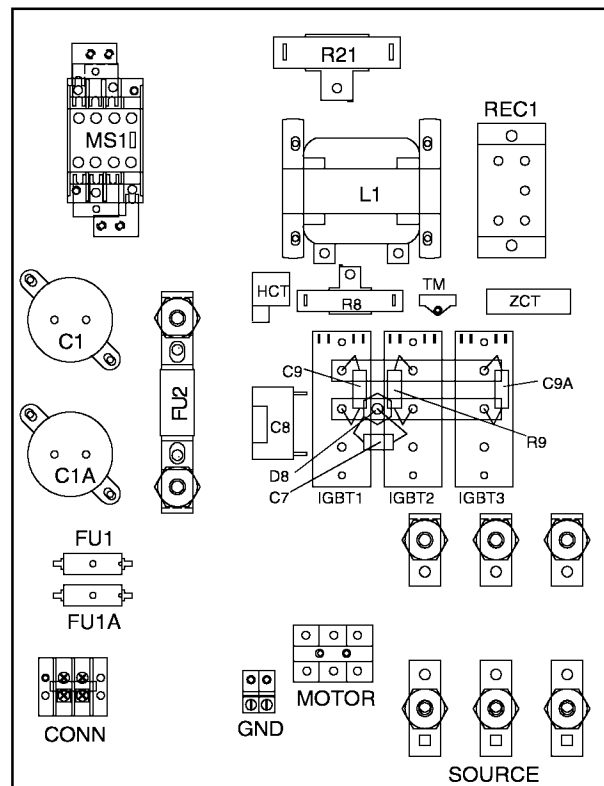


Q2-2110


13.4 Component Layouts (cont'd) Q2-2160 - Q2-2330

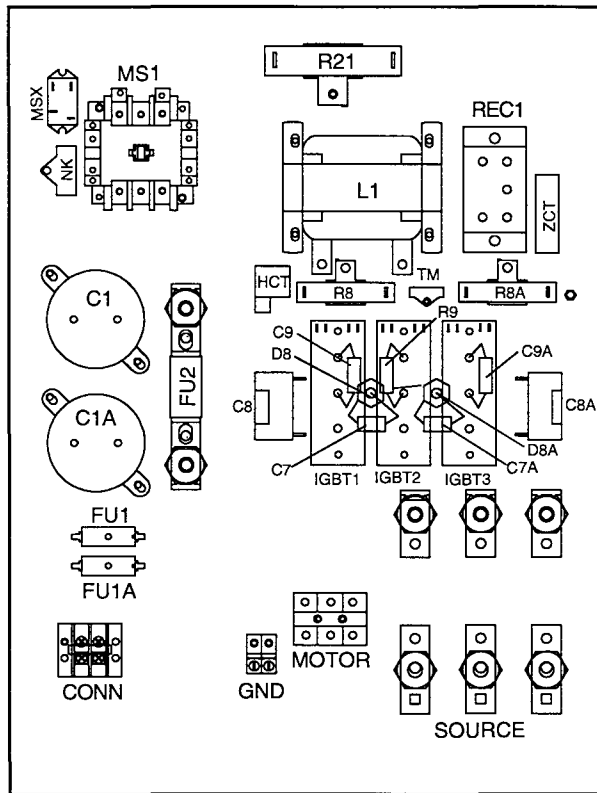


Q2-2160

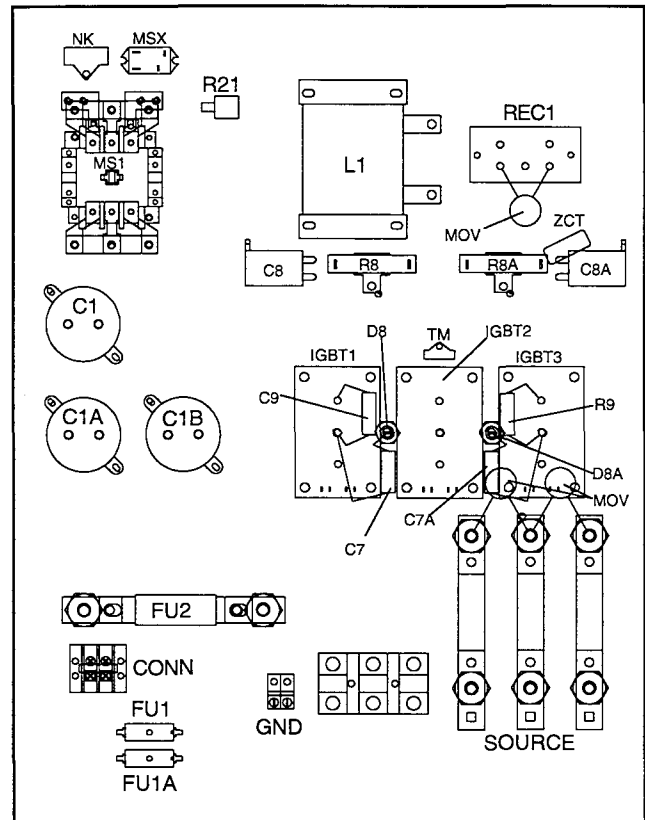

Q2-2220

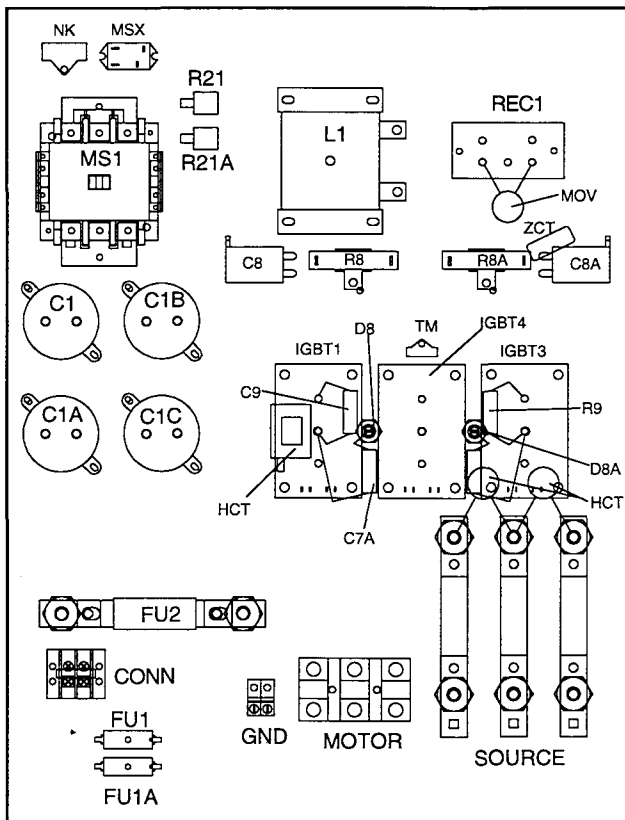


Q2-2270

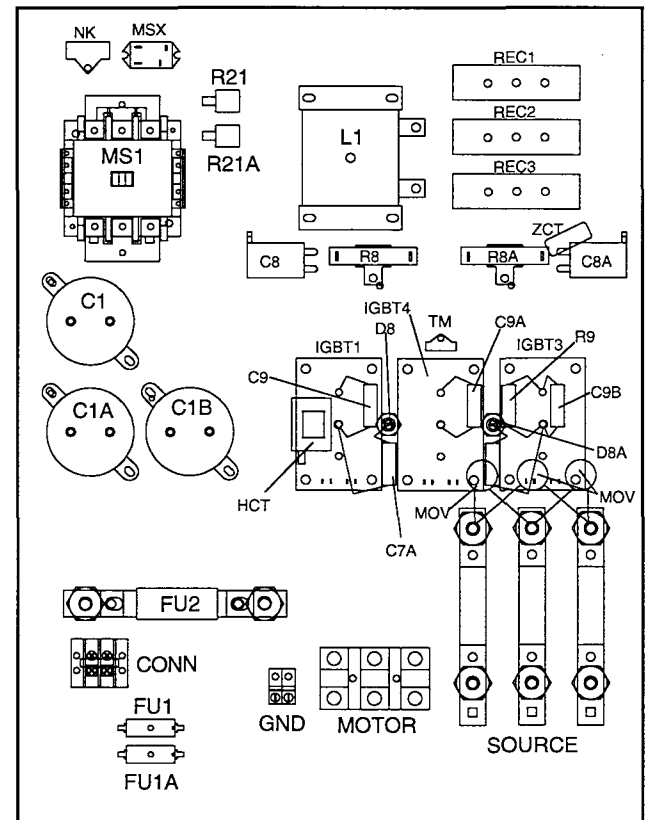


Q2-2330


13.4 Component Layouts (cont'd) Q2-4055 - Q2-4160

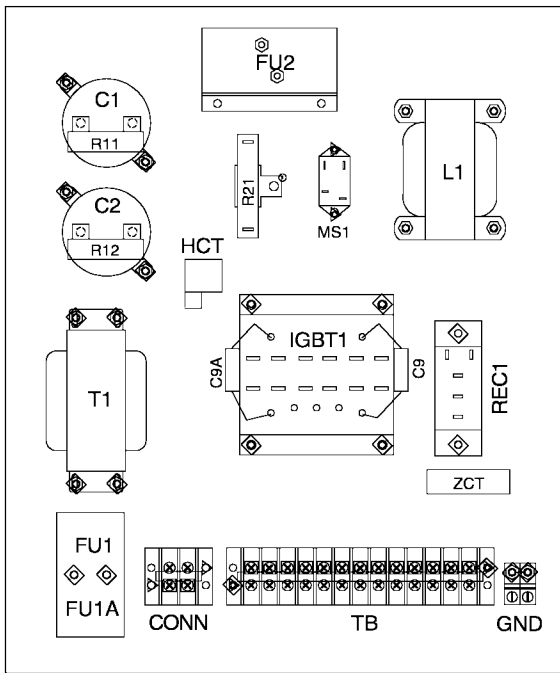


Q2-4055

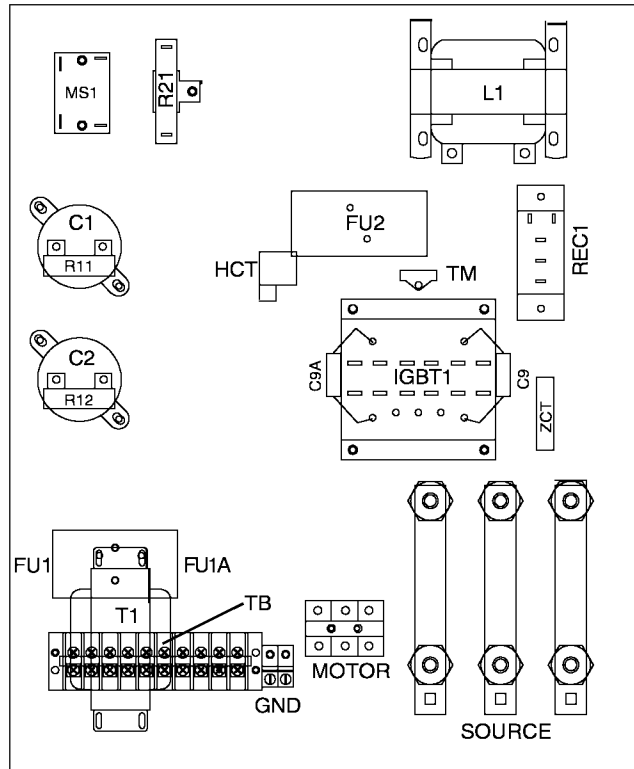

Q2-4080

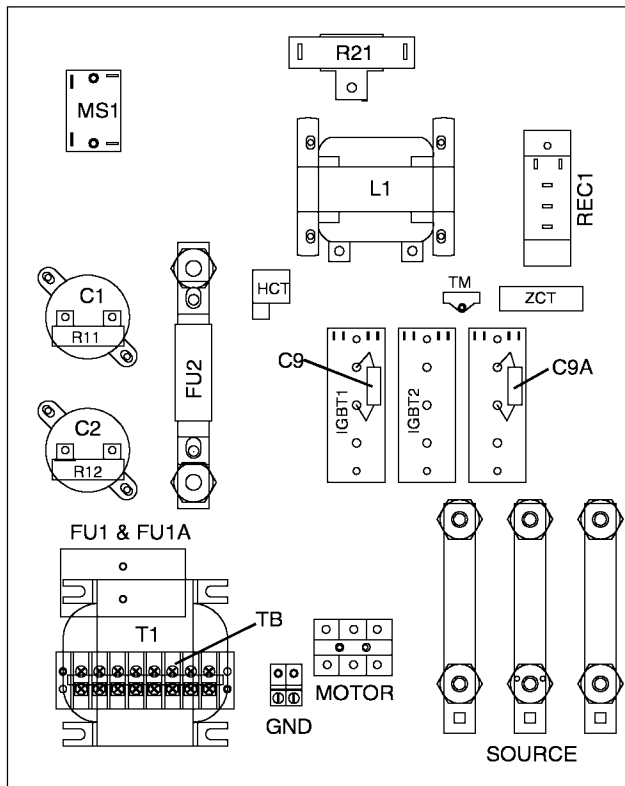


Q2-4110

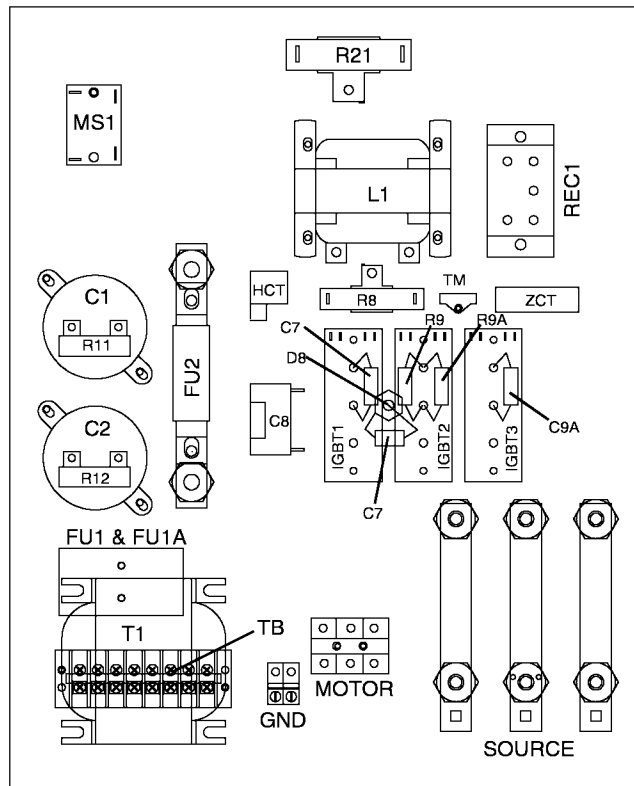


Q2-4160


13.4 Component Layouts (cont'd) Q2-4220 - Q2-4500

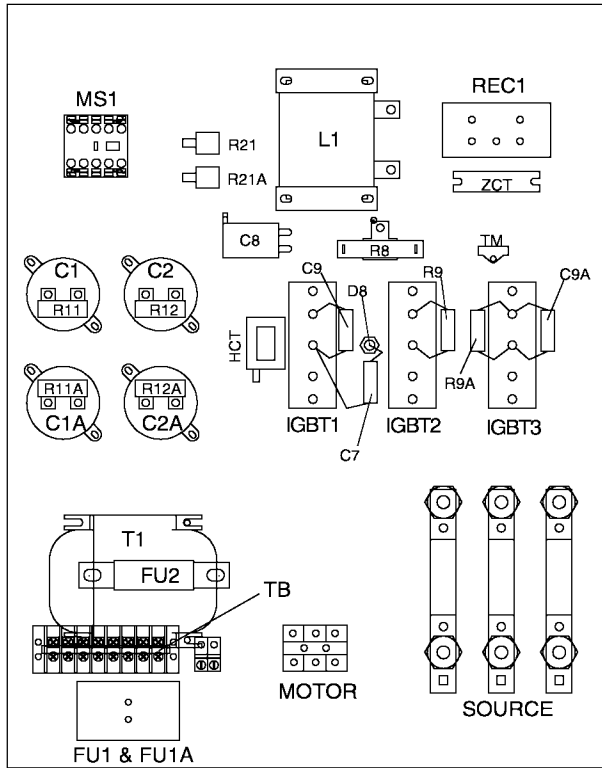


Q2-4220

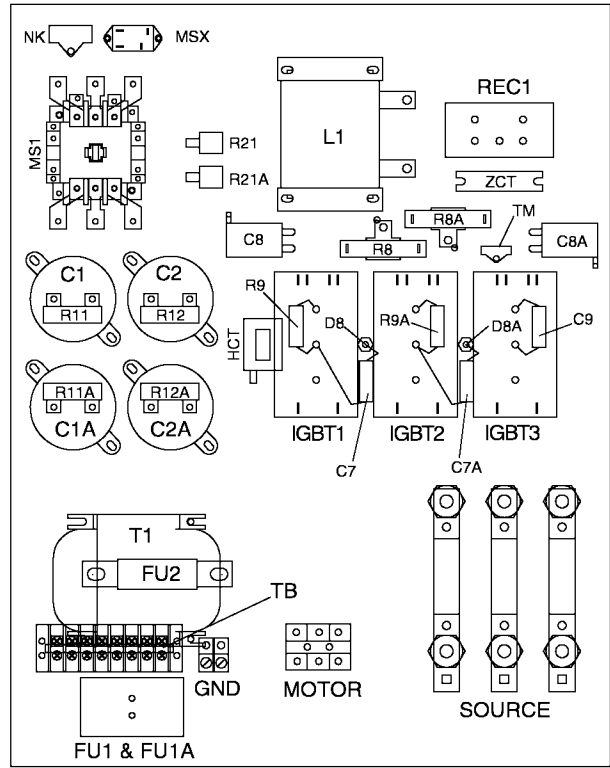

Q2-4270

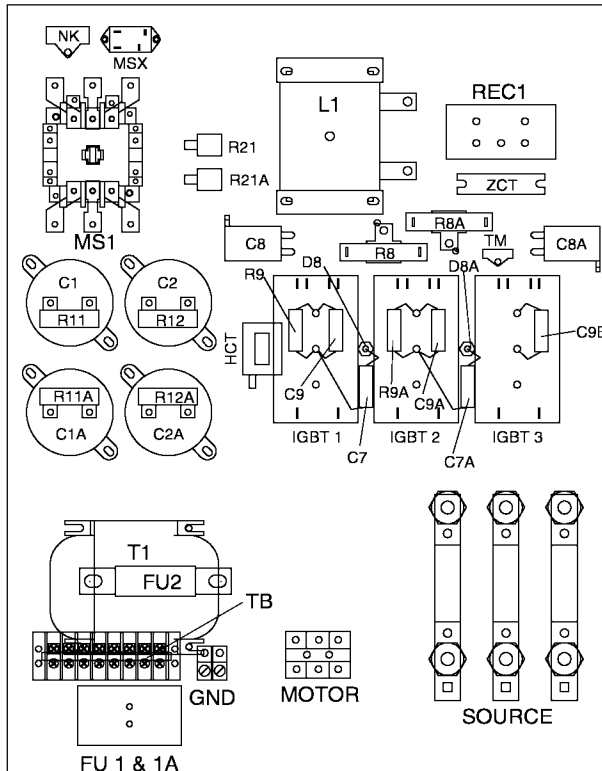


Q2-4330

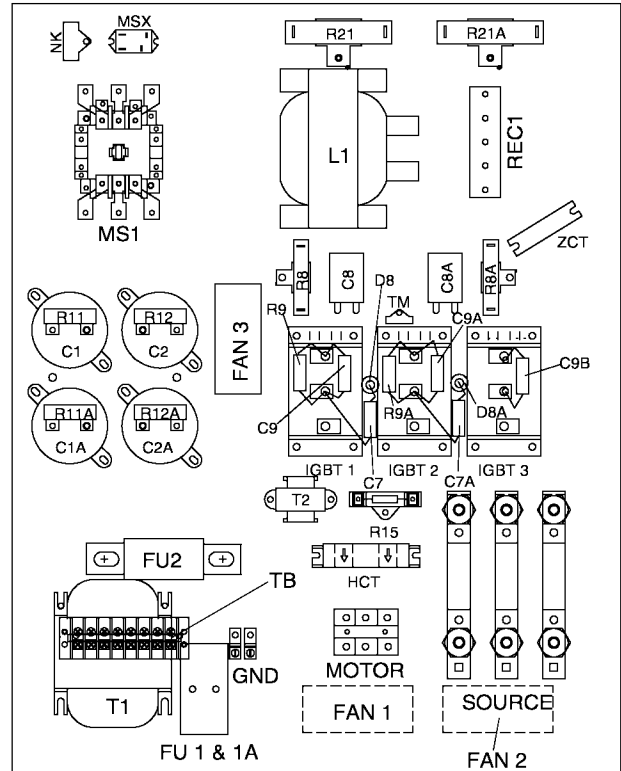


Q2-4400 - Q2-4500

13.4 Component Layouts (cont'd) Q2-4600

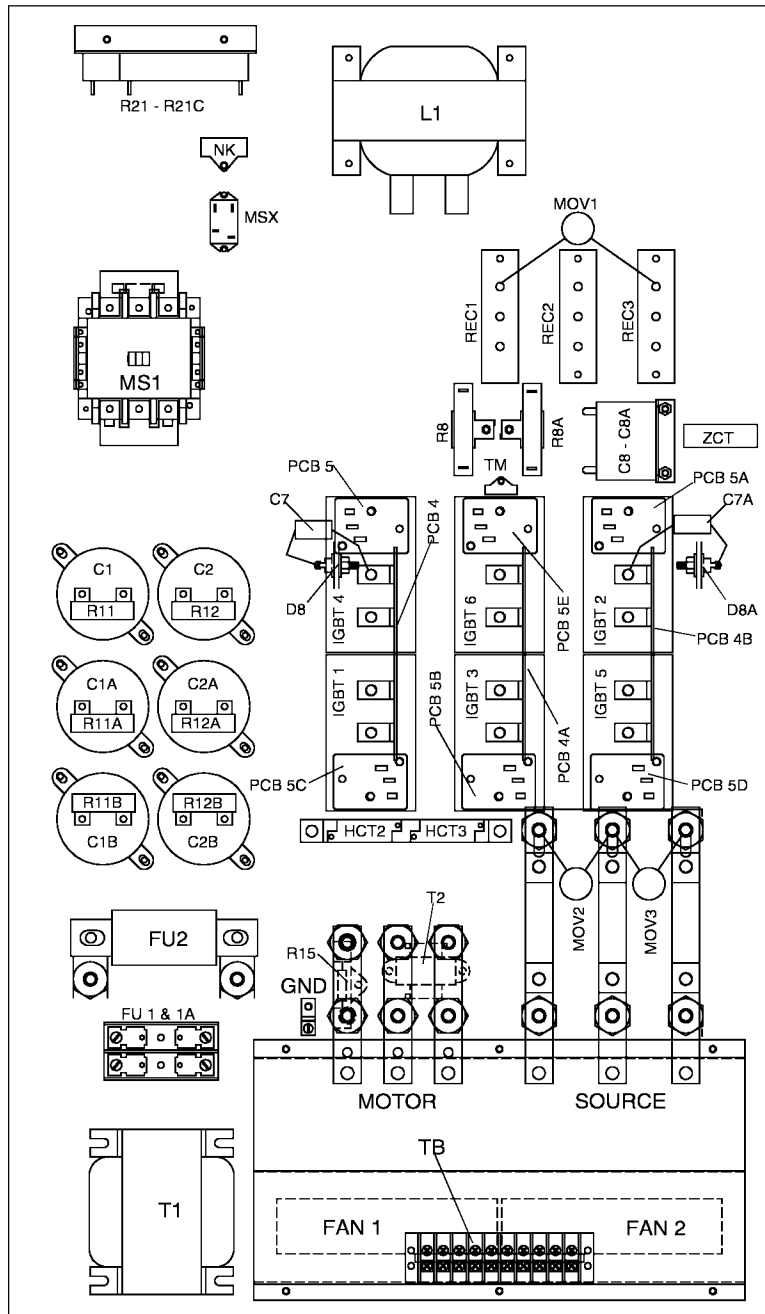

Q2-4600


13.4 Component Layouts (cont'd) Q2-4800 - Q2-410K

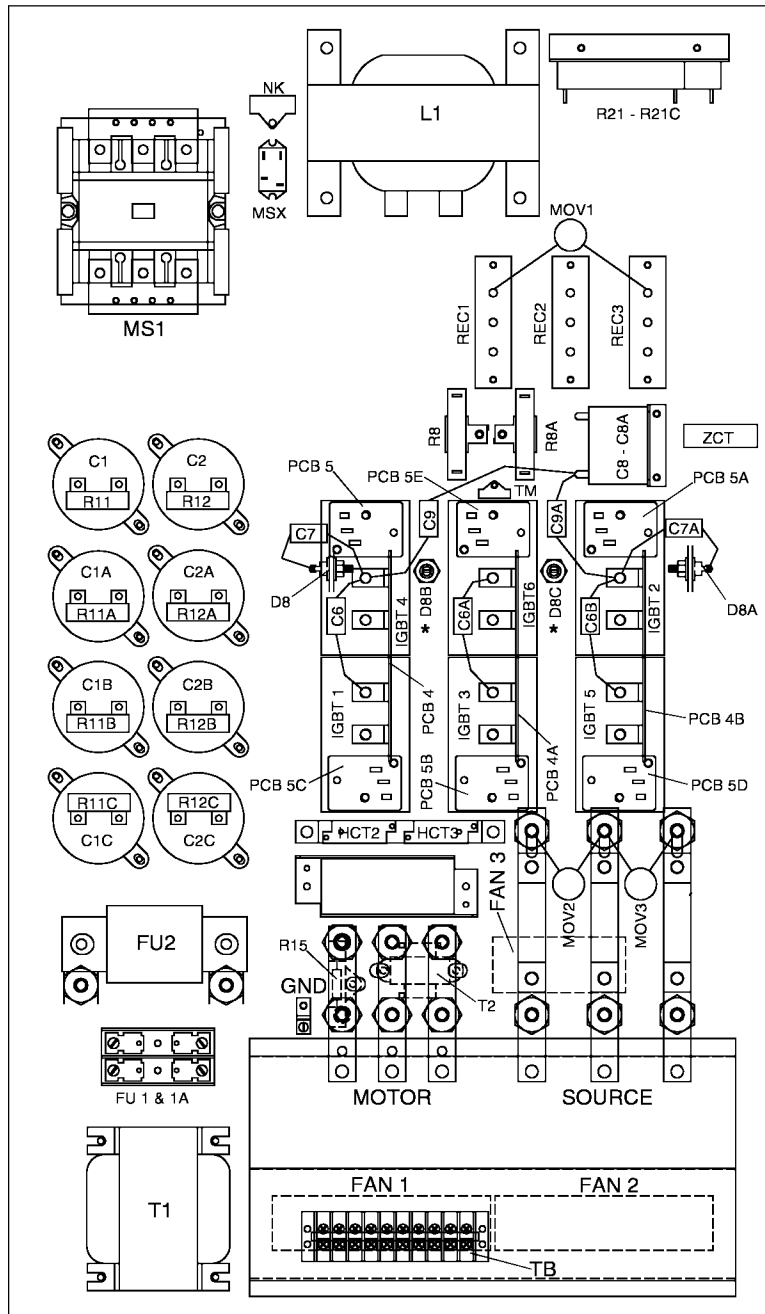

*Furnished on Q2-410K only


Q2-4800 - Q2-410K

13.4 Component Layouts (cont'd) Q2-415K

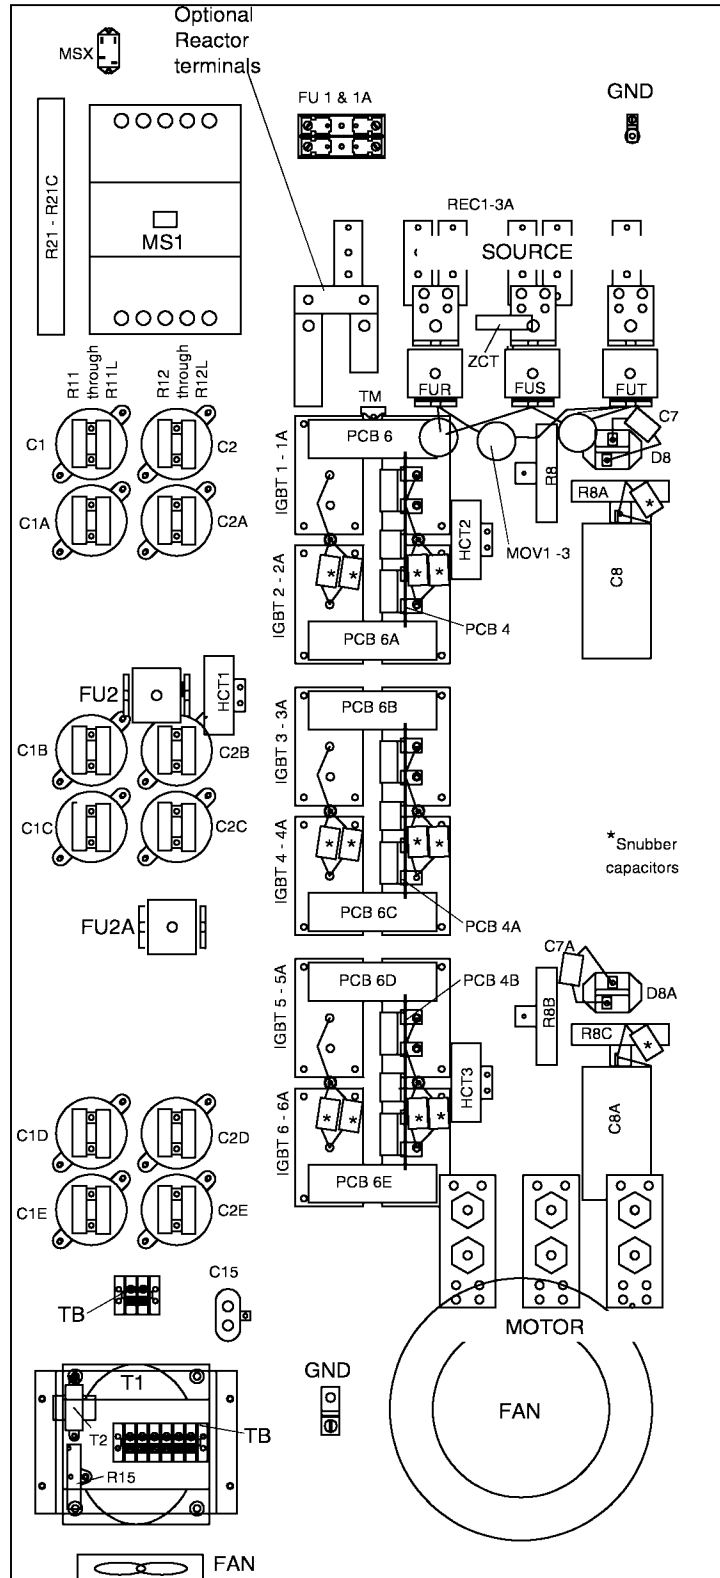


Q2-415K

13.4 Component Layouts (cont'd) Q2-420K

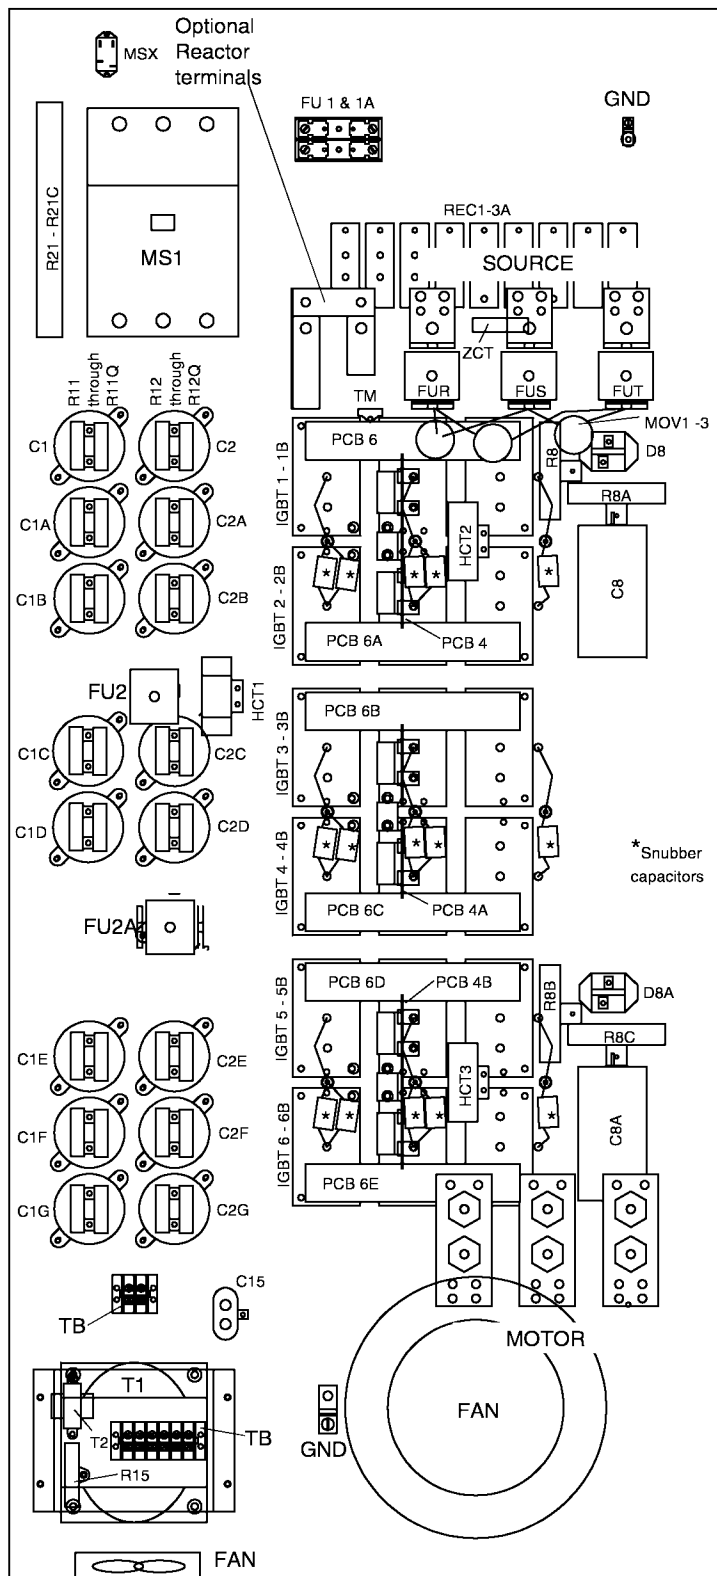

Q2-420K

13.5 Schematics

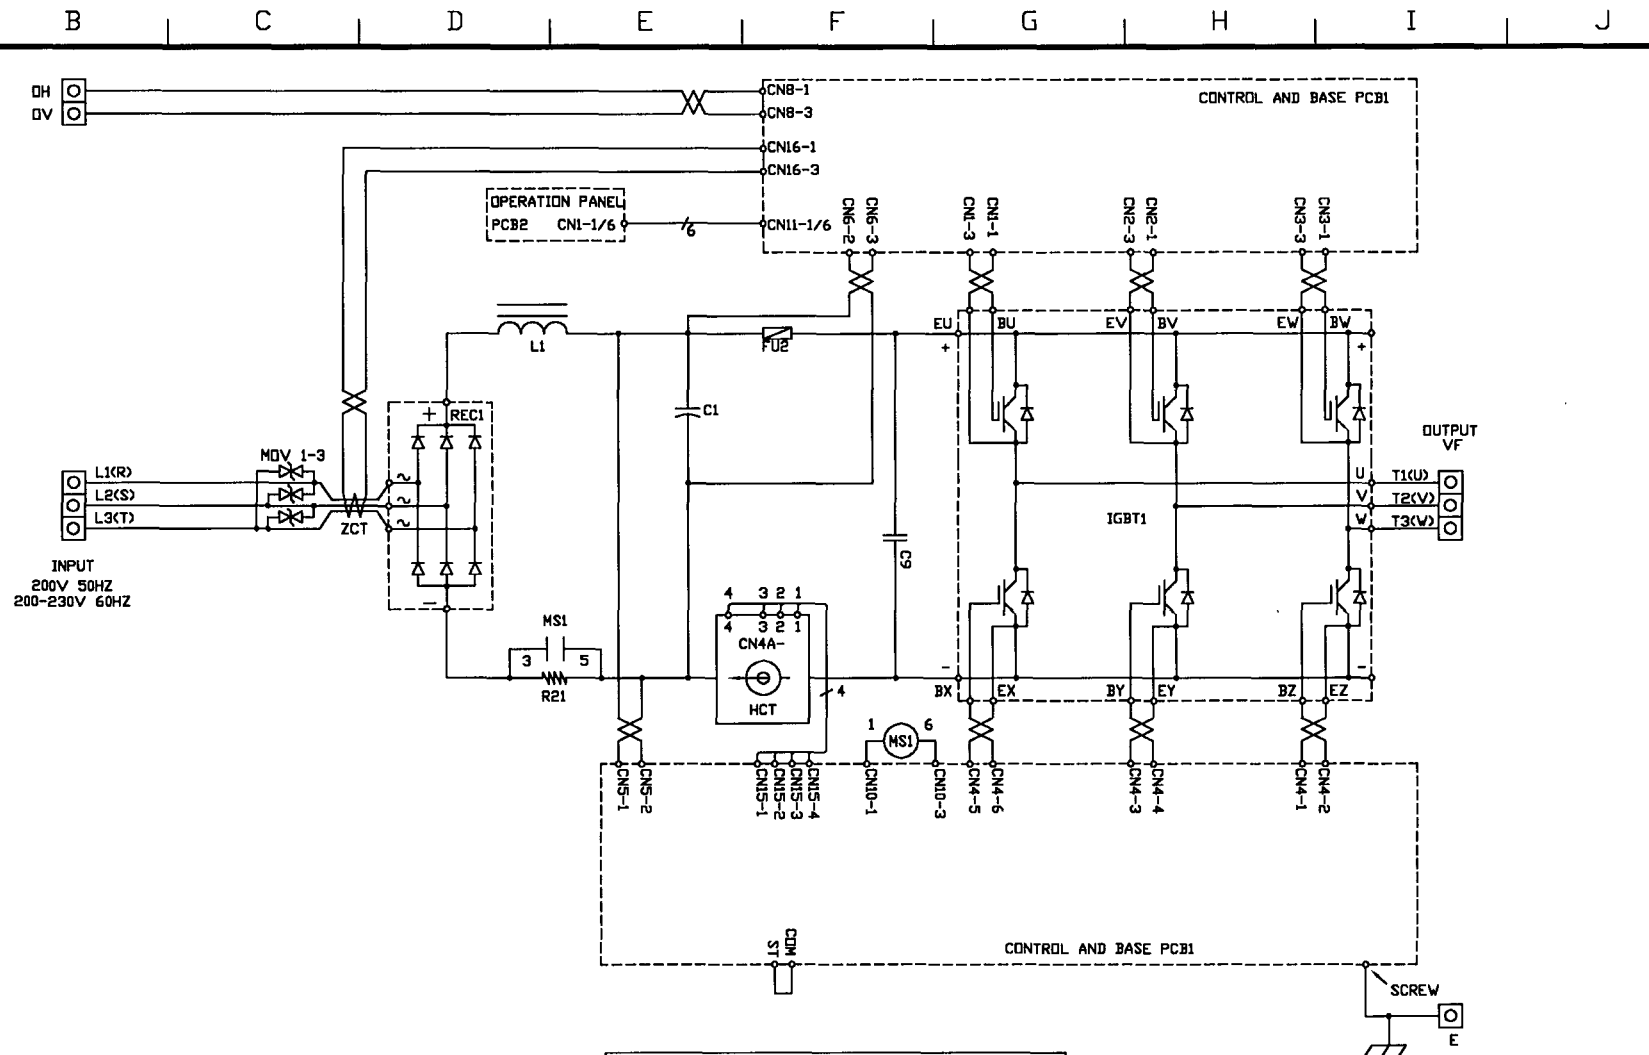


COMPONENTS			
C1	400VDC 1000µF	MS1	24VDC 15A
C9	1000VDC 0.47µF	PCB1	VF3B-0100E
FU2	600V 20A	PCB2	VF3B-0100E
IGBT 1	450V/10A-3T	REC1	800V 20A
MOV 1-3	200VCE 25A	ZCT	100AF
	100V 13A		
	460VDC 150J		

			DRAWN: RB 06/19/92
			CHECKED: <i>[Signature]</i>
			APPROVED: <i>[Signature]</i> 5/16/93
ECN	DATE	BY	

TOSHIBA/HOUSTON
INTERNATIONAL CORPORATION
 USA
 THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF
 TOSHIBA INTERNATIONAL CORPORATION AND SHALL
 NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS
 UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE: FLOWQ2U2035	
REV: 0	DRAWING NO.: Q2-2035

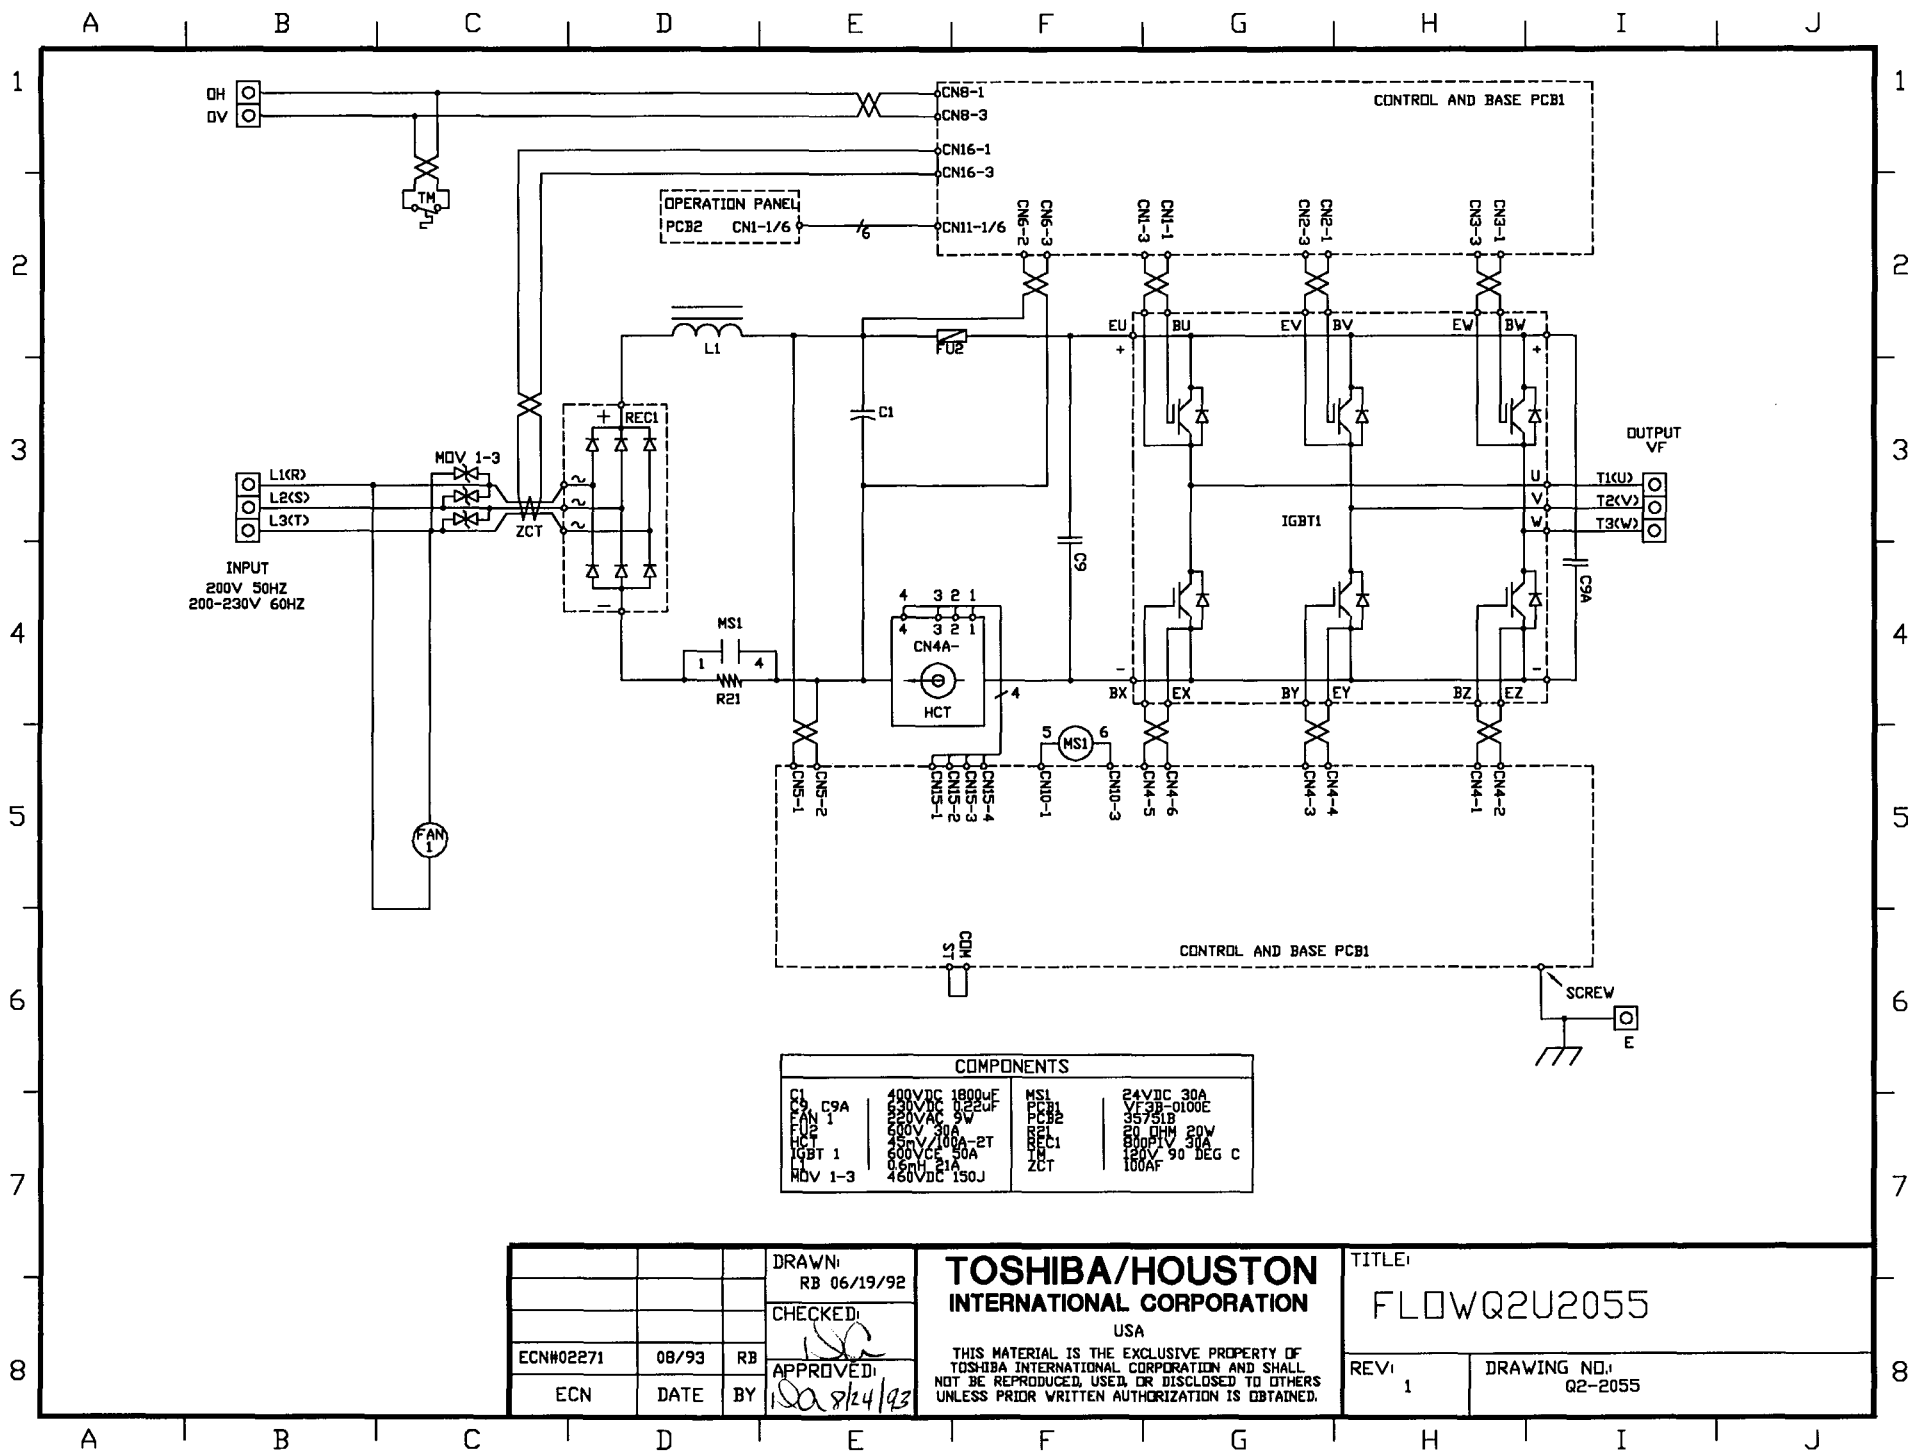


COMPONENTS					
C1	400VDC	1800µF	MS1	24VDC	30A
C9A	250VDC	0.22µF	PCB1	VF3B-0100E	
FAN 1	220VAC	9W	PCB2	3575LB	
L1	500V	30A	REC1	50 DHW	50W
MDV 1-3	450V	30A-2T	REC2	500V	30A
IGBT 1	600VDC	30A	ZCT	120V	90 DEG C
MDV 1-3	0.8µF	21A			100µF

			DRAWN:	RB	06/19/92
			CHECKED:		
ECN#02271	08/93	RB	APPROVED:		
ECN	DATE	BY		RB	8/24/93

TOSHIBA/HOUSTON
INTERNATIONAL CORPORATION
 USA

THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF TOSHIBA INTERNATIONAL CORPORATION AND SHALL NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE:	FLOWQ2U2055	
REV:	1	DRAWING NO.:
		Q2-2055

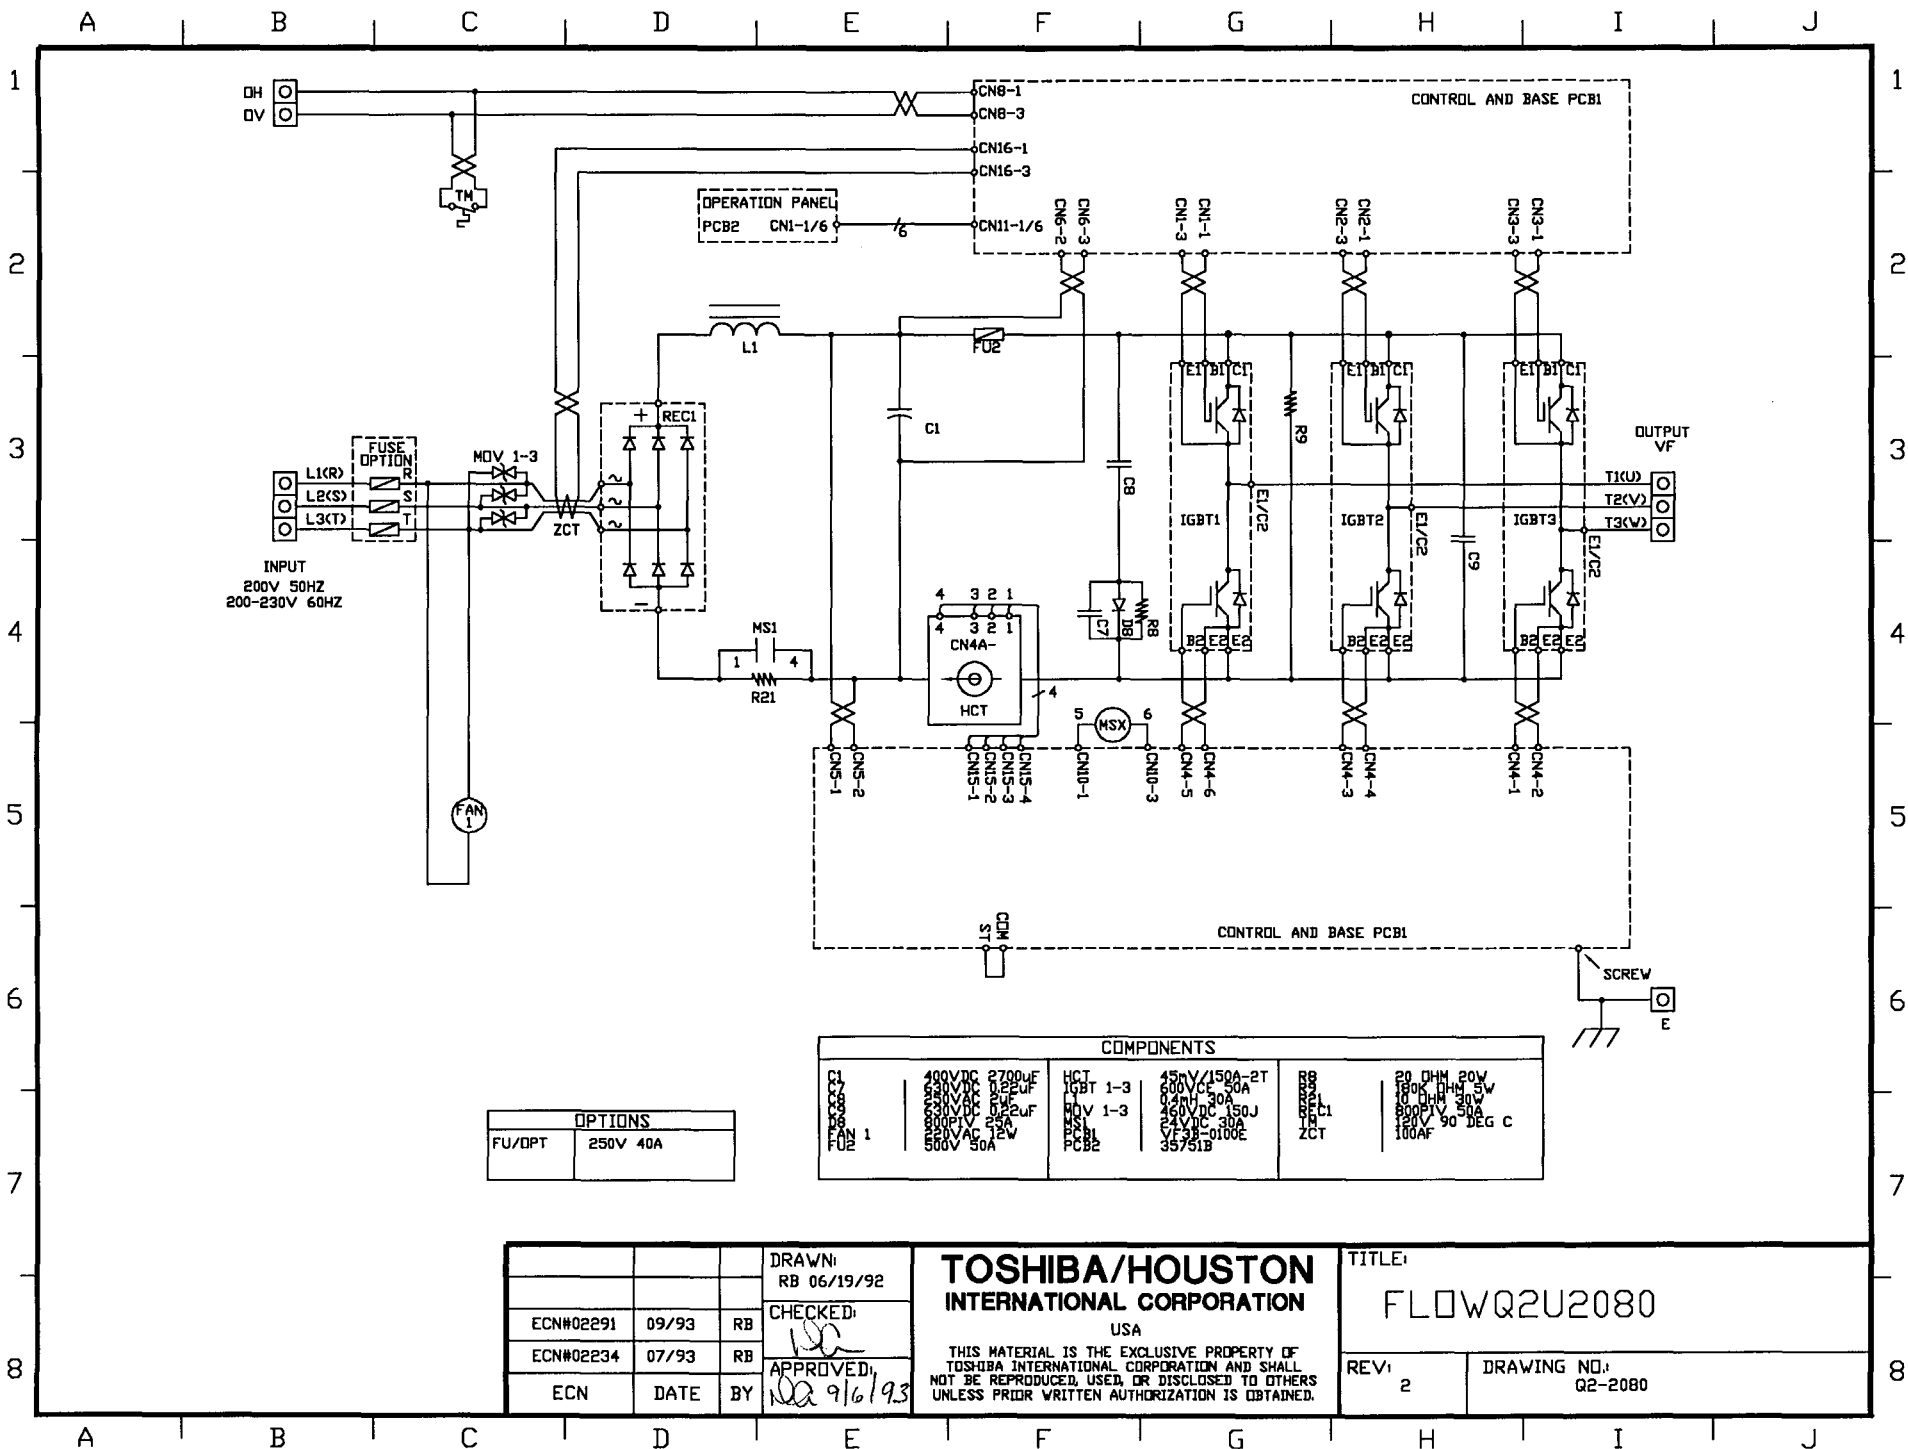

INPUT
200V 50HZ
200-230V 60HZ

OPTIONS	
FU/DPT	250V 40A


COMPONENTS					
C1	400VDC 2700UF	HCT	45V/150A-2T	RB	20 OHM 20W
D1-D3	600VDC 30A	IGBT 1-3	600VCE 50A	R9	180K OHM 5W
FAN 1	120VAC 1.5A	MOV 1-3	420VDC 150J	REC1	180 OHM 30W
FU2	250VAC 40A	MS1	250VDC 30A	R8	800V 90 DEG C
FU2 1	500V 50A	PCB2	VF-38-0100E	ZCT	100AF
			35751B		

ECN	DATE	BY	APPROVED
ECN#02291	09/93	RB	CHECKED
ECN#02234	07/93	RB	APPROVED
			9/6/93

TOSHIBA/HOUSTON
INTERNATIONAL CORPORATION
USA

THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF TOSHIBA INTERNATIONAL CORPORATION AND SHALL NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE:	
FLOWQ2U2080	
REV: 2	DRAWING NO: Q2-2080

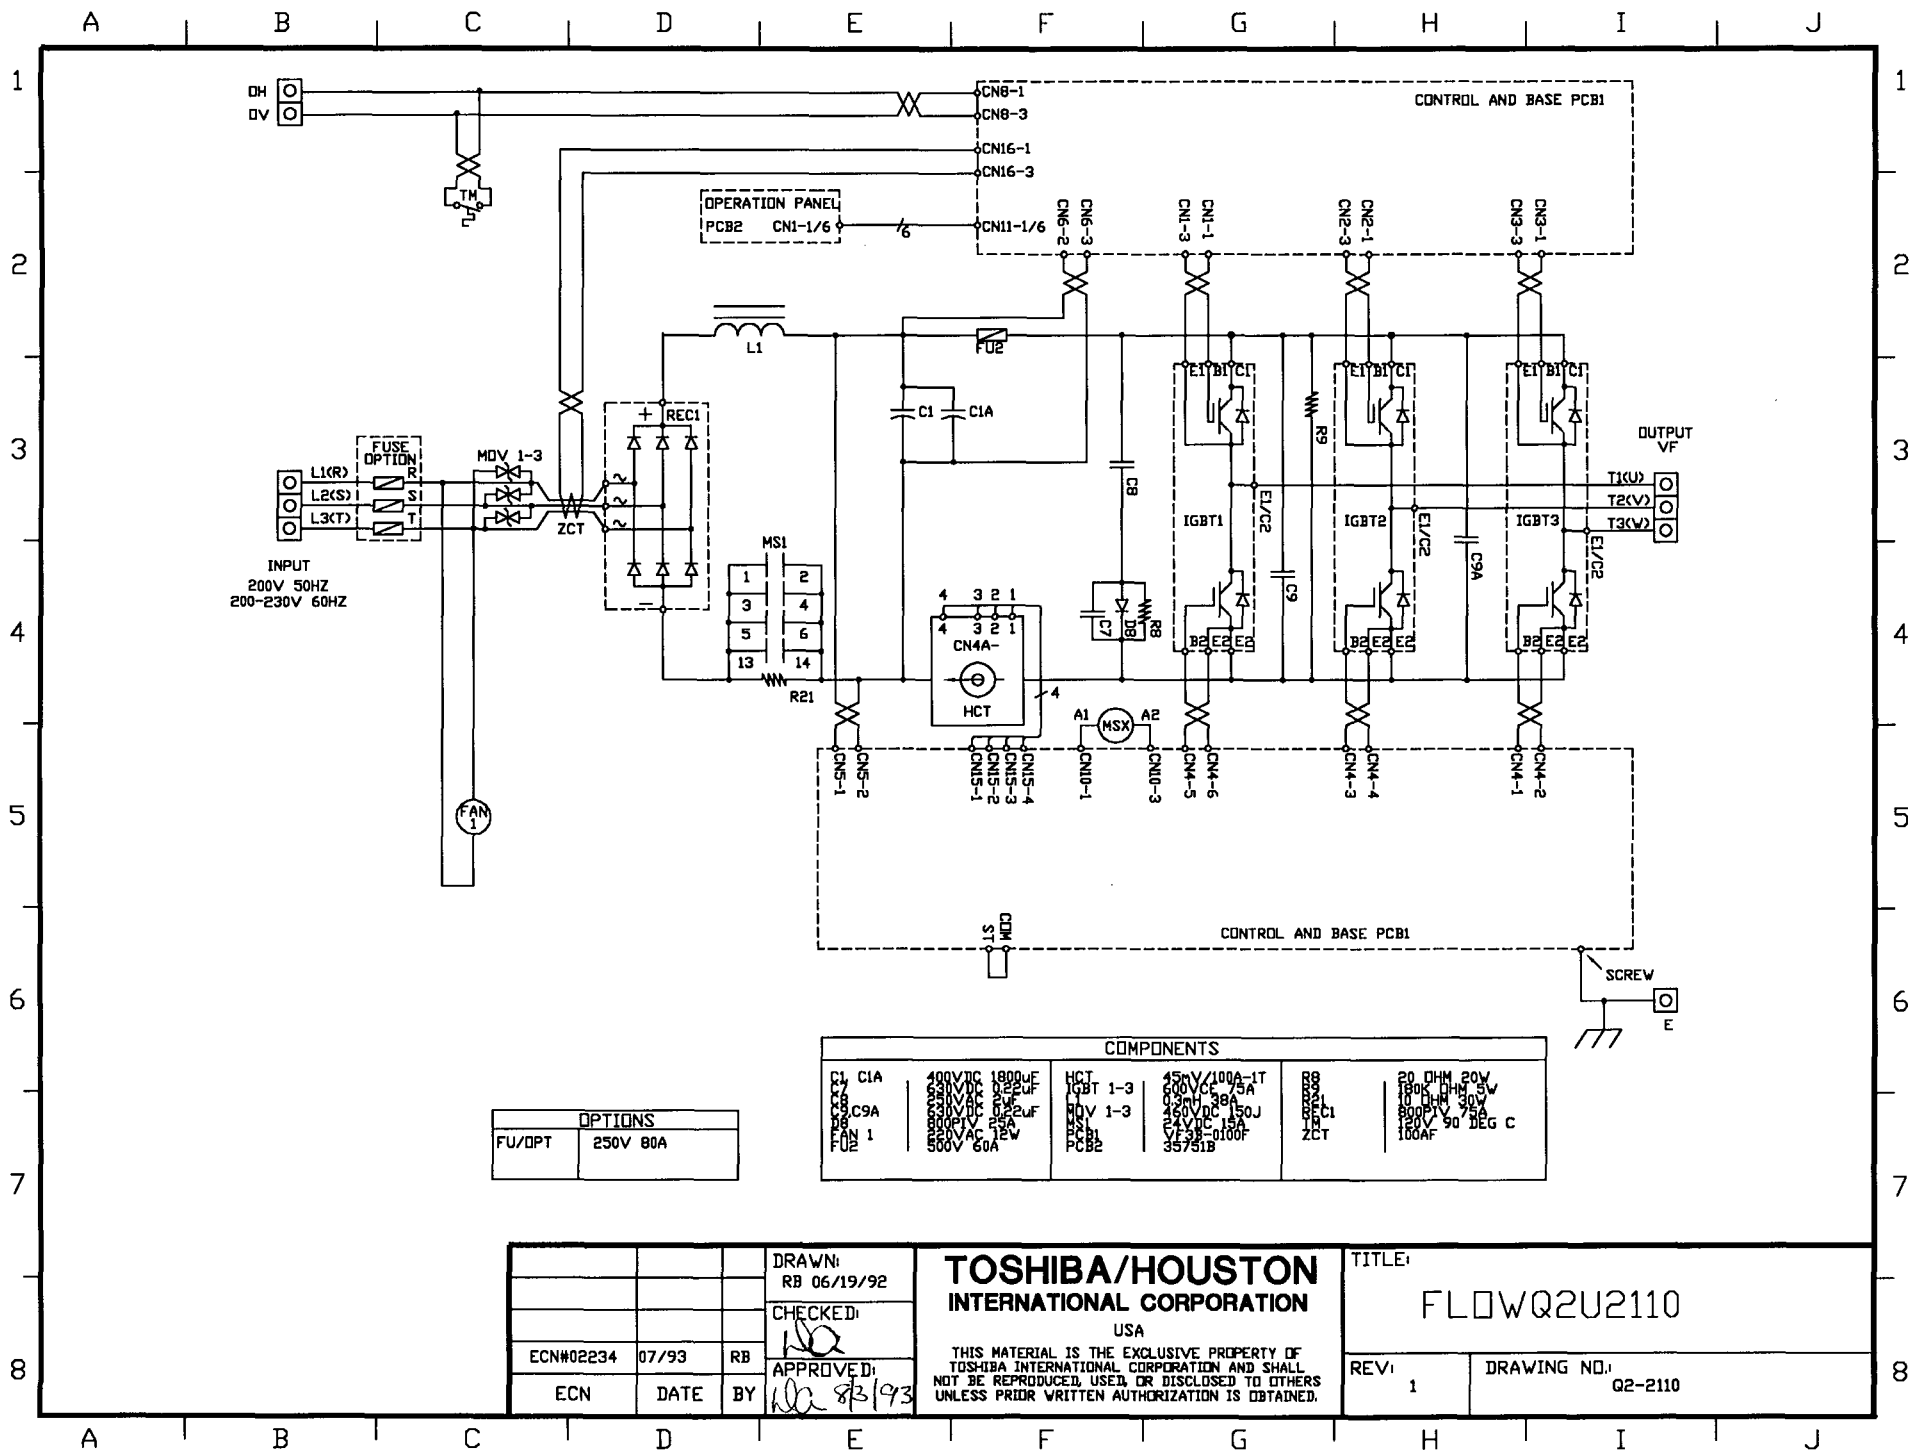

INPUT
200V 50HZ
200-230V 60HZ

OPERATION PANEL
PCB2 CN1-1/6

CONTROL AND BASE PCB1

CONTROL AND BASE PCB1


OPTIONS	
FU/DPT	250V 80A

COMPONENTS			
C1, CIA	400VDC 1800µF	HCT	45V/100A-1T
C2, C3, C7, C8, C9A	500VDC 22µF	IGBT 1-3	250VDC 3A
FAN 1	500VAC 12V	DIODE 1-3	600VDC 150J
FU 2	500V 60A	MSX	12VDC 150J
		PCB2	35751B
		IGBT	20 DMM 20V
		DIODE	180K DMM 3V
		DIODE	800VDC 30V
		DIODE	100V 50 DEG C
		DIODE	100AF

ECN#02234	07/93	RB	DRAWN: RB 06/19/92
			CHECKED: <i>[Signature]</i>
			APPROVED: <i>[Signature]</i> 8/3/93
ECN	DATE	BY	

TOSHIBA/HOUSTON
INTERNATIONAL CORPORATION
USA
THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF
TOSHIBA INTERNATIONAL CORPORATION AND SHALL
NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS
UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE:
FLOWQ2U2110
REV: 1
DRAWING NO.: Q2-2110

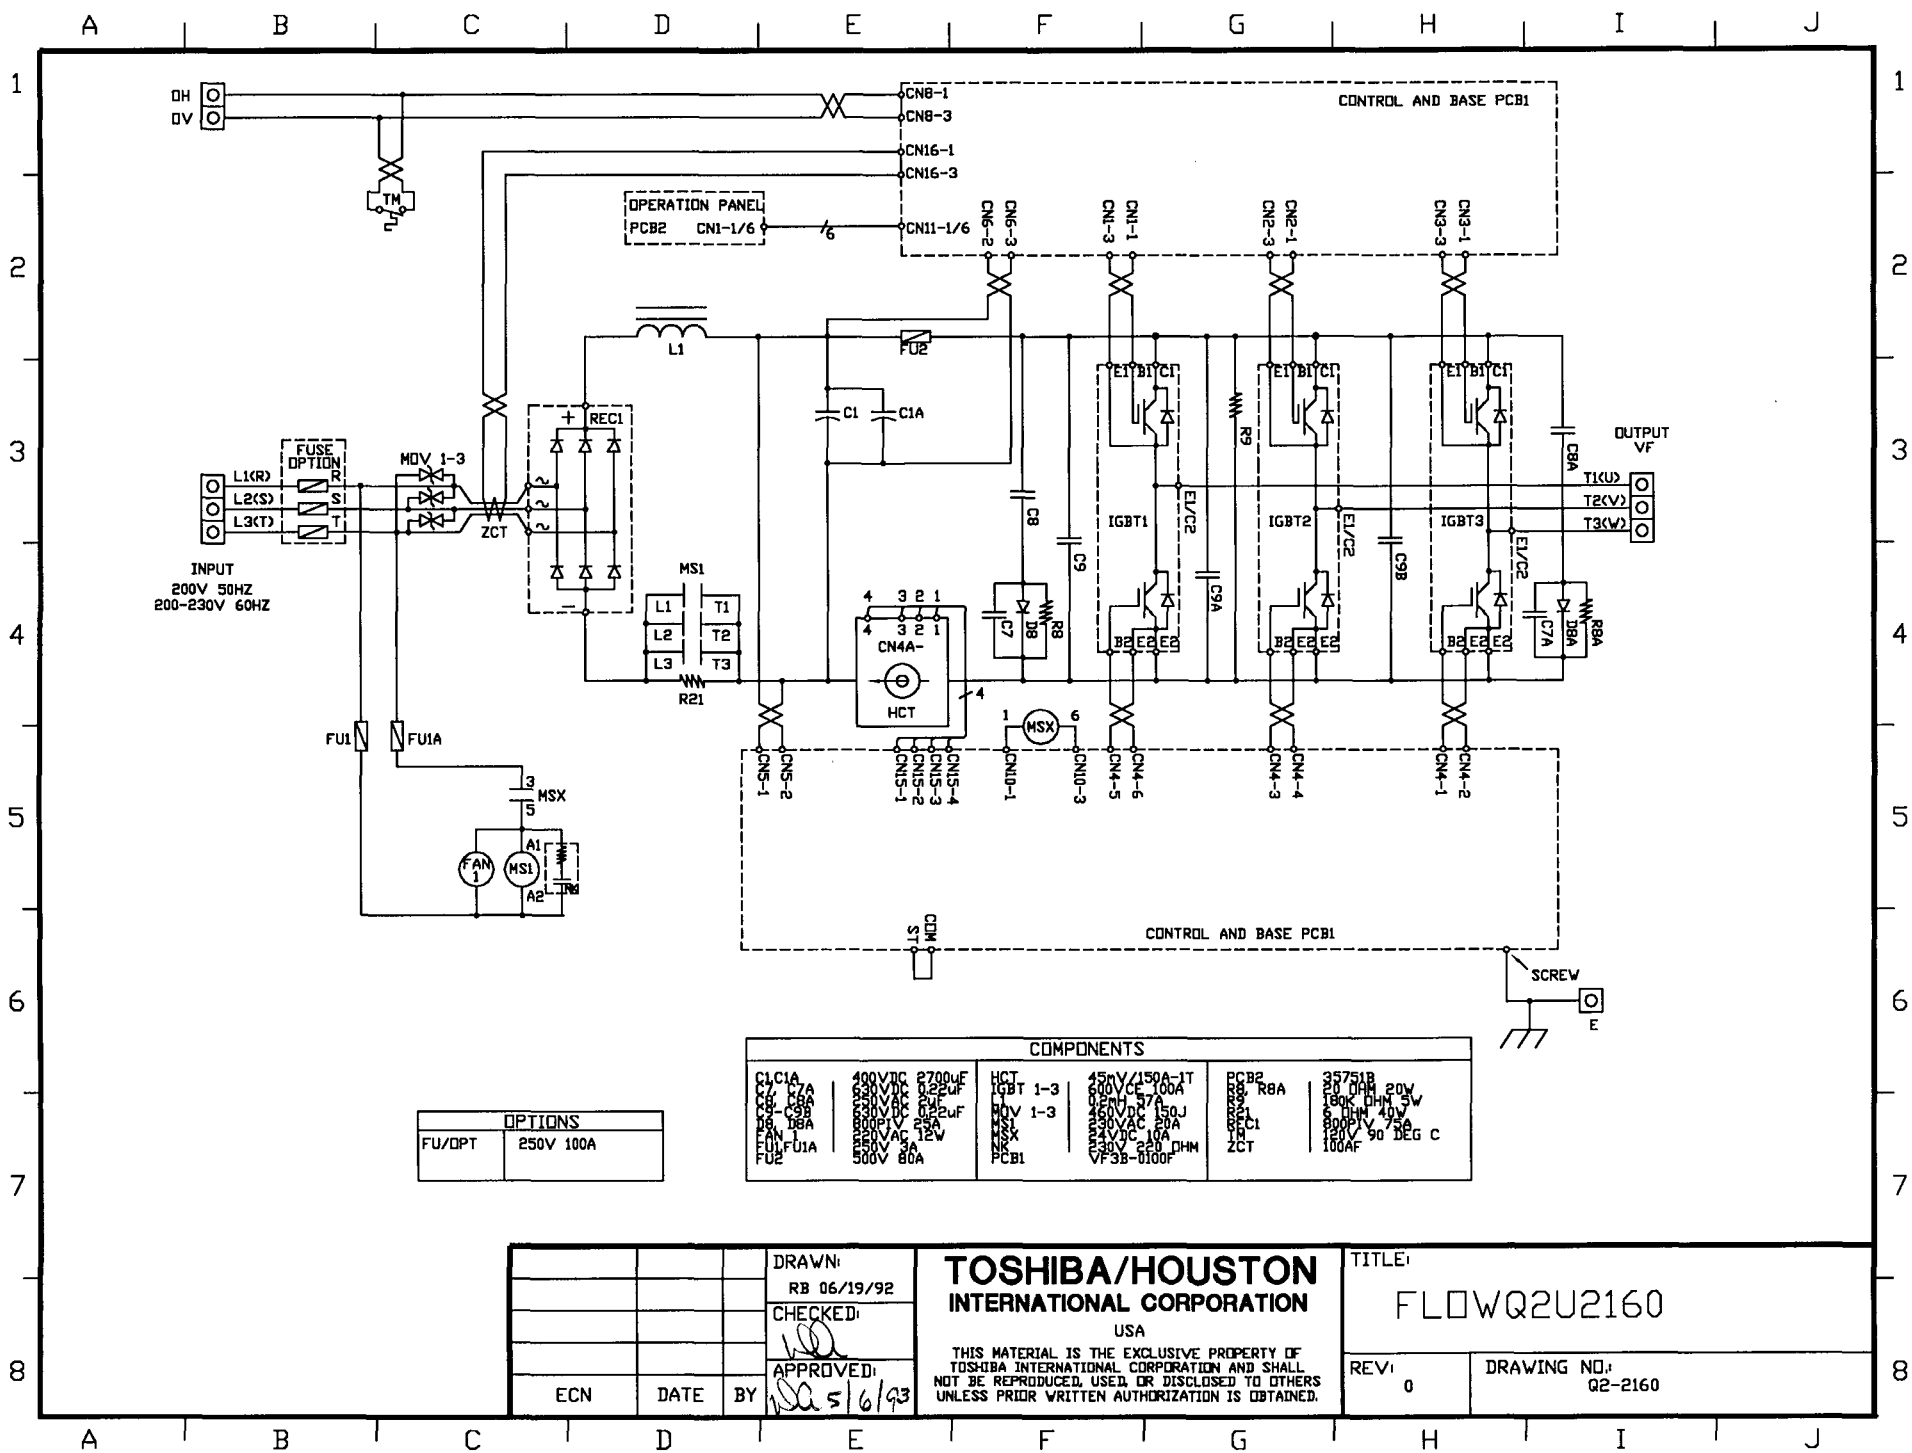

INPUT
200V 50HZ
200-230V 60HZ

OPTIONS	
FU/DPT	250V 100A


COMPONENTS					
C1, C1A	400VDC 2700UF	HCT	45V/150A-1T	PCB2	35751B
C7	100VDC 100UF	IGBT 1-3	600VCE 100A	R8A	20 OHM 20W
C7A	100VDC 100UF	MOV 1-3	0.5V 17	R9	180K OHM 5W
C8	100VDC 100UF	MSX	0.5V 17	RECI	800V 40A
C8A	100VDC 100UF	FAN 1	230VAC 20A	T1	100V 90 DEG C
C9	100VDC 100UF	FU1	250VDC 10A	T2	100V 90 DEG C
C9A	100VDC 100UF	FU1A	500VDC 80A	T3	100V 90 DEG C
C9B	100VDC 100UF	FU2	500VDC 80A	T4	100V 90 DEG C
C9C	100VDC 100UF	MSX	500VDC 80A	T5	100V 90 DEG C
C9D	100VDC 100UF	MSX	500VDC 80A	T6	100V 90 DEG C
C9E	100VDC 100UF	MSX	500VDC 80A	T7	100V 90 DEG C
C9F	100VDC 100UF	MSX	500VDC 80A	T8	100V 90 DEG C
C9G	100VDC 100UF	MSX	500VDC 80A	T9	100V 90 DEG C
C9H	100VDC 100UF	MSX	500VDC 80A	T10	100V 90 DEG C
C9I	100VDC 100UF	MSX	500VDC 80A	T11	100V 90 DEG C
C9J	100VDC 100UF	MSX	500VDC 80A	T12	100V 90 DEG C
C9K	100VDC 100UF	MSX	500VDC 80A	T13	100V 90 DEG C
C9L	100VDC 100UF	MSX	500VDC 80A	T14	100V 90 DEG C
C9M	100VDC 100UF	MSX	500VDC 80A	T15	100V 90 DEG C
C9N	100VDC 100UF	MSX	500VDC 80A	T16	100V 90 DEG C
C9O	100VDC 100UF	MSX	500VDC 80A	T17	100V 90 DEG C
C9P	100VDC 100UF	MSX	500VDC 80A	T18	100V 90 DEG C
C9Q	100VDC 100UF	MSX	500VDC 80A	T19	100V 90 DEG C
C9R	100VDC 100UF	MSX	500VDC 80A	T20	100V 90 DEG C
C9S	100VDC 100UF	MSX	500VDC 80A	T21	100V 90 DEG C
C9T	100VDC 100UF	MSX	500VDC 80A	T22	100V 90 DEG C
C9U	100VDC 100UF	MSX	500VDC 80A	T23	100V 90 DEG C
C9V	100VDC 100UF	MSX	500VDC 80A	T24	100V 90 DEG C
C9W	100VDC 100UF	MSX	500VDC 80A	T25	100V 90 DEG C
C9X	100VDC 100UF	MSX	500VDC 80A	T26	100V 90 DEG C
C9Y	100VDC 100UF	MSX	500VDC 80A	T27	100V 90 DEG C
C9Z	100VDC 100UF	MSX	500VDC 80A	T28	100V 90 DEG C
C10	100VDC 100UF	MSX	500VDC 80A	T29	100V 90 DEG C
C11	100VDC 100UF	MSX	500VDC 80A	T30	100V 90 DEG C
C12	100VDC 100UF	MSX	500VDC 80A	T31	100V 90 DEG C
C13	100VDC 100UF	MSX	500VDC 80A	T32	100V 90 DEG C
C14	100VDC 100UF	MSX	500VDC 80A	T33	100V 90 DEG C
C15	100VDC 100UF	MSX	500VDC 80A	T34	100V 90 DEG C
C16	100VDC 100UF	MSX	500VDC 80A	T35	100V 90 DEG C
C17	100VDC 100UF	MSX	500VDC 80A	T36	100V 90 DEG C
C18	100VDC 100UF	MSX	500VDC 80A	T37	100V 90 DEG C
C19	100VDC 100UF	MSX	500VDC 80A	T38	100V 90 DEG C
C20	100VDC 100UF	MSX	500VDC 80A	T39	100V 90 DEG C
C21	100VDC 100UF	MSX	500VDC 80A	T40	100V 90 DEG C
C22	100VDC 100UF	MSX	500VDC 80A	T41	100V 90 DEG C
C23	100VDC 100UF	MSX	500VDC 80A	T42	100V 90 DEG C
C24	100VDC 100UF	MSX	500VDC 80A	T43	100V 90 DEG C
C25	100VDC 100UF	MSX	500VDC 80A	T44	100V 90 DEG C
C26	100VDC 100UF	MSX	500VDC 80A	T45	100V 90 DEG C
C27	100VDC 100UF	MSX	500VDC 80A	T46	100V 90 DEG C
C28	100VDC 100UF	MSX	500VDC 80A	T47	100V 90 DEG C
C29	100VDC 100UF	MSX	500VDC 80A	T48	100V 90 DEG C
C30	100VDC 100UF	MSX	500VDC 80A	T49	100V 90 DEG C
C31	100VDC 100UF	MSX	500VDC 80A	T50	100V 90 DEG C
C32	100VDC 100UF	MSX	500VDC 80A	T51	100V 90 DEG C
C33	100VDC 100UF	MSX	500VDC 80A	T52	100V 90 DEG C
C34	100VDC 100UF	MSX	500VDC 80A	T53	100V 90 DEG C
C35	100VDC 100UF	MSX	500VDC 80A	T54	100V 90 DEG C
C36	100VDC 100UF	MSX	500VDC 80A	T55	100V 90 DEG C
C37	100VDC 100UF	MSX	500VDC 80A	T56	100V 90 DEG C
C38	100VDC 100UF	MSX	500VDC 80A	T57	100V 90 DEG C
C39	100VDC 100UF	MSX	500VDC 80A	T58	100V 90 DEG C
C40	100VDC 100UF	MSX	500VDC 80A	T59	100V 90 DEG C
C41	100VDC 100UF	MSX	500VDC 80A	T60	100V 90 DEG C
C42	100VDC 100UF	MSX	500VDC 80A	T61	100V 90 DEG C
C43	100VDC 100UF	MSX	500VDC 80A	T62	100V 90 DEG C
C44	100VDC 100UF	MSX	500VDC 80A	T63	100V 90 DEG C
C45	100VDC 100UF	MSX	500VDC 80A	T64	100V 90 DEG C
C46	100VDC 100UF	MSX	500VDC 80A	T65	100V 90 DEG C
C47	100VDC 100UF	MSX	500VDC 80A	T66	100V 90 DEG C
C48	100VDC 100UF	MSX	500VDC 80A	T67	100V 90 DEG C
C49	100VDC 100UF	MSX	500VDC 80A	T68	100V 90 DEG C
C50	100VDC 100UF	MSX	500VDC 80A	T69	100V 90 DEG C
C51	100VDC 100UF	MSX	500VDC 80A	T70	100V 90 DEG C
C52	100VDC 100UF	MSX	500VDC 80A	T71	100V 90 DEG C
C53	100VDC 100UF	MSX	500VDC 80A	T72	100V 90 DEG C
C54	100VDC 100UF	MSX	500VDC 80A	T73	100V 90 DEG C
C55	100VDC 100UF	MSX	500VDC 80A	T74	100V 90 DEG C
C56	100VDC 100UF	MSX	500VDC 80A	T75	100V 90 DEG C
C57	100VDC 100UF	MSX	500VDC 80A	T76	100V 90 DEG C
C58	100VDC 100UF	MSX	500VDC 80A	T77	100V 90 DEG C
C59	100VDC 100UF	MSX	500VDC 80A	T78	100V 90 DEG C
C60	100VDC 100UF	MSX	500VDC 80A	T79	100V 90 DEG C
C61	100VDC 100UF	MSX	500VDC 80A	T80	100V 90 DEG C
C62	100VDC 100UF	MSX	500VDC 80A	T81	100V 90 DEG C
C63	100VDC 100UF	MSX	500VDC 80A	T82	100V 90 DEG C
C64	100VDC 100UF	MSX	500VDC 80A	T83	100V 90 DEG C
C65	100VDC 100UF	MSX	500VDC 80A	T84	100V 90 DEG C
C66	100VDC 100UF	MSX	500VDC 80A	T85	100V 90 DEG C
C67	100VDC 100UF	MSX	500VDC 80A	T86	100V 90 DEG C
C68	100VDC 100UF	MSX	500VDC 80A	T87	100V 90 DEG C
C69	100VDC 100UF	MSX	500VDC 80A	T88	100V 90 DEG C
C70	100VDC 100UF	MSX	500VDC 80A	T89	100V 90 DEG C
C71	100VDC 100UF	MSX	500VDC 80A	T90	100V 90 DEG C
C72	100VDC 100UF	MSX	500VDC 80A	T91	100V 90 DEG C
C73	100VDC 100UF	MSX	500VDC 80A	T92	100V 90 DEG C
C74	100VDC 100UF	MSX	500VDC 80A	T93	100V 90 DEG C
C75	100VDC 100UF	MSX	500VDC 80A	T94	100V 90 DEG C
C76	100VDC 100UF	MSX	500VDC 80A	T95	100V 90 DEG C
C77	100VDC 100UF	MSX	500VDC 80A	T96	100V 90 DEG C
C78	100VDC 100UF	MSX	500VDC 80A	T97	100V 90 DEG C
C79	100VDC 100UF	MSX	500VDC 80A	T98	100V 90 DEG C
C80	100VDC 100UF	MSX	500VDC 80A	T99	100V 90 DEG C
C81	100VDC 100UF	MSX	500VDC 80A	T100	100V 90 DEG C

ECN	DATE	BY	APPROVED:
			<i>[Signature]</i>
			5/6/93

TOSHIBA/HOUSTON
INTERNATIONAL CORPORATION
USA
THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF
TOSHIBA INTERNATIONAL CORPORATION AND SHALL
NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS
UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE:	FLOWQ2U2160
REV:	0
DRAWING NO.:	Q2-2160

A B C D E F G H I J

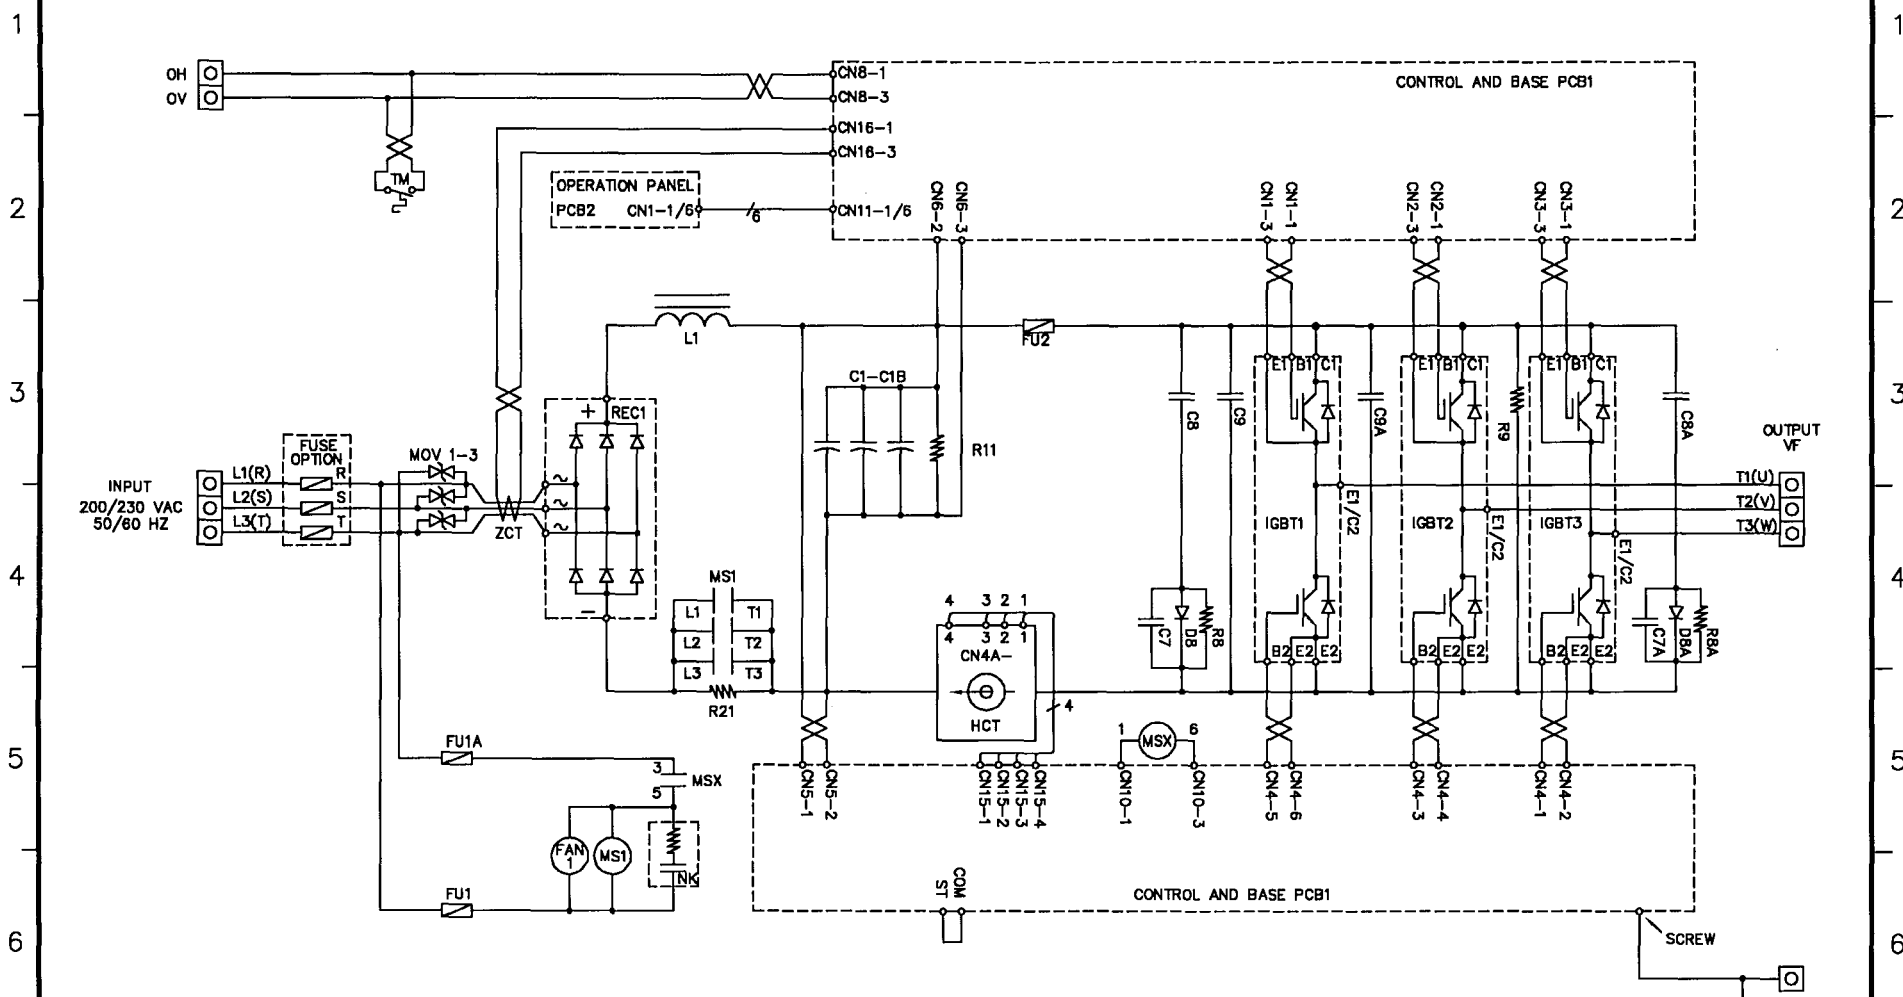

COMPONENTS	
C1-C1B	400VDC 1800µF
CA	630VAC 0.22µF
C7	100VDC 10µF
C8	630VDC 0.22µF
C8A	630VDC 0.22µF
C9	800µF 25A
C9A	250VAC 15W
FU1	250VAC 15A
FU2	500V 100A
HCT	45mV/200A-1T
IGBT1-3	600VCE 150A
L1	0.2mH 75A
MOV 1-3	480VDC 150J
MS1	230VAC 35A
MSX	24VDC 210A
NK	230V 220 OHM
PCB 1	VF3B-01005
PCB 2	35751B
R8	70 OHM 20W
R8A	180 OHM 5W
R9	51K OHM 5W
R11	60 OHM 40W
REC 1	800µF 100A
T1	120V 90 DEG C
ZCT	225 AF

OPTIONS	
FU OPT	250V 150A


			DRAWN: MR 6/92
# 02242	8/93	MR	CHECKED: <i>RJB</i>
# 02211	6/93	MR	APPROVED: <i>MR 8/10/93</i>
ECN	DATE	BY	

TOSHIBA/HOUSTON
INTERNATIONAL CORPORATION
 USA

THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF TOSHIBA INTERNATIONAL CORPORATION AND SHALL NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE: FLOWQ2U2220	
REV: 2	DRAWING NO.: Q2-2220

A B C D E F G H I J

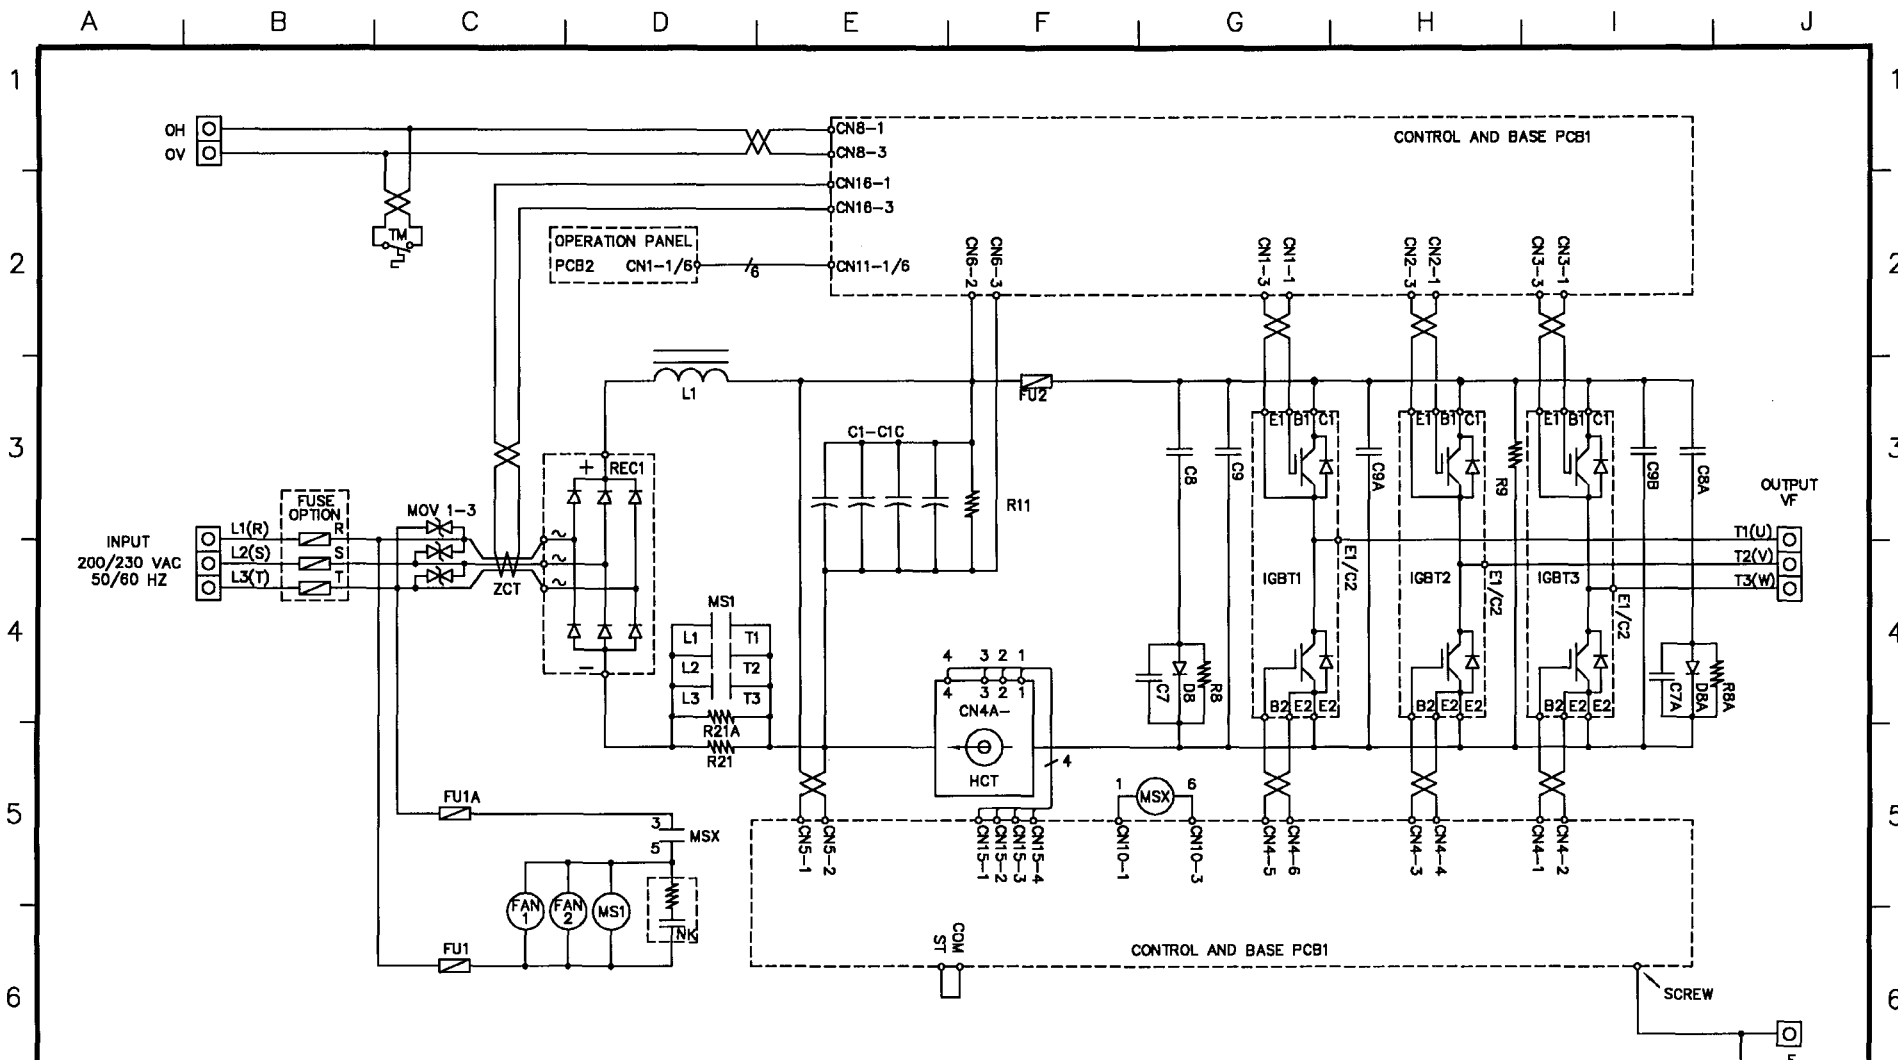

COMPONENTS			
C1-C1C	400VDC 1800µF	HCT	45mV/200A-1T
C6, C7A	950VDC 0.22µF	IGBT1-3	600VDC 150A
C8	950VDC 0.22µF	MOV 1-3	0.15µF 50A
C9-C9B	630VDC 0.22µF	MS1	460VDC 150J
DB, DBA	800DIV 25A	MSX	230VAC 50A
EN 1, 2	250VAC 15W	NSX	24VDC 10A
FU1, FU2A	250VAC 3A	PCB 1	230V 220 OHM
FU2	500V 125A	PCB 2	VF3B-0100G1


OPTIONS	
FU OPT	250V 200A

ECN#	DATE	BY	APPROVED:
Q2242	8/93	MR	<i>MR</i>
Q2211	7/93	MR	<i>MR</i>
ECN	DATE	BY	APPROVED:
			<i>MR</i> 8/10/93

TOSHIBA/HOUSTON INTERNATIONAL CORPORATION
USA

THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF TOSHIBA INTERNATIONAL CORPORATION AND SHALL NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE:	
FLOWQ2U2270	
REV: 2	DRAWING NO: Q2-2270

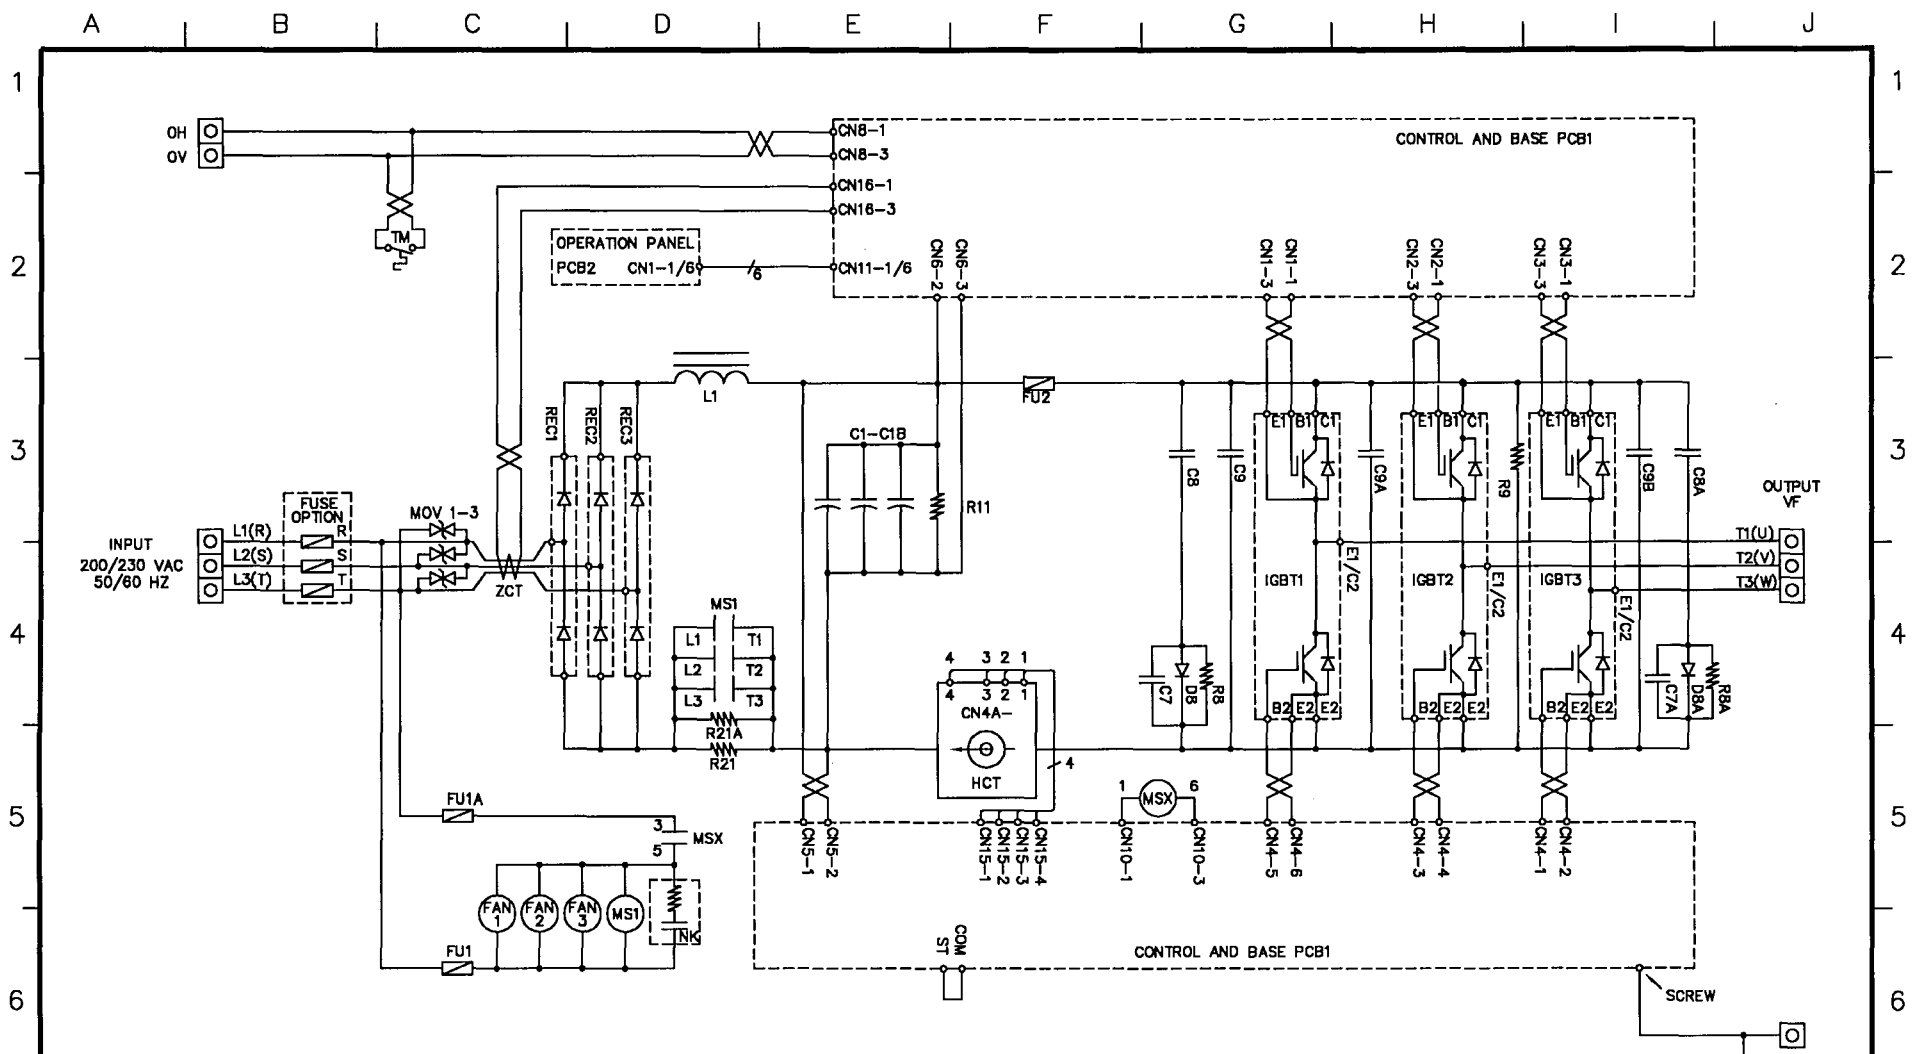


COMPONENTS	
C1-C1B	400VDC 3300uF
C7	50VDC 0.22uF
C8-C8B	1000VDC 0.47uF
DB	800V 25A
FAN 1-3	230VAC 12W
FU1, FU1A	250V 3A
HCT	500V 150A
IGBT1-3	450V/200A-1T
MOV 1-3	480VDC 150J
MSX	230VAC 50A
MS1	230VAC 10A
NK	230V 220 OHM
PCB 1	VE3B-0100G2
R8, RBA	20 OHM 20W
R7	180 OHM 5W
R7A	25K OHM 10W
R21, R21A	10 OHM 10W
REC 1-3	800V 10A
ZCT	225 AF

OPTIONS	
FU OPT	250V 200A

ECN #	DATE	BY	APPROVED
Q2211	7/93	MR	<i>[Signature]</i>
			7/22/93

TOSHIBA/HOUSTON INTERNATIONAL CORPORATION
 USA
 THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF TOSHIBA INTERNATIONAL CORPORATION AND SHALL NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE:	FLOWQ2U2330	
REV:	1	DRAWING NO.: Q2-2330

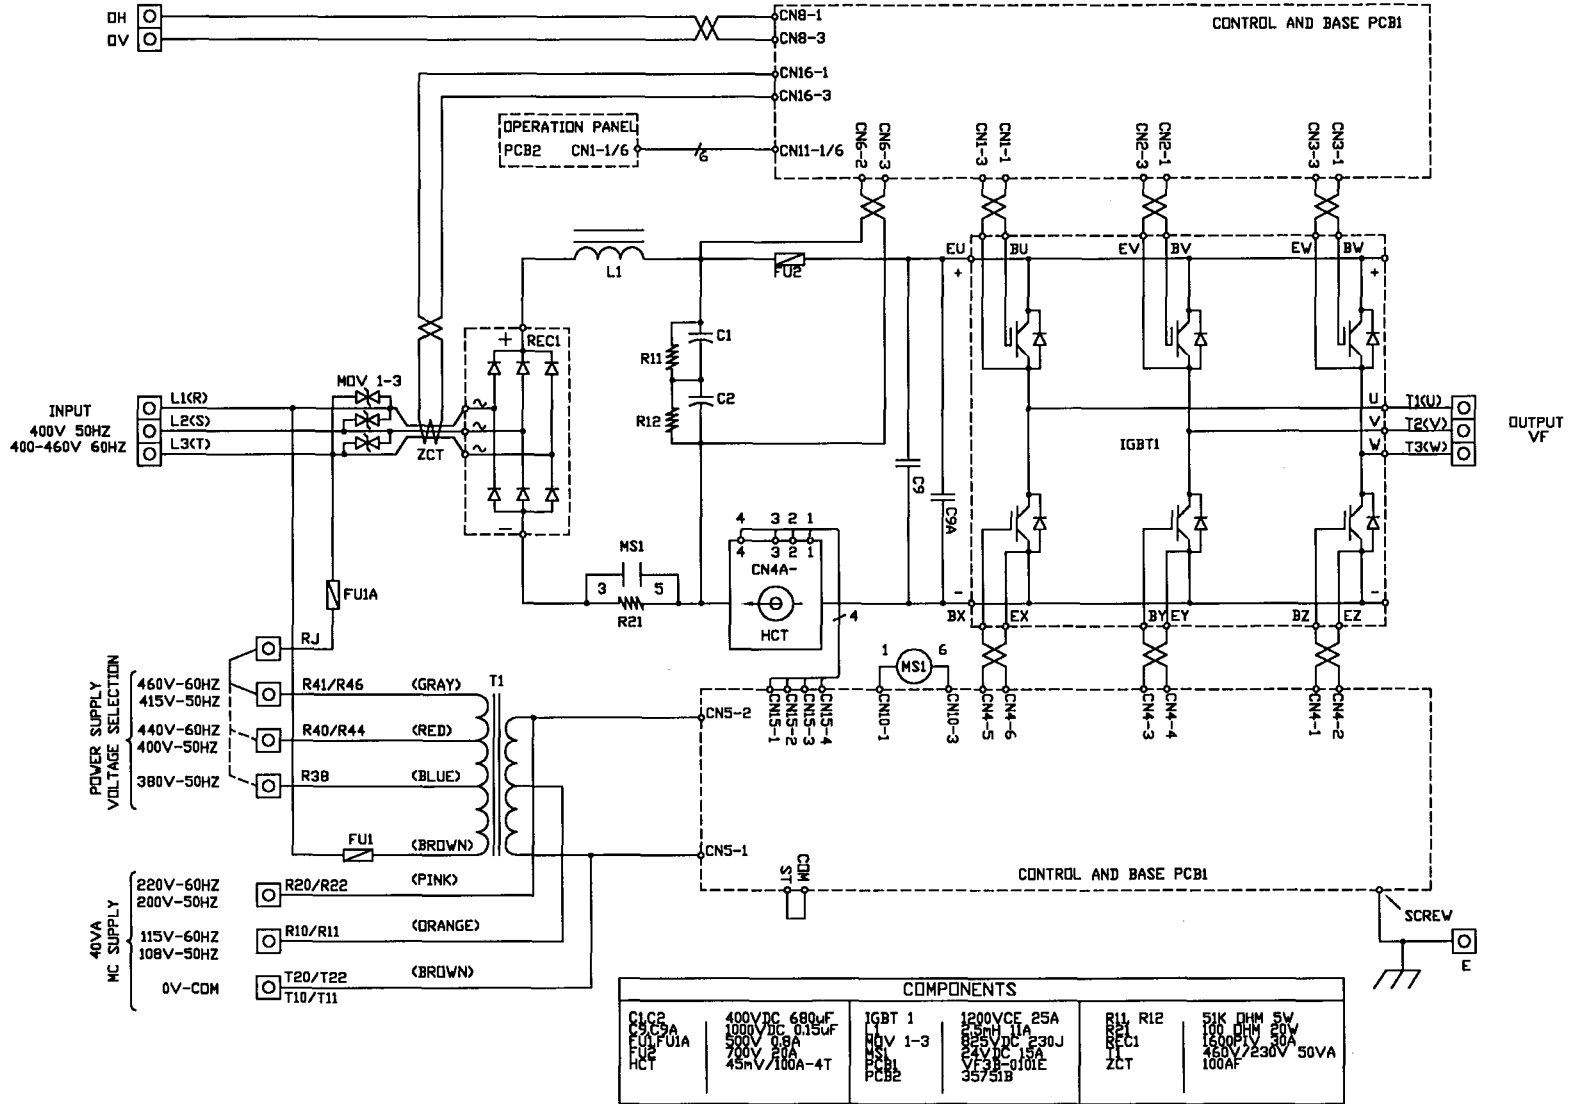


POWER SUPPLY VOLTAGE SELECTION

460V-60HZ
415V-50HZ
440V-60HZ
400V-50HZ
380V-50HZ

40VA MC SUPPLY

220V-60HZ
200V-50HZ
115V-60HZ
108V-50HZ
0V-COM

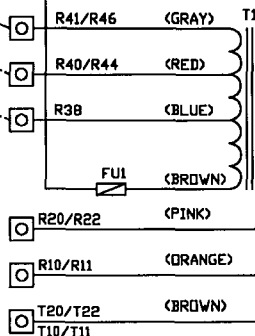


COMPONENTS			
C1C2	400VDC 680uF	IGBT 1	1200VCE 25A
C8C9A	1000VDC 0.15uF	R21	820m 1A
FU1FU2	500V 0.8A	MDV 1-3	825VDC 230J
HCT	45mV/100A-4T	PCB1	21VDC 162
		PCB2	35751B
R11 R12	51K OHM 5W	REC1	1600PIV 30A
	100 OHM 5W	ZCT	460V/230V 50VA
	100AF		

ECN	DATE	BY	APPROVED:
			3/8/93

TOSHIBA/HOUSTON
INTERNATIONAL CORPORATION
USA

THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF TOSHIBA INTERNATIONAL CORPORATION AND SHALL NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE: FLOWQ2U4055	
REV: 0	DRAWING NO.: Q2-4055

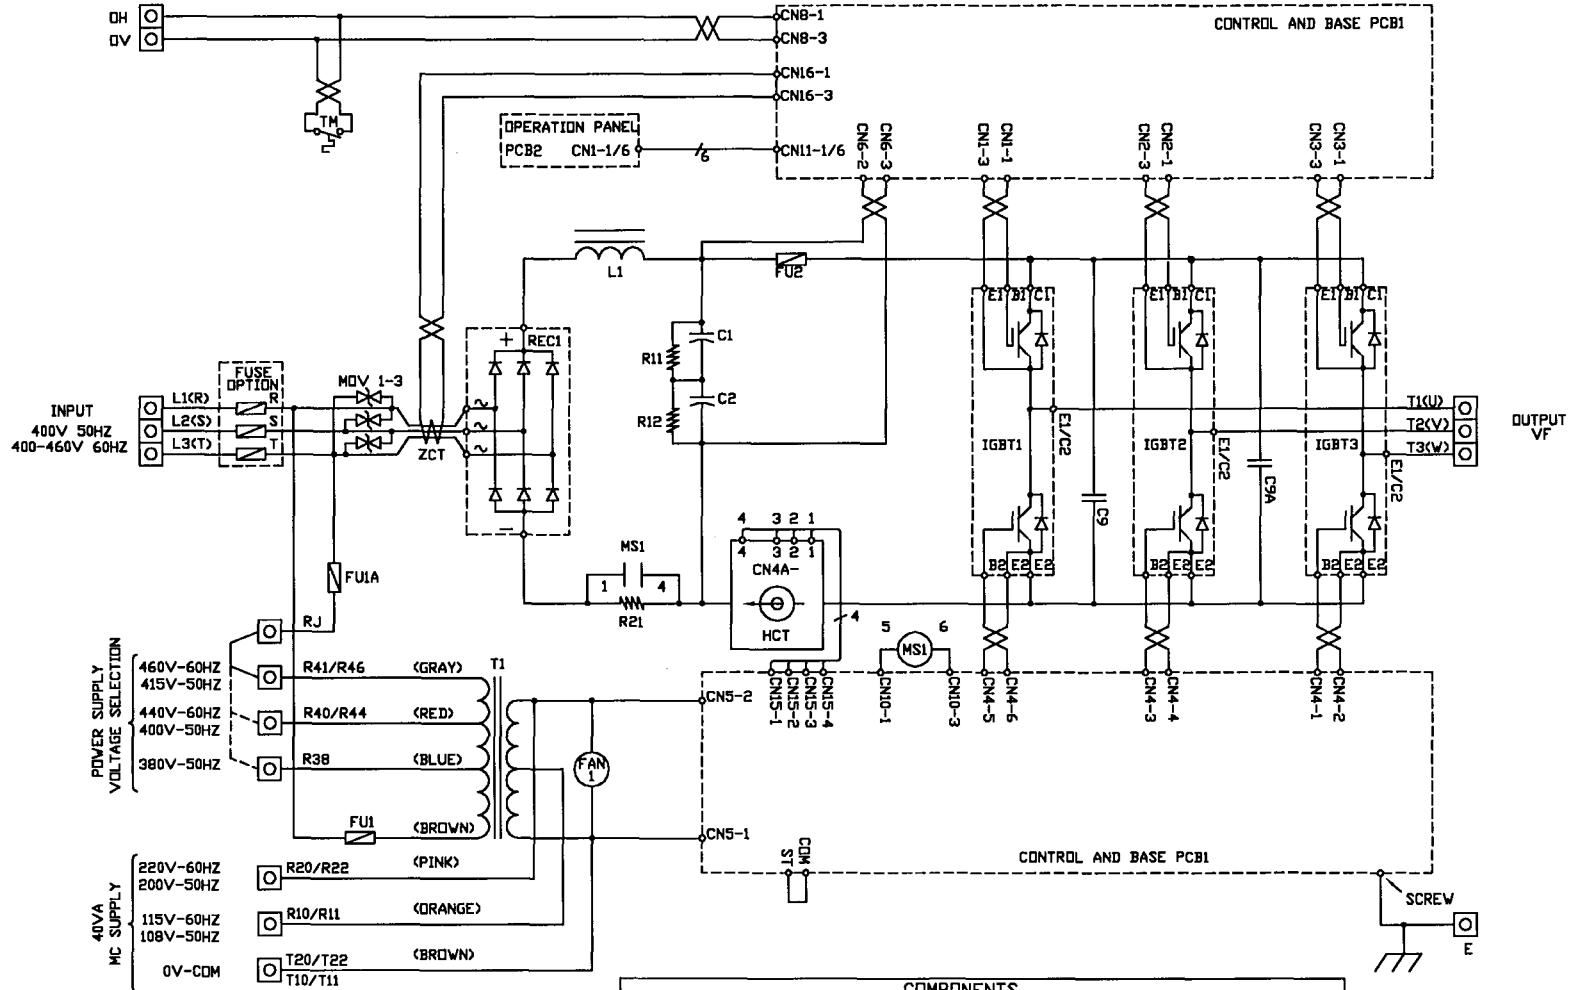

POWER SUPPLY VOLTAGE SELECTION

460V-60HZ
415V-50HZ
440V-60HZ
400V-50HZ
380V-50HZ

40VA MC SUPPLY

220V-60HZ
200V-50HZ
115V-60HZ
108V-50HZ
0V-CDM

OPTIONS	
FU/OPT	500V 40A


COMPONENTS			
CLC2	400VDC 1800µF	IGBT 1-3	1200VCE 50A
C9,C9A	1000VDC 0.15µF	MOV 1-3	825VDC 20A
FAN-1	220VAC 12W	MS1	825VDC 230J
FU1,FU1A	500V 40A	MS2	51VDC 30A
FU2	250V 40A	PCB1	51VDC 010E
HCT	4.5V/100A-2T	PCB2	35731B
R11, R12	51K 0HM 5W	REC1	1600V 30A
R20, R22	40 0HM 30W	TM	480V/230V 50VA
R40, R44	1600V 30A	ZCT	100AF
R41, R46	480V/230V 50VA		
R38	100AF		
R10, R11			
T20, T22			
T10, T11			

ECN#02592	8/94	MR	DRAWN: RB 06/19/92
ECN#02414	1/94	RB	CHECKED: <i>[Signature]</i>
ECN	DATE	BY	APPROVED: <i>[Signature]</i> 8/23/94

TOSHIBA/HOUSTON
INTERNATIONAL CORPORATION
USA

THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF TOSHIBA INTERNATIONAL CORPORATION AND SHALL NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE: FLOWQ2U4110	REV: 2	DRAWING NO.:	Q2-4110
------------------------------	-----------	--------------	---------

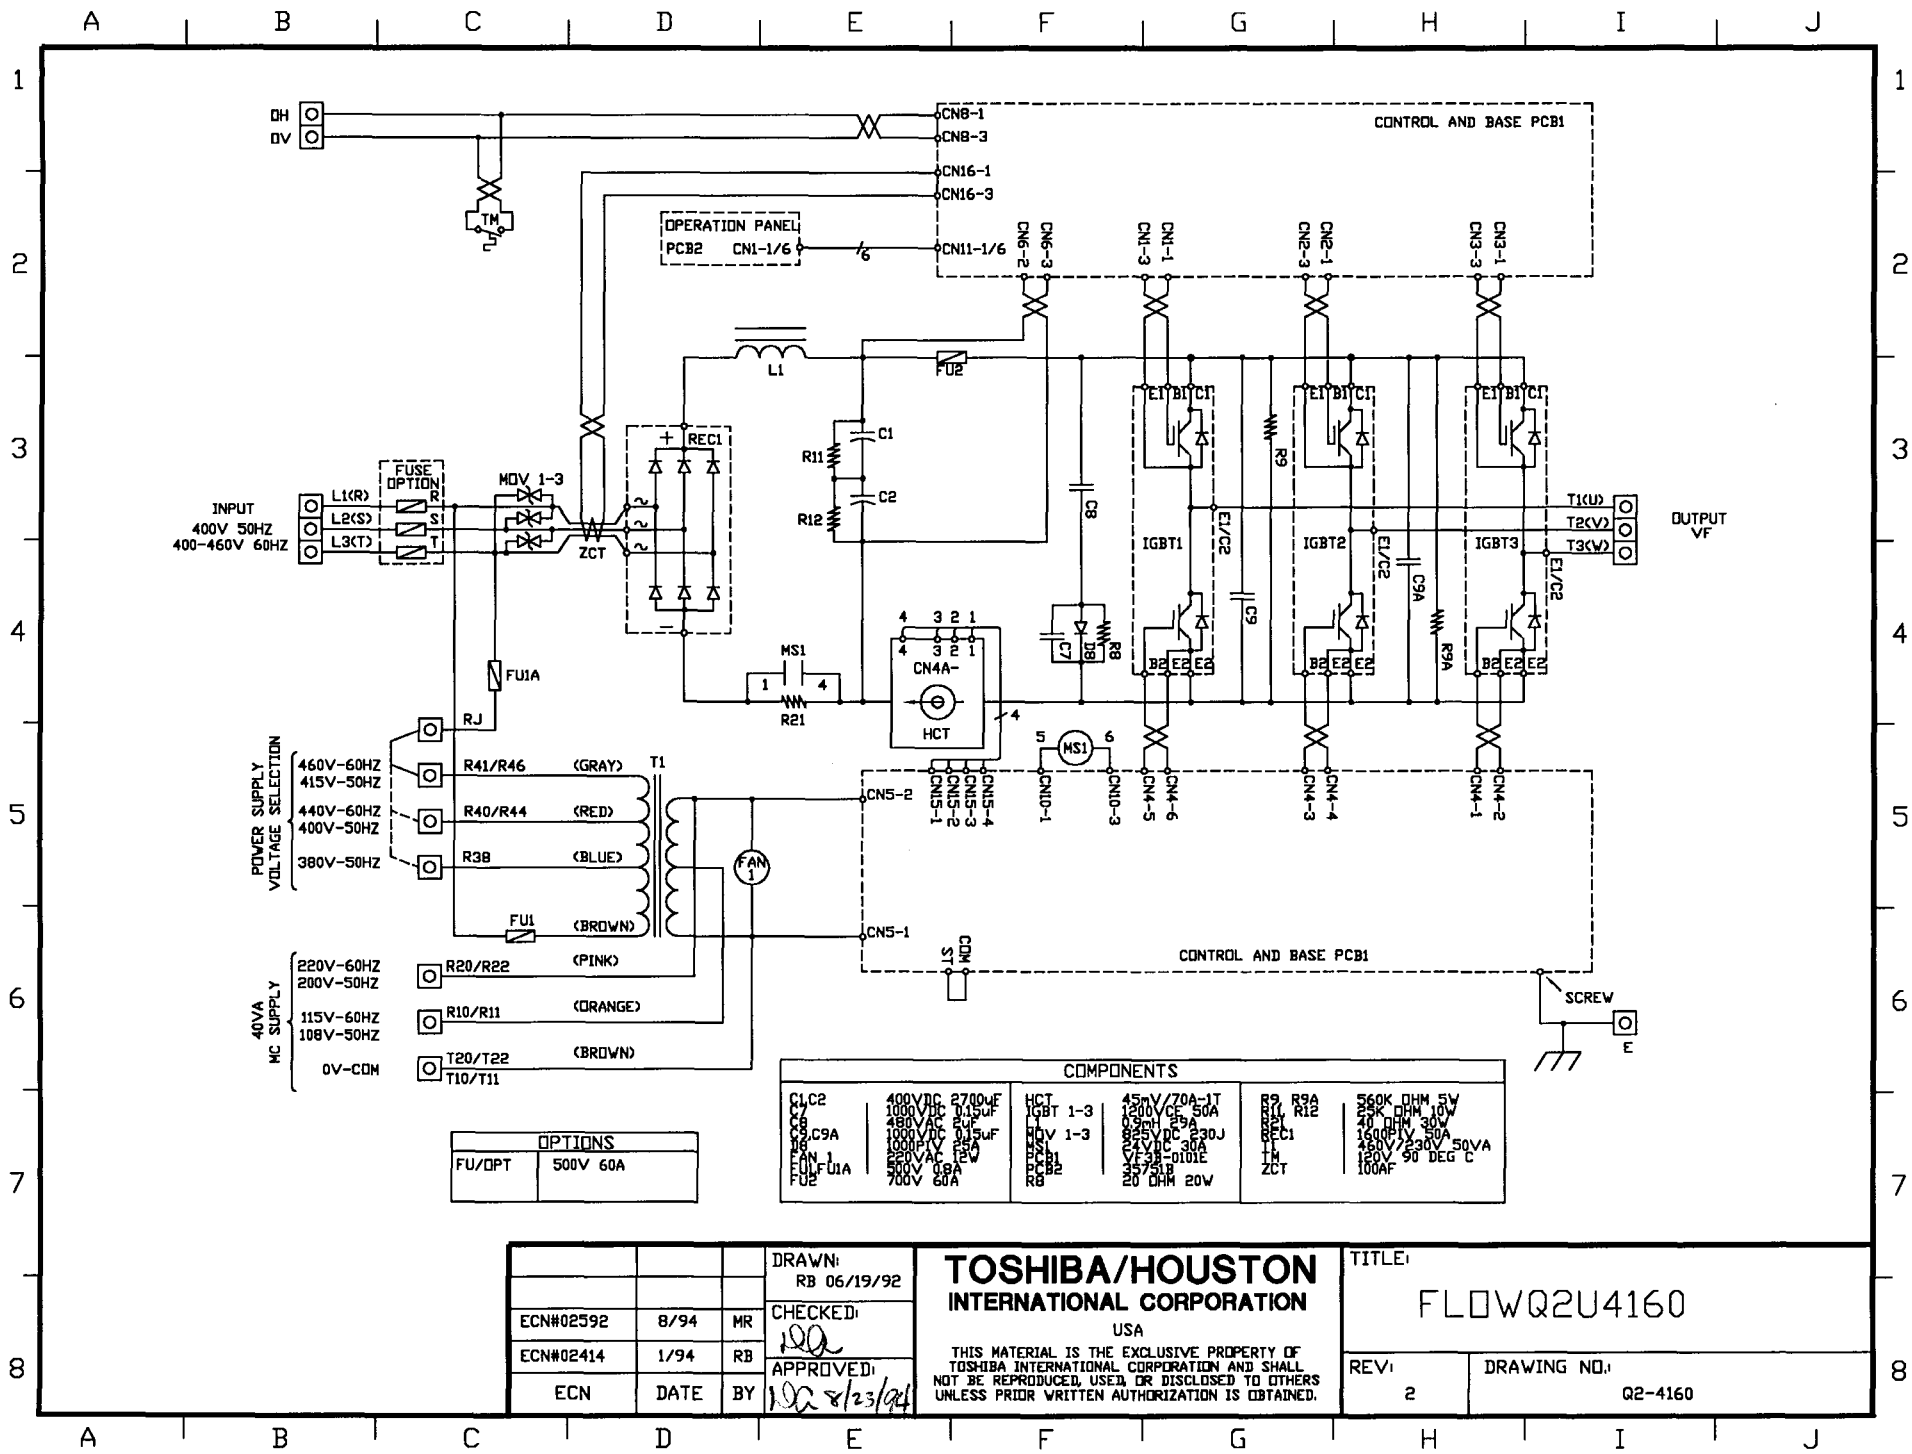

INPUT
400V 50HZ
400-460V 60HZ

POWER SUPPLY VOLTAGE SELECTION

- 460V-60HZ
- 415V-50HZ
- 440V-60HZ
- 400V-50HZ
- 380V-50HZ

40VA MC SUPPLY

- 220V-60HZ
- 200V-50HZ
- 115V-60HZ
- 108V-50HZ
- 0V-00H

OPTIONS	
FU/OPT	500V 60A


COMPONENTS					
CLC2	400VDC 2700UF	HCT	45V/70A-1T	R9 R9A	560K OHM 5W
C6	1000VDC 1.5UF	IGBT 1-3	150V 50A	R11 R12	50K OHM 5W
C9	480VAC 2UF	IGBT 1-3	150V 50A	R8	40 OHM 30W
C9A	1000VDC 0.15UF	MOV 1-3	825VDC 230J	REC1	1600PFC 50A
FU1	1000VDC 150A	MS1	24VDC 30A	FAN 1	180V/30V 50VA
FU1A	500VAC 150A	MS1	35VDC 101E	ZCT	450V 50 DEG C
FU2	500VAC 60A	RB	20 OHM 20W		1000AF

ECN	DATE	BY
ECN#02592	8/94	MR
ECN#02414	1/94	RB
ECN	DATE	BY
		RB 8/23/94

TOSHIBA/HOUSTON INTERNATIONAL CORPORATION
USA

THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF TOSHIBA INTERNATIONAL CORPORATION AND SHALL NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE:	
FLOWQ2U4160	
REV:	DRAWING NO.:
2	Q2-4160

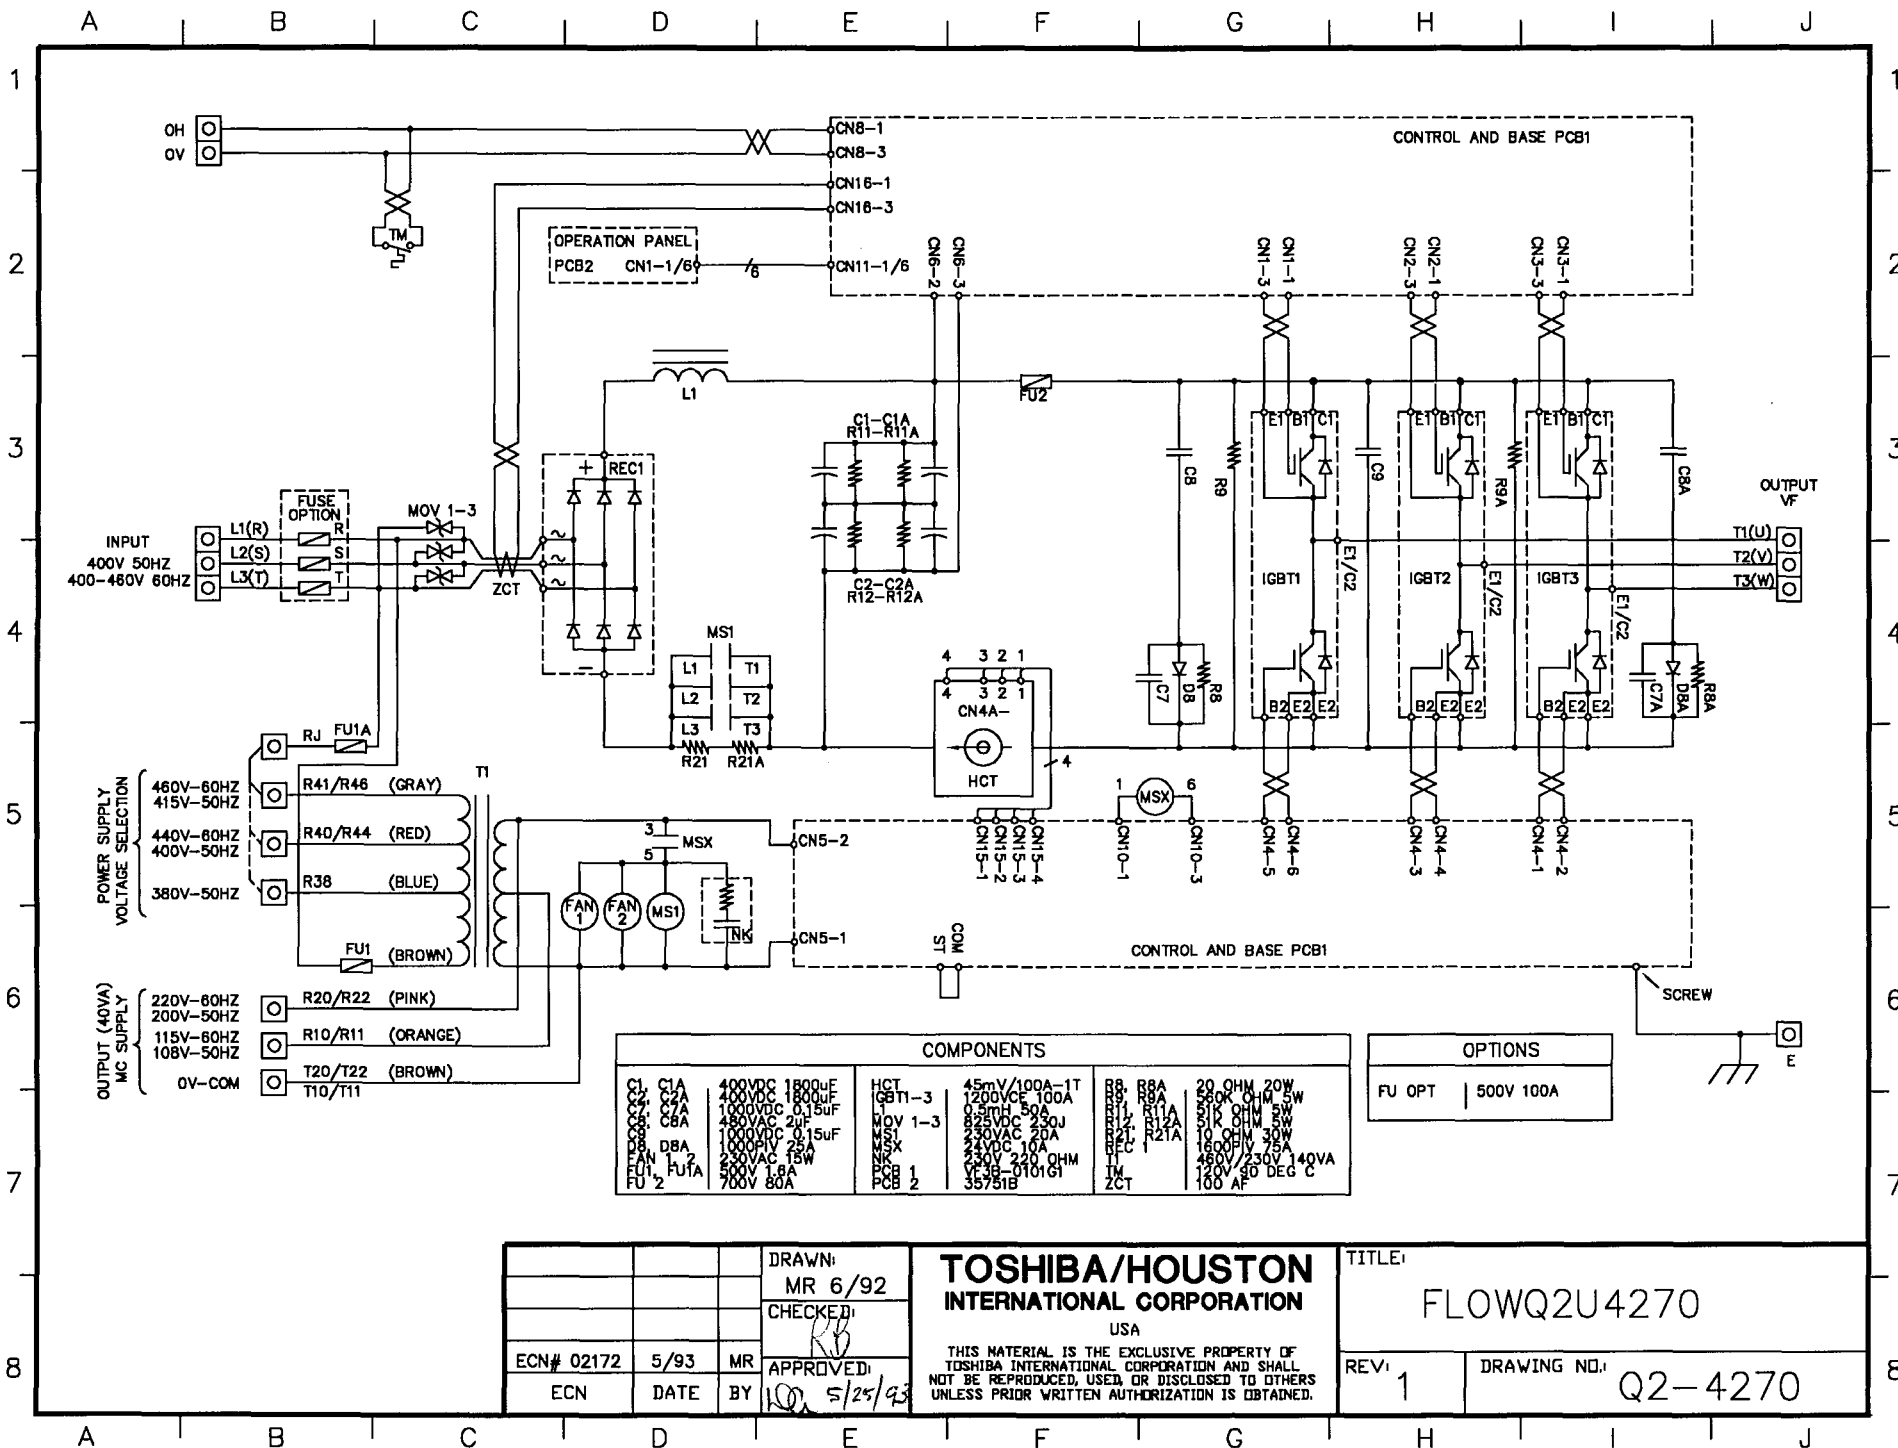


COMPONENTS	
C1, C1A	400VDC 1800µF
C2, C2A	400VDC 1800µF
C6, C6A	480VAC 2µF
C8, C8A	1000VDC 0.15µF
DB, DBA	1000VDC 15W
DB1, DB2	500VAC 15W
FU 1, FU2	500V 80A
FU 2	700V 80A
HCT	45mV/100A-1T
IGBT1-3	1200VCE 100A
MOV 1-3	825VDC 50A
MS1	230VAC 20A
MSX	230VDC 20A
PCB 1	1.43-2101G1
PCB 2	35781B
R8, R8A	20 OHM 20W
R9, R9A	20 OHM 20W
R10, R10A	20 OHM 20W
R11, R11A	20 OHM 20W
R12, R12A	20 OHM 20W
R20, R20A	10 OHM 30W
R21, R21A	10 OHM 30W
R22, R22A	10 OHM 30W
R23, R23A	10 OHM 30W
R24, R24A	10 OHM 30W
R25, R25A	10 OHM 30W
R26, R26A	10 OHM 30W
R27, R27A	10 OHM 30W
R28, R28A	10 OHM 30W
R29, R29A	10 OHM 30W
R30, R30A	10 OHM 30W
R31, R31A	10 OHM 30W
R32, R32A	10 OHM 30W
R33, R33A	10 OHM 30W
R34, R34A	10 OHM 30W
R35, R35A	10 OHM 30W
R36, R36A	10 OHM 30W
R37, R37A	10 OHM 30W
R38, R38A	10 OHM 30W
R39, R39A	10 OHM 30W
R40, R40A	10 OHM 30W
R41, R41A	10 OHM 30W
R42, R42A	10 OHM 30W
R43, R43A	10 OHM 30W
R44, R44A	10 OHM 30W
R45, R45A	10 OHM 30W
R46, R46A	10 OHM 30W
R47, R47A	10 OHM 30W
R48, R48A	10 OHM 30W
R49, R49A	10 OHM 30W
R50, R50A	10 OHM 30W
R51, R51A	10 OHM 30W
R52, R52A	10 OHM 30W
R53, R53A	10 OHM 30W
R54, R54A	10 OHM 30W
R55, R55A	10 OHM 30W
R56, R56A	10 OHM 30W
R57, R57A	10 OHM 30W
R58, R58A	10 OHM 30W
R59, R59A	10 OHM 30W
R60, R60A	10 OHM 30W
R61, R61A	10 OHM 30W
R62, R62A	10 OHM 30W
R63, R63A	10 OHM 30W
R64, R64A	10 OHM 30W
R65, R65A	10 OHM 30W
R66, R66A	10 OHM 30W
R67, R67A	10 OHM 30W
R68, R68A	10 OHM 30W
R69, R69A	10 OHM 30W
R70, R70A	10 OHM 30W
R71, R71A	10 OHM 30W
R72, R72A	10 OHM 30W
R73, R73A	10 OHM 30W
R74, R74A	10 OHM 30W
R75, R75A	10 OHM 30W
R76, R76A	10 OHM 30W
R77, R77A	10 OHM 30W
R78, R78A	10 OHM 30W
R79, R79A	10 OHM 30W
R80, R80A	10 OHM 30W
R81, R81A	10 OHM 30W
R82, R82A	10 OHM 30W
R83, R83A	10 OHM 30W
R84, R84A	10 OHM 30W
R85, R85A	10 OHM 30W
R86, R86A	10 OHM 30W
R87, R87A	10 OHM 30W
R88, R88A	10 OHM 30W
R89, R89A	10 OHM 30W
R90, R90A	10 OHM 30W
R91, R91A	10 OHM 30W
R92, R92A	10 OHM 30W
R93, R93A	10 OHM 30W
R94, R94A	10 OHM 30W
R95, R95A	10 OHM 30W
R96, R96A	10 OHM 30W
R97, R97A	10 OHM 30W
R98, R98A	10 OHM 30W
R99, R99A	10 OHM 30W
R100, R100A	10 OHM 30W

OPTIONS	
FU OPT	500V 100A

DRAWN: MR 6/92		TOSHIBA/HOUSTON INTERNATIONAL CORPORATION USA	TITLE: FLOWQ2U4270
CHECKED: [Signature]			REV: 1
ECN# 02172	5/93	MR [Signature]	APPROVED: [Signature]
ECN	DATE	BY	5/25/93


THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF TOSHIBA INTERNATIONAL CORPORATION AND SHALL NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

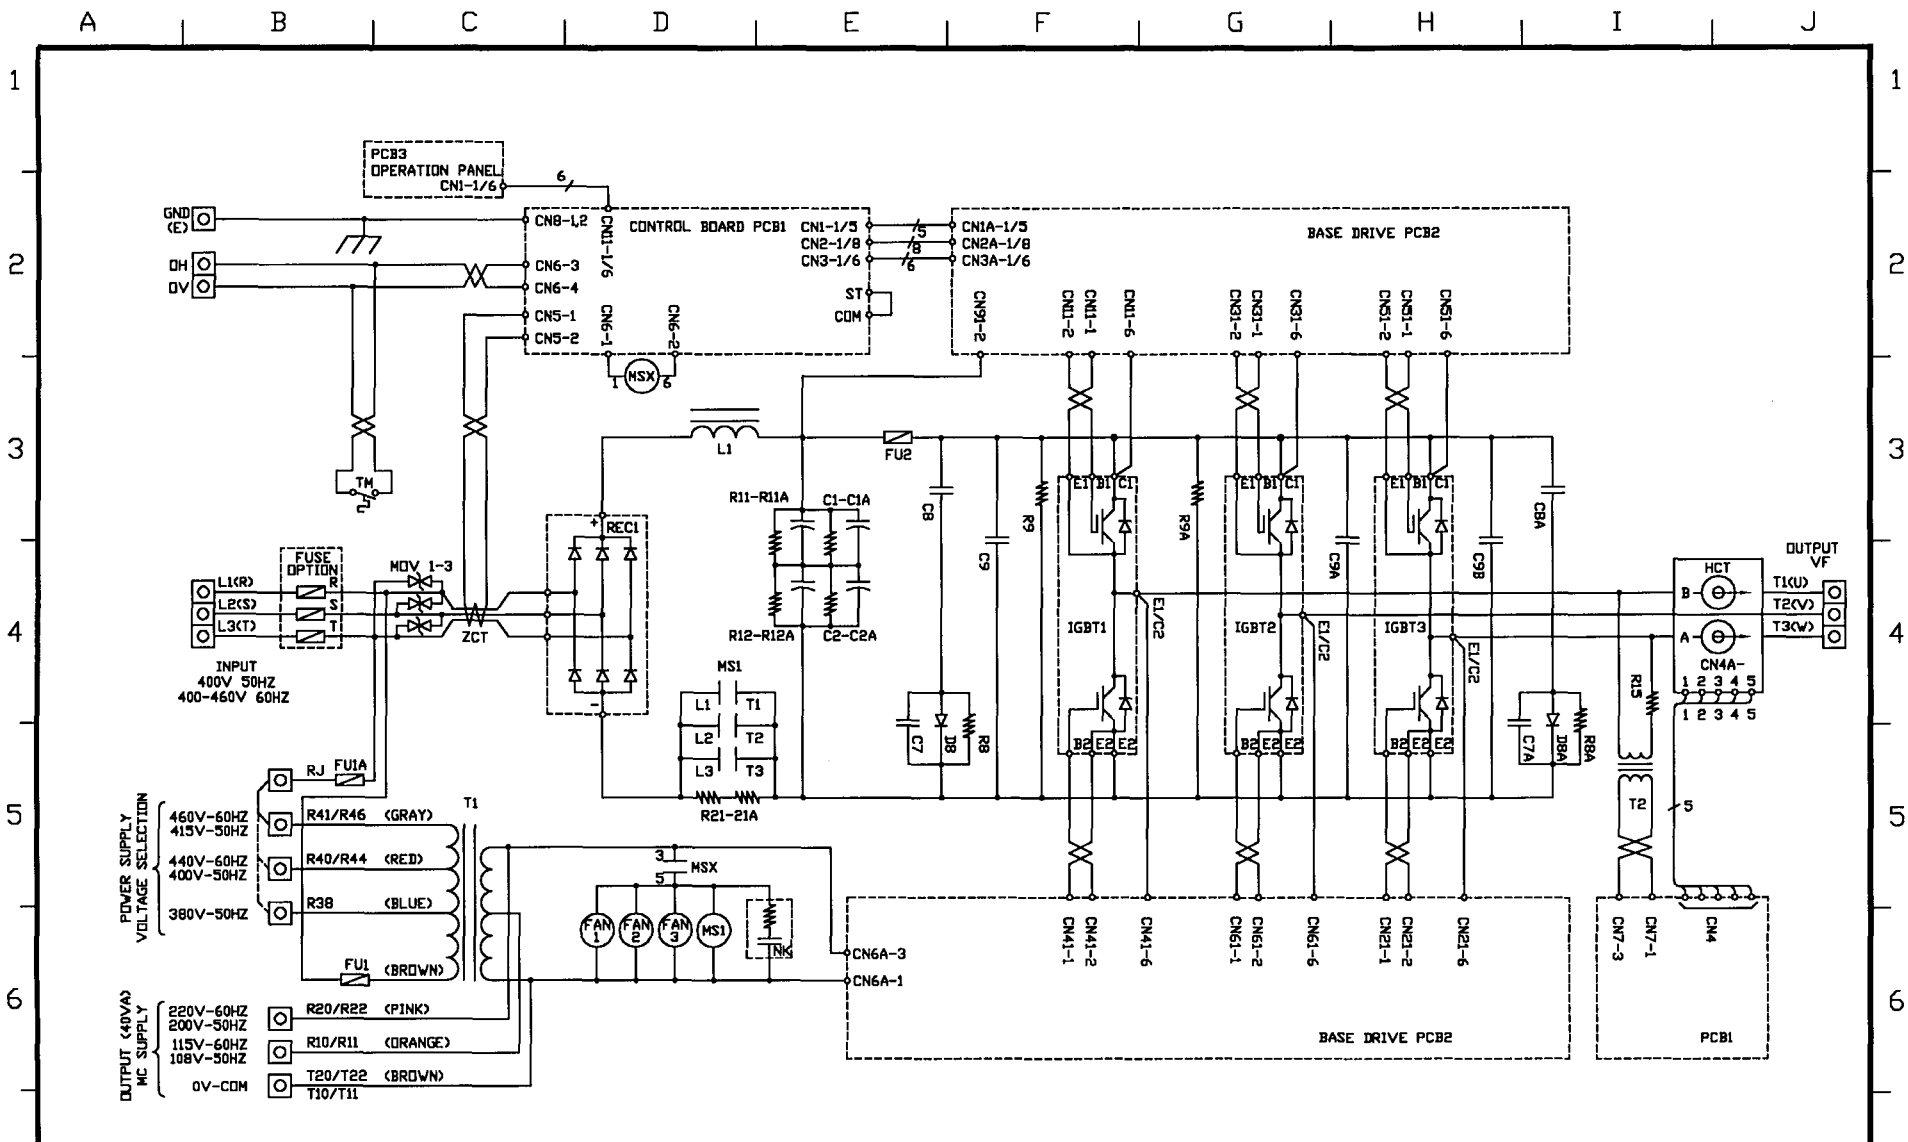

- POWER SUPPLY VOLTAGE SELECTION
- 460V-60HZ
 - 415V-50HZ
 - 440V-60HZ
 - 400V-50HZ
 - 380V-50HZ
- OUTPUT (40VA) MC SUPPLY
- 220V-60HZ
 - 200V-50HZ
 - 115V-60HZ
 - 108V-50HZ
 - 0V-COM

COMPONENTS

C1-C1A	400VDC 3300UF	MSX	24VDC 10A
C2-C2A	400VDC 3300UF	RECI	24VDC 10A
C3-C3A	400VDC 3300UF	R10-R11	20V 5W
C4-C4A	400VDC 3300UF	R12-R12A	20V 5W
C5-C5A	400VDC 3300UF	R20-R22	20V 5W
C6-C6A	400VDC 3300UF	R38	20V 5W
C7	400VDC 3300UF	R40-R44	20V 5W
C8	400VDC 3300UF	R41-R46	20V 5W
C9	400VDC 3300UF	R21-R21A	20V 5W
D1-D3	400VDC 3300UF	R22	20V 5W
D4	400VDC 3300UF	R41	20V 5W
D5	400VDC 3300UF	R42	20V 5W
D6	400VDC 3300UF	R43	20V 5W
D7	400VDC 3300UF	R44	20V 5W
D8	400VDC 3300UF	R45	20V 5W
D9	400VDC 3300UF	R46	20V 5W
D10	400VDC 3300UF	R47	20V 5W
D11	400VDC 3300UF	R48	20V 5W
D12	400VDC 3300UF	R49	20V 5W
D13	400VDC 3300UF	R50	20V 5W
D14	400VDC 3300UF	R51	20V 5W
D15	400VDC 3300UF	R52	20V 5W
D16	400VDC 3300UF	R53	20V 5W
D17	400VDC 3300UF	R54	20V 5W
D18	400VDC 3300UF	R55	20V 5W
D19	400VDC 3300UF	R56	20V 5W
D20	400VDC 3300UF	R57	20V 5W
D21	400VDC 3300UF	R58	20V 5W
D22	400VDC 3300UF	R59	20V 5W
D23	400VDC 3300UF	R60	20V 5W
D24	400VDC 3300UF	R61	20V 5W
D25	400VDC 3300UF	R62	20V 5W
D26	400VDC 3300UF	R63	20V 5W
D27	400VDC 3300UF	R64	20V 5W
D28	400VDC 3300UF	R65	20V 5W
D29	400VDC 3300UF	R66	20V 5W
D30	400VDC 3300UF	R67	20V 5W
D31	400VDC 3300UF	R68	20V 5W
D32	400VDC 3300UF	R69	20V 5W
D33	400VDC 3300UF	R70	20V 5W
D34	400VDC 3300UF	R71	20V 5W
D35	400VDC 3300UF	R72	20V 5W
D36	400VDC 3300UF	R73	20V 5W
D37	400VDC 3300UF	R74	20V 5W
D38	400VDC 3300UF	R75	20V 5W
D39	400VDC 3300UF	R76	20V 5W
D40	400VDC 3300UF	R77	20V 5W
D41	400VDC 3300UF	R78	20V 5W
D42	400VDC 3300UF	R79	20V 5W
D43	400VDC 3300UF	R80	20V 5W
D44	400VDC 3300UF	R81	20V 5W
D45	400VDC 3300UF	R82	20V 5W
D46	400VDC 3300UF	R83	20V 5W
D47	400VDC 3300UF	R84	20V 5W
D48	400VDC 3300UF	R85	20V 5W
D49	400VDC 3300UF	R86	20V 5W
D50	400VDC 3300UF	R87	20V 5W
D51	400VDC 3300UF	R88	20V 5W
D52	400VDC 3300UF	R89	20V 5W
D53	400VDC 3300UF	R90	20V 5W
D54	400VDC 3300UF	R91	20V 5W
D55	400VDC 3300UF	R92	20V 5W
D56	400VDC 3300UF	R93	20V 5W
D57	400VDC 3300UF	R94	20V 5W
D58	400VDC 3300UF	R95	20V 5W
D59	400VDC 3300UF	R96	20V 5W
D60	400VDC 3300UF	R97	20V 5W
D61	400VDC 3300UF	R98	20V 5W
D62	400VDC 3300UF	R99	20V 5W
D63	400VDC 3300UF	R100	20V 5W
D64	400VDC 3300UF	R101	20V 5W
D65	400VDC 3300UF	R102	20V 5W
D66	400VDC 3300UF	R103	20V 5W
D67	400VDC 3300UF	R104	20V 5W
D68	400VDC 3300UF	R105	20V 5W
D69	400VDC 3300UF	R106	20V 5W
D70	400VDC 3300UF	R107	20V 5W
D71	400VDC 3300UF	R108	20V 5W
D72	400VDC 3300UF	R109	20V 5W
D73	400VDC 3300UF	R110	20V 5W
D74	400VDC 3300UF	R111	20V 5W
D75	400VDC 3300UF	R112	20V 5W
D76	400VDC 3300UF	R113	20V 5W
D77	400VDC 3300UF	R114	20V 5W
D78	400VDC 3300UF	R115	20V 5W
D79	400VDC 3300UF	R116	20V 5W
D80	400VDC 3300UF	R117	20V 5W
D81	400VDC 3300UF	R118	20V 5W
D82	400VDC 3300UF	R119	20V 5W
D83	400VDC 3300UF	R120	20V 5W
D84	400VDC 3300UF	R121	20V 5W
D85	400VDC 3300UF	R122	20V 5W
D86	400VDC 3300UF	R123	20V 5W
D87	400VDC 3300UF	R124	20V 5W
D88	400VDC 3300UF	R125	20V 5W
D89	400VDC 3300UF	R126	20V 5W
D90	400VDC 3300UF	R127	20V 5W
D91	400VDC 3300UF	R128	20V 5W
D92	400VDC 3300UF	R129	20V 5W
D93	400VDC 3300UF	R130	20V 5W
D94	400VDC 3300UF	R131	20V 5W
D95	400VDC 3300UF	R132	20V 5W
D96	400VDC 3300UF	R133	20V 5W
D97	400VDC 3300UF	R134	20V 5W
D98	400VDC 3300UF	R135	20V 5W
D99	400VDC 3300UF	R136	20V 5W
D100	400VDC 3300UF	R137	20V 5W
D101	400VDC 3300UF	R138	20V 5W
D102	400VDC 3300UF	R139	20V 5W
D103	400VDC 3300UF	R140	20V 5W
D104	400VDC 3300UF	R141	20V 5W
D105	400VDC 3300UF	R142	20V 5W
D106	400VDC 3300UF	R143	20V 5W
D107	400VDC 3300UF	R144	20V 5W
D108	400VDC 3300UF	R145	20V 5W
D109	400VDC 3300UF	R146	20V 5W
D110	400VDC 3300UF	R147	20V 5W
D111	400VDC 3300UF	R148	20V 5W
D112	400VDC 3300UF	R149	20V 5W
D113	400VDC 3300UF	R150	20V 5W
D114	400VDC 3300UF	R151	20V 5W
D115	400VDC 3300UF	R152	20V 5W
D116	400VDC 3300UF	R153	20V 5W
D117	400VDC 3300UF	R154	20V 5W
D118	400VDC 3300UF	R155	20V 5W
D119	400VDC 3300UF	R156	20V 5W
D120	400VDC 3300UF	R157	20V 5W
D121	400VDC 3300UF	R158	20V 5W
D122	400VDC 3300UF	R159	20V 5W
D123	400VDC 3300UF	R160	20V 5W
D124	400VDC 3300UF	R161	20V 5W
D125	400VDC 3300UF	R162	20V 5W
D126	400VDC 3300UF	R163	20V 5W
D127	400VDC 3300UF	R164	20V 5W
D128	400VDC 3300UF	R165	20V 5W
D129	400VDC 3300UF	R166	20V 5W
D130	400VDC 3300UF	R167	20V 5W
D131	400VDC 3300UF	R168	20V 5W
D132	400VDC 3300UF	R169	20V 5W
D133	400VDC 3300UF	R170	20V 5W
D134	400VDC 3300UF	R171	20V 5W
D135	400VDC 3300UF	R172	20V 5W
D136	400VDC 3300UF	R173	20V 5W
D137	400VDC 3300UF	R174	20V 5W
D138	400VDC 3300UF	R175	20V 5W
D139	400VDC 3300UF	R176	20V 5W
D140	400VDC 3300UF	R177	20V 5W
D141	400VDC 3300UF	R178	20V 5W
D142	400VDC 3300UF	R179	20V 5W
D143	400VDC 3300UF	R180	20V 5W
D144	400VDC 3300UF	R181	20V 5W
D145	400VDC 3300UF	R182	20V 5W
D146	400VDC 3300UF	R183	20V 5W
D147	400VDC 3300UF	R184	20V 5W
D148	400VDC 3300UF	R185	20V 5W
D149	400VDC 3300UF	R186	20V 5W
D150	400VDC 3300UF	R187	20V 5W
D151	400VDC 3300UF	R188	20V 5W
D152	400VDC 3300UF	R189	20V 5W
D153	400VDC 3300UF	R190	20V 5W
D154	400VDC 3300UF	R191	20V 5W
D155	400VDC 3300UF	R192	20V 5W
D156	400VDC 3300UF	R193	20V 5W
D157	400VDC 3300UF	R194	20V 5W
D158	400VDC 3300UF	R195	20V 5W
D159	400VDC 3300UF	R196	20V 5W
D160	400VDC 3300UF	R197	20V 5W
D161	400VDC 3300UF	R198	20V 5W
D162	400VDC 3300UF	R199	20V 5W
D163	400VDC 3300UF	R200	20V 5W
D164	400VDC 3300UF	R201	20V 5W
D165	400VDC 3300UF	R202	20V 5W
D166	400VDC 3300UF	R203	20V 5W
D167	400VDC 3300UF	R204	20V 5W
D168	400VDC 3300UF	R205	20V 5W
D169	400VDC 3300UF	R206	20V 5W
D170	400VDC 3300UF	R207	20V 5W
D171	400VDC 3300UF	R208	20V 5W
D172	400VDC 3300UF	R209	20V 5W
D173	400VDC 3300UF	R210	20V 5W
D174	400VDC 3300UF	R211	20V 5W
D175	400VDC 3300UF	R212	20V 5W
D176	400VDC 3300UF	R213	20V 5W
D177	400VDC 3300UF	R214	20V 5W
D178	400VDC 3300UF	R215	20V 5W
D179	400VDC 3300UF	R216	20V 5W
D180	400VDC 3300UF	R217	20V 5W
D181	400VDC 3300UF	R218	20V 5W
D182	400VDC 3300UF	R219	20V 5W
D183	400VDC 3300UF	R220	20V 5W
D184	400VDC 3300UF	R221	20V 5W
D185	400VDC 3300UF	R222	20V 5W
D186	400VDC 3300UF	R223	20V 5W
D187	400VDC 3300UF	R224	20V 5W
D188	400VDC 3300UF	R225	20V 5W
D189	400VDC 3300UF	R226	20V 5W
D190	400VDC 3300UF	R227	20V 5W
D191	400VDC 3300UF	R228	20V 5W
D192	400VDC 3300UF	R229	20V 5W
D193	400VDC 3300UF	R230	20V 5W
D194	400VDC 3300UF	R231	20V 5W
D195	400VDC 3300UF	R232	20V 5W
D196	400VDC 3300UF	R233	20V 5W
D197	400VDC 3300UF	R234	20V 5W
D198	400VDC 3300UF	R235	20V 5W
D199	400VDC 3300UF	R236	20V 5W
D200	400VDC 3300UF	R237	20V 5W
D201	400VDC 3300UF	R238	20V 5W
D202	400VDC 3300UF	R239	20V 5W
D203	400VDC 3300UF	R240	20V 5W
D204	400VDC 3300UF	R241	20V 5W
D205	400VDC 3300UF	R242	20V 5W
D206	400VDC 3300UF	R243	20V 5W
D207	400VDC 3300UF	R244	20V 5W
D208	400VDC 3300UF	R245	20V 5W
D209	400VDC 3300UF	R246	20V 5W
D210	400VDC 3300UF	R247	20V 5W
D211	400VDC 3300UF	R248	20V 5W
D212	400VDC 3300UF	R249	20V 5W
D213	400VDC 3300UF	R250	20V 5W
D214	400VDC 3300UF	R251	20V 5W
D215	400VDC 3300UF	R252	20V 5W
D216	400VDC 3		

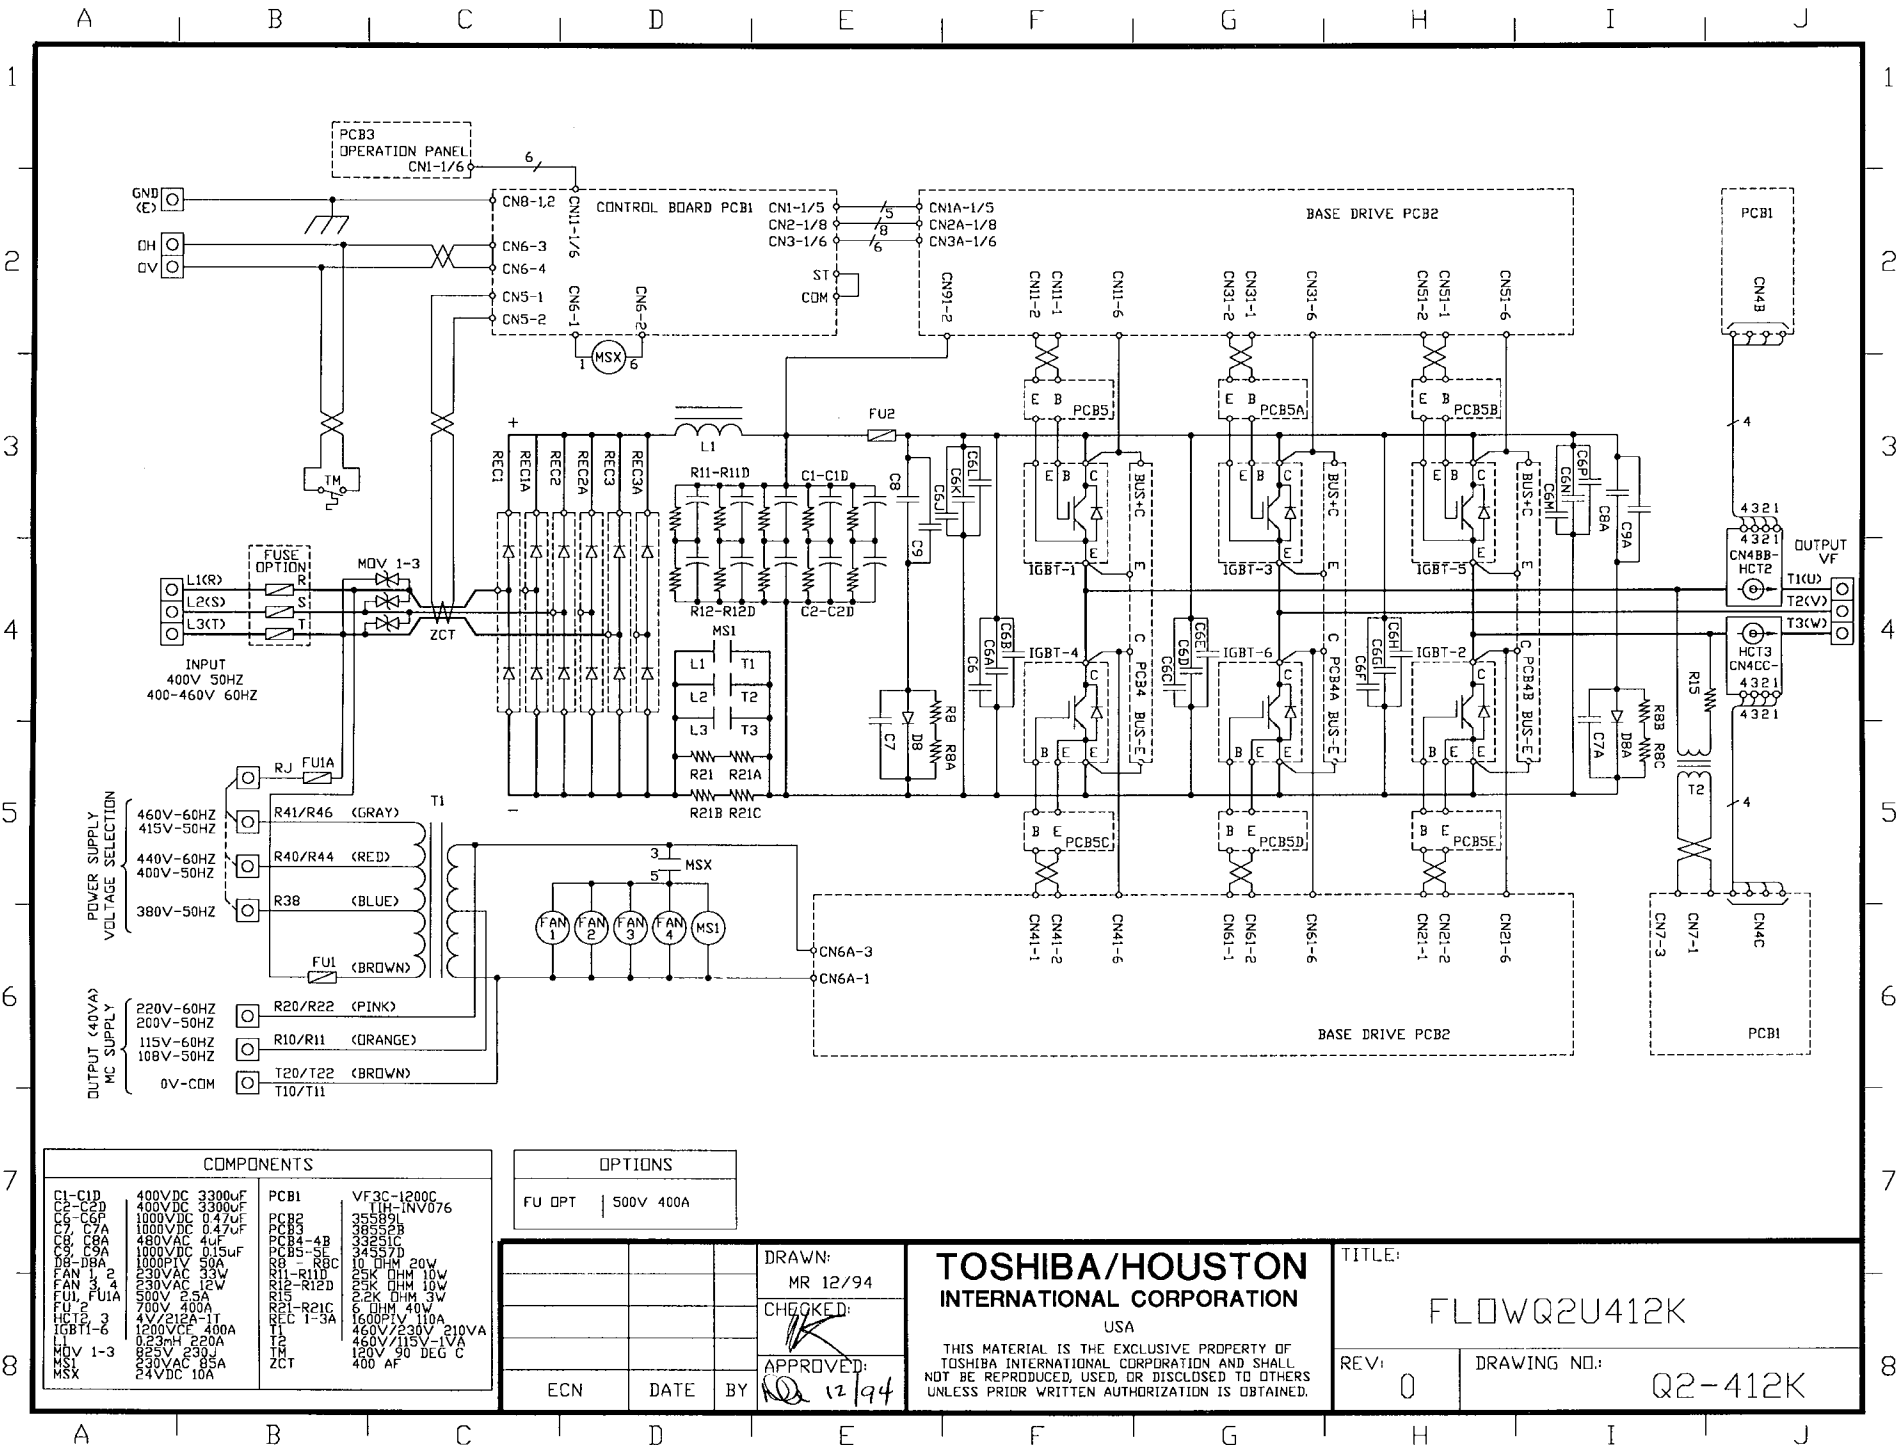

- POWER SUPPLY VOLTAGE SELECTION
- 460V-60HZ
 - 415V-50HZ
 - 440V-60HZ
 - 400V-50HZ
 - 380V-50HZ
- OUTPUT (400V) AC SUPPLY
- 220V-60HZ
 - 200V-50HZ
 - 115V-60HZ
 - 108V-50HZ
 - 0V-COM


COMPONENTS	
C1-C1D	400VDC 3300uF
C2-C2D	400VDC 3300uF
C3	1000VDC 0.47uF
C4	1000VDC 0.47uF
C5A	480VAC 4uF
C5B	1000VDC 0.15uF
C6	500V 25A
FAN 1-4	230VAC 33W
FAN 3-4	230VAC 12W
FU1	700V 400A
FU2	4V/212A-11
HCT2	1200VDC 400A
IGBT-6	625H 220A
MSX	825V 230A
MSX	24VDC 10A
PCB1	VF3C-1200C
PCB2	TH-INV076
PCB3	35589
PCB4-4B	35589
PCB5-3	34257C
R8	10 OHM 20W
R11-R11D	25K OHM 10W
R12-R12D	25K OHM 10W
R21-R21C	32K OHM 3W
R21-R21C	6 OHM 40W
REC 1-3A	1600PIV 10A
T1	460V/230V 210VA
T2	460V/115V-1VA
T3	120V 90 DEG C
ZCT	400 AF

OPTIONS	
FU OPT	500V 400A

ECN	DATE	BY
		12/94

TOSHIBA/HOUSTON INTERNATIONAL CORPORATION
 USA
 THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF TOSHIBA INTERNATIONAL CORPORATION AND SHALL NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE: FLOWQ2U412K	
REV: 0	DRAWING NO.: Q2-412K

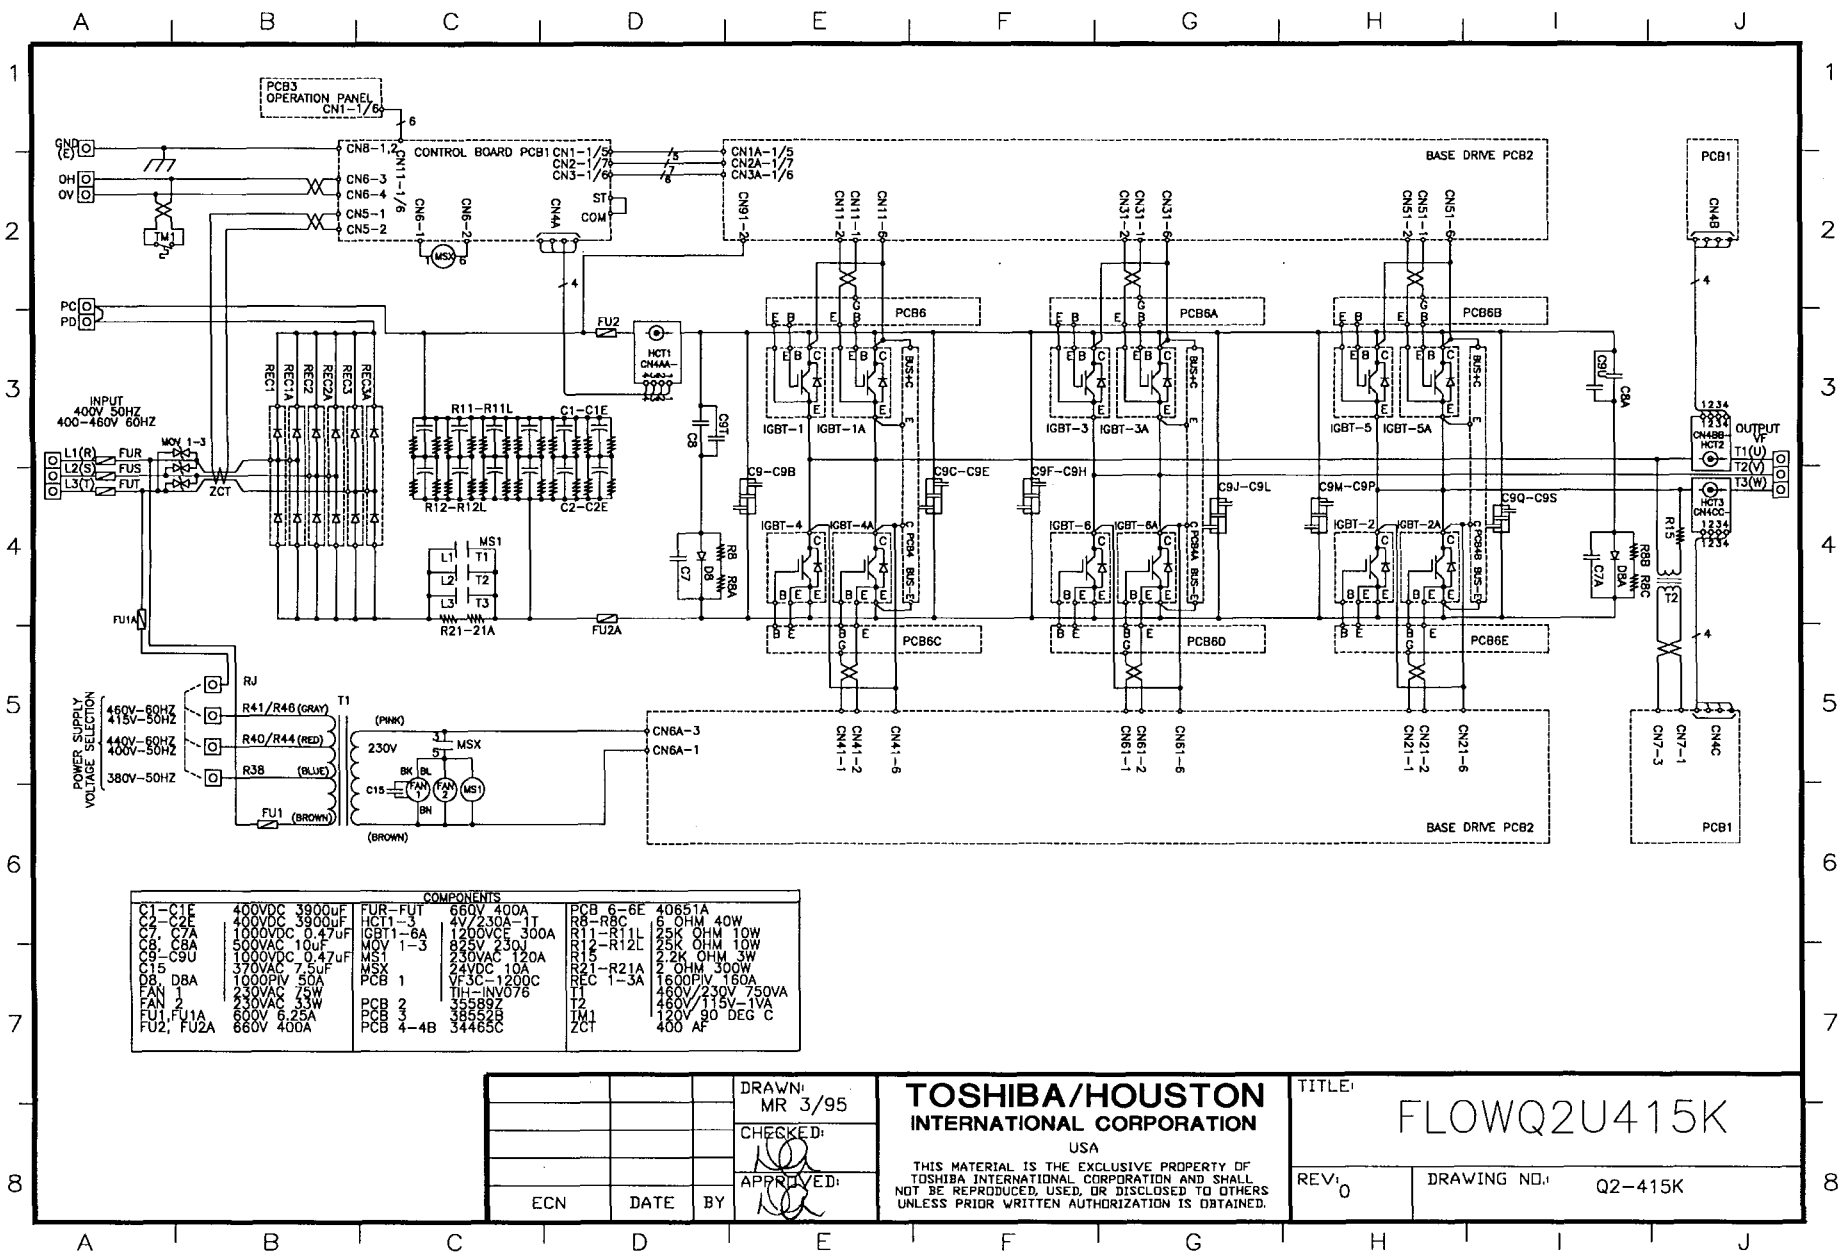


COMPONENTS

C1-C1E	400VDC 3900uF	FUR-FU1	660V 400A	PCB 6-6E	40651A
C2-C2E	400VDC 3900uF	ICT1-3	4V/230A-1T	R8-R8C	6 OHM 40W
C7, C7A	1000VDC 0.47uF	IGBT1-6A	1200VCE 300A	R11-R11L	25K OHM 10W
C9	500VAC 10uF	MOV 1-3	85V 250J	R12-R12L	25K OHM 10W
C9B-C9U	1000VDC 0.47uF	MS1	930VAC 120A	R15	2.2K OHM 3W
C15	370VAC 7.5uF	MSX	24VDC 10A	R21-R21A	2 OHM 300W
DB	1000P/V 50A	PCB 1	VF3C-1200C	REC 1-3A	1600P/V 150A
FAN 1	230VAC 53W	PCB 2	TH-INV075	T1	460V/230V 750VA
FAN 2	230VAC 53W	PCB 3	35589Z	T2	460V/115V-1VA
FU1, FU1A	600V 6.25A	PCB 4	38552B	T3	120V 90 DEG C
FU2, FU2A	660V 400A	PCB 4-4B	34465C	ZCT	400 AF

ECN	DATE	BY	APPROVED:
			<i>[Signature]</i>

DRAWN: MR 3/95
CHECKED:
APPROVED:
TOSHIBA/HOUSTON INTERNATIONAL CORPORATION
 USA
 THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF TOSHIBA INTERNATIONAL CORPORATION AND SHALL NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE: FLOWQ2U415K
REV: 0
DRAWING NO.: Q2-415K

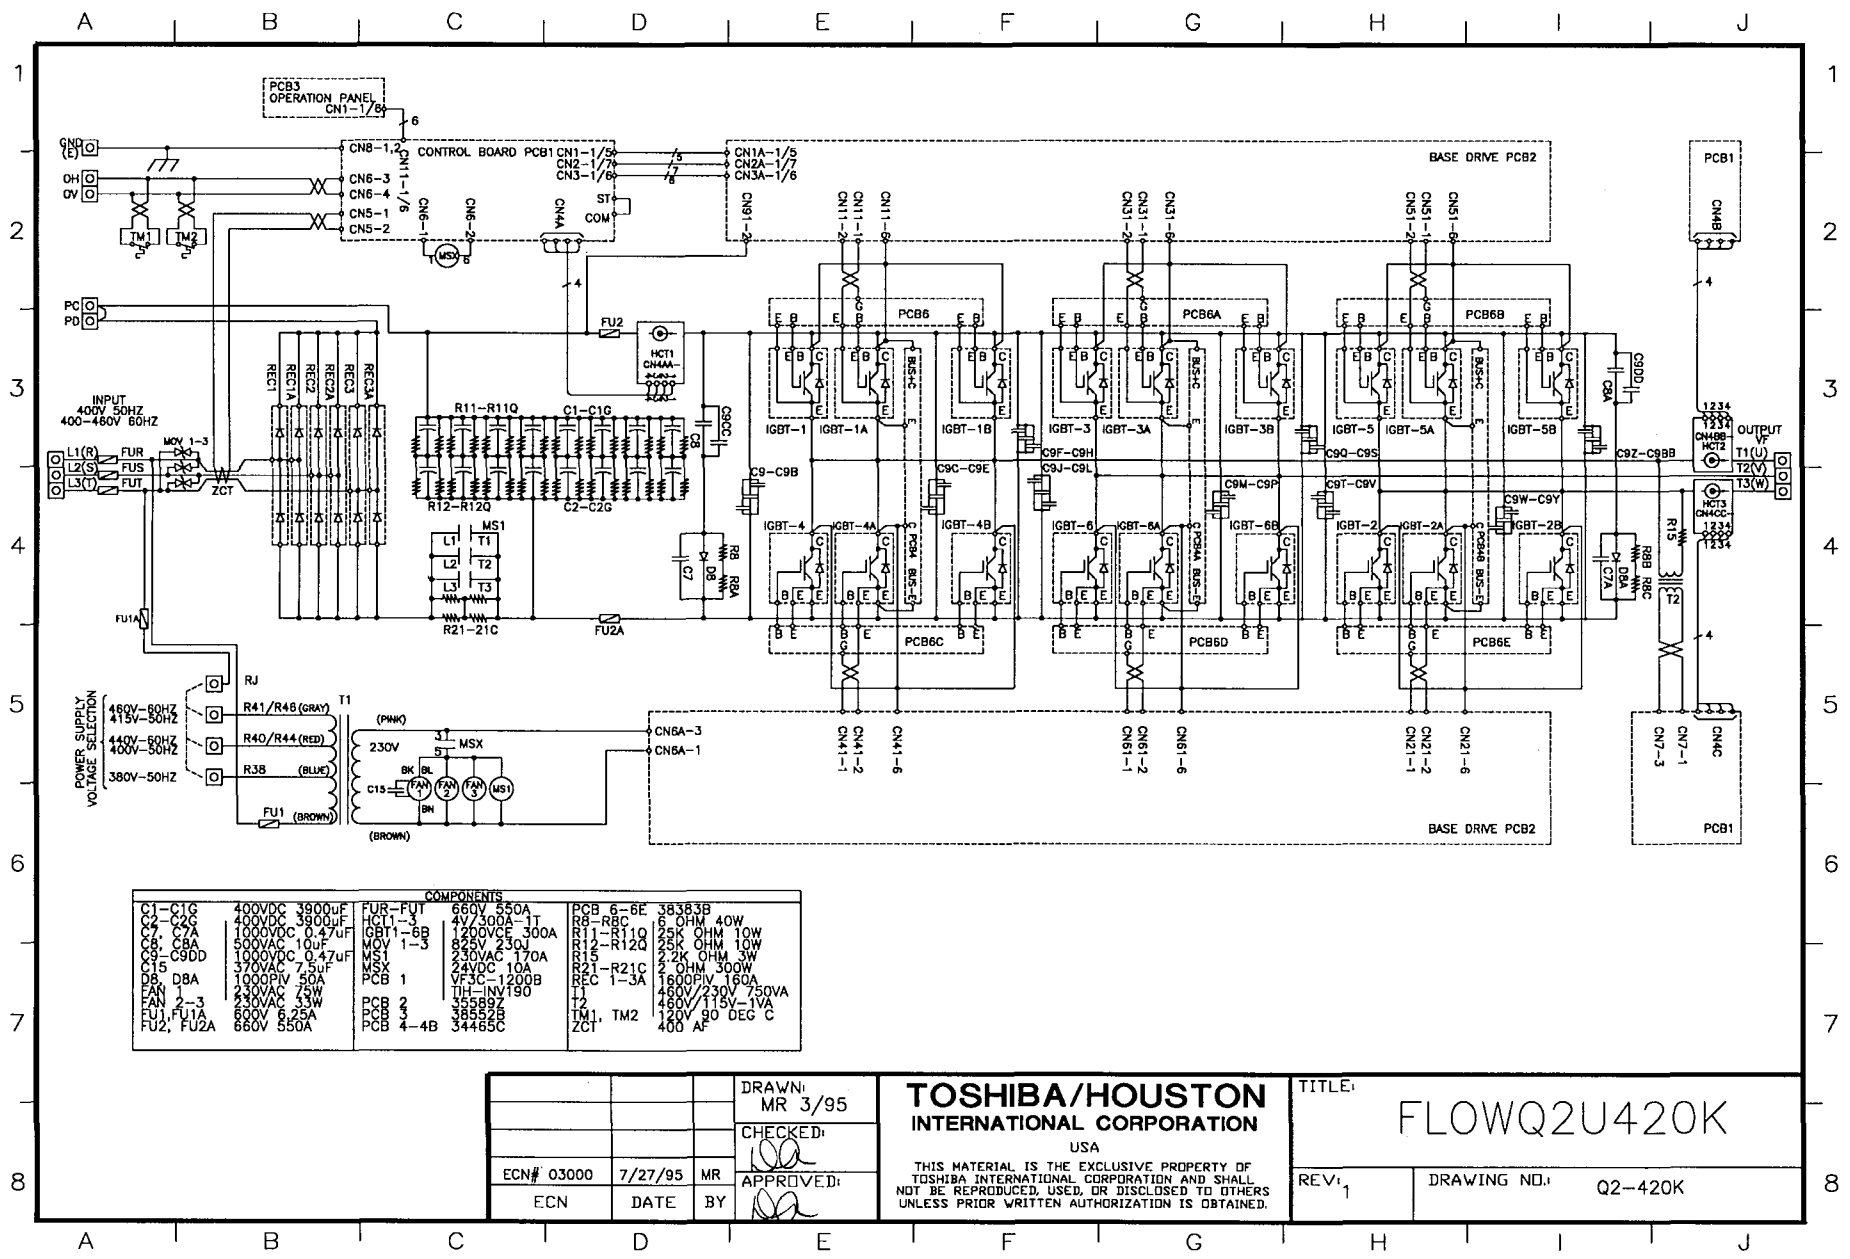

COMPONENTS

C1-C16	400VDC 3900µF	FUR-FU1	660V 550A	PCB 6-6E	38383B
C4-C7A	400VDC 3900µF	HCT1-3	4V 300A-1T	R8-R8C	6 5 OHM 40W
C8-C8A	1000VDC 0.47µF	IGBT-1-6B	120VDC 300A	R11-R110	25K OHM 10W
C9-C9DD	500VAC 10µF	MOV 1-3	825V 230V	R12-R120	25K OHM 10W
C15	170VDC 0.47µF	MS1	230VAC 170A	R21-R21C	2 2K OHM 3W
D1	170VAC 7.5µF	PCB 1	24VDC 10A	REC 1-3A	1600PIV 100A
D2	1000PIV 50A	PCB 2	VF3C-1200B	T1	460V 230V 750VA
FAN 1-3	230VAC 75W	PCB 3	TH-INV190	T2	460V 115V-1VA
FAN 2-3	230VAC 33W	PCB 4	35589Z	TM1, TM2	120V 90 DEG C
FU1, FU1A	860V 6.5A	PCB 5	34485C	ZC1	400 AF
FU2, FU2A	860V 550A				

ECN# 03000	7/27/95	MR	DRAWN: MR 3/95
ECN	DATE	BY	CHECKED:
			APPROVED:

TOSHIBA/HOUSTON
INTERNATIONAL CORPORATION
 USA

THIS MATERIAL IS THE EXCLUSIVE PROPERTY OF TOSHIBA INTERNATIONAL CORPORATION AND SHALL NOT BE REPRODUCED, USED, OR DISCLOSED TO OTHERS UNLESS PRIOR WRITTEN AUTHORIZATION IS OBTAINED.

TITLE: **FLOWQ2U420K**

REV: 1 DRAWING NO.: Q2-420K

TOSHIBA

TOSHIBA INTERNATIONAL CORPORATION

INDUSTRIAL DIVISION

13131 West Little York Rd., Houston Texas 77041

Tel: [713] 466-0277 Fax: [713] 466-8773